



# MARKANT

 

 
## Matrix Pro Single Manual

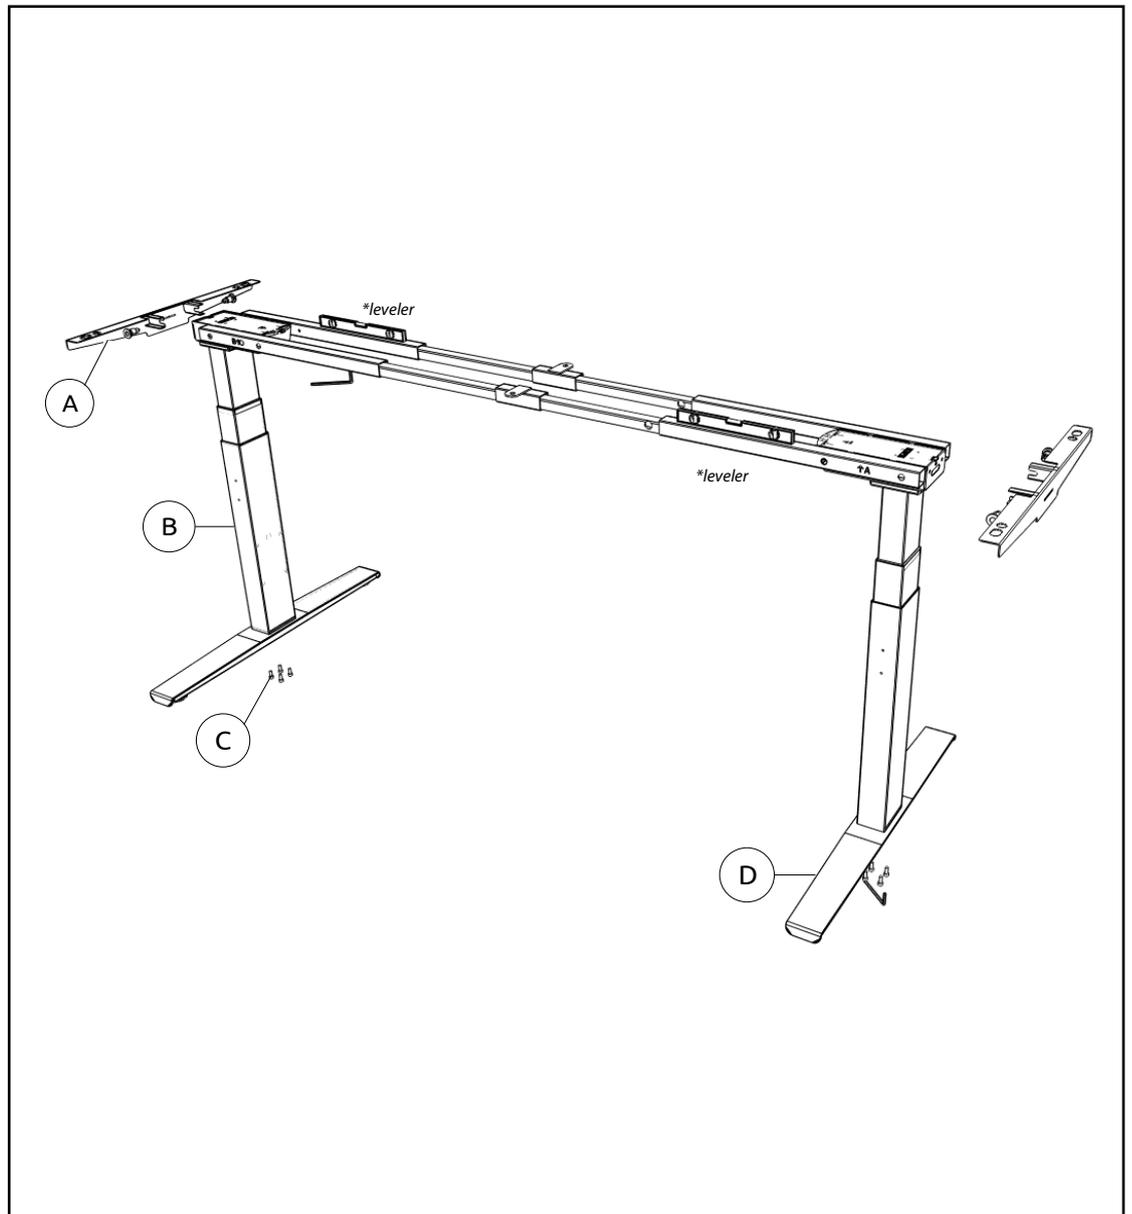


**1** Frame

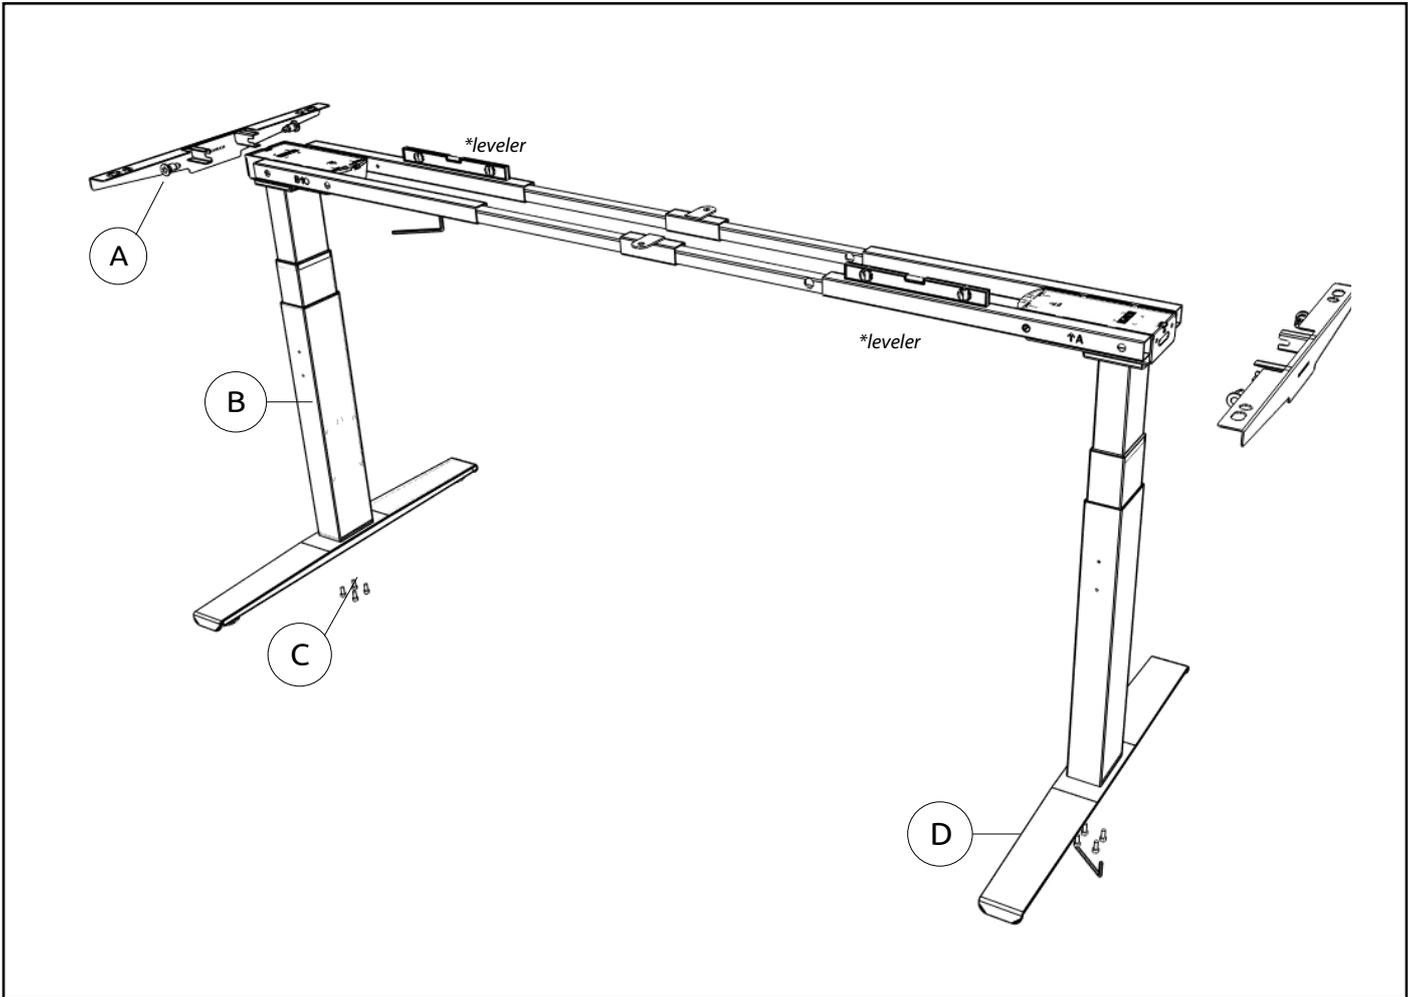


MAIN COMPONENTS
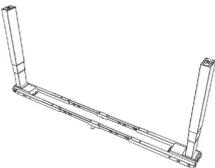
<p><b>A</b></p>  <p>Component A (x2)</p>	<p><b>B</b></p>  <p>Component B (x1)</p>	<p><b>C</b></p>  <p>Component C (x8) M6 x 15 screw</p>	<p><b>D</b></p>  <p>Component D (x2)</p>	<p><b>E</b></p>  <p><i>*only for table top</i></p> <p>Component E (x2) JCH Screw</p>
---	---	---	--	---

TOOLS & MANPOWER

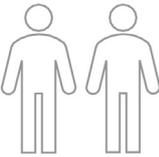
 <p>Manpower x2</p>	 <p>OPTION 1: Power Tool x2</p>	 <p>OPTION 2: Allen Key x2</p>	 <p>Leveler</p>
--	--	--	--

1

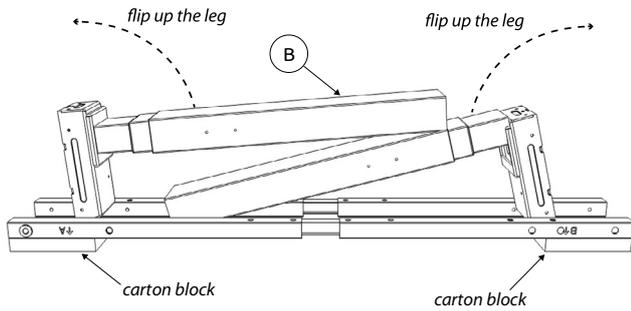


The frame (B) is pre-assembled. Do not remove the carton box until the leg is flip up. This is to prevent any further damages.

2

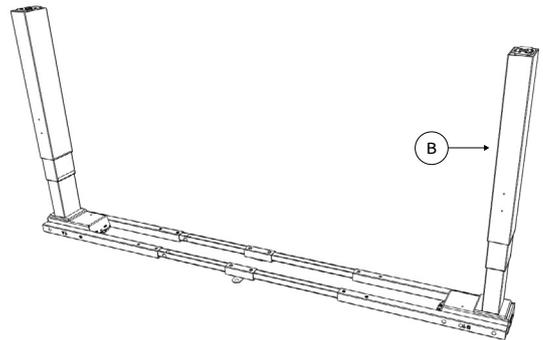


Raise the legs, slide the frame outwards to fit desired size and fix it with the screw that are already pre-mounted in the frame.

3

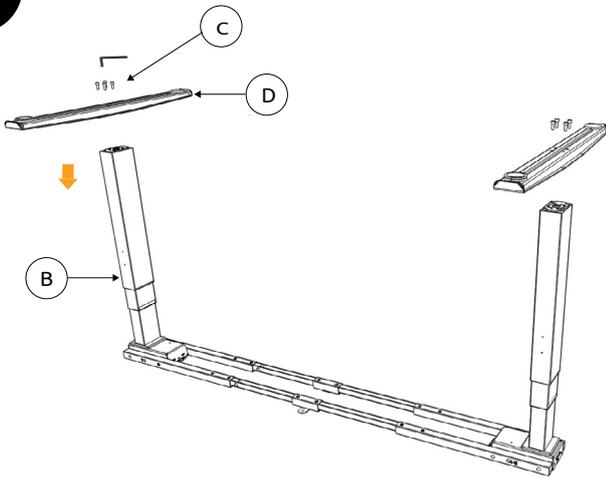


Attach D to B and tighten it with screw (C) using Allen key. Repeat this step on the other side of the leg.

4

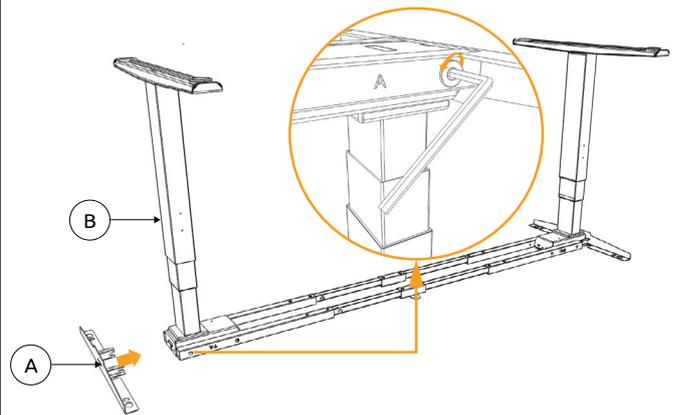


Attach A to B and secure the screw using Allen key. Repeat this step on the other side of the leg.

5

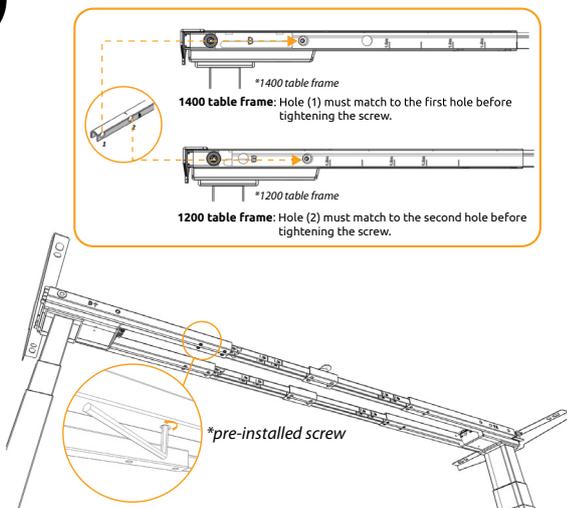


Adjust the table length and secure the pre-installed screw using Allen key.

6

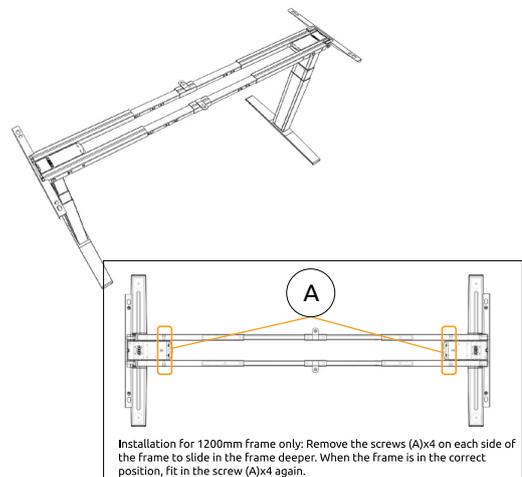


The installation is completed.


2 Table Top

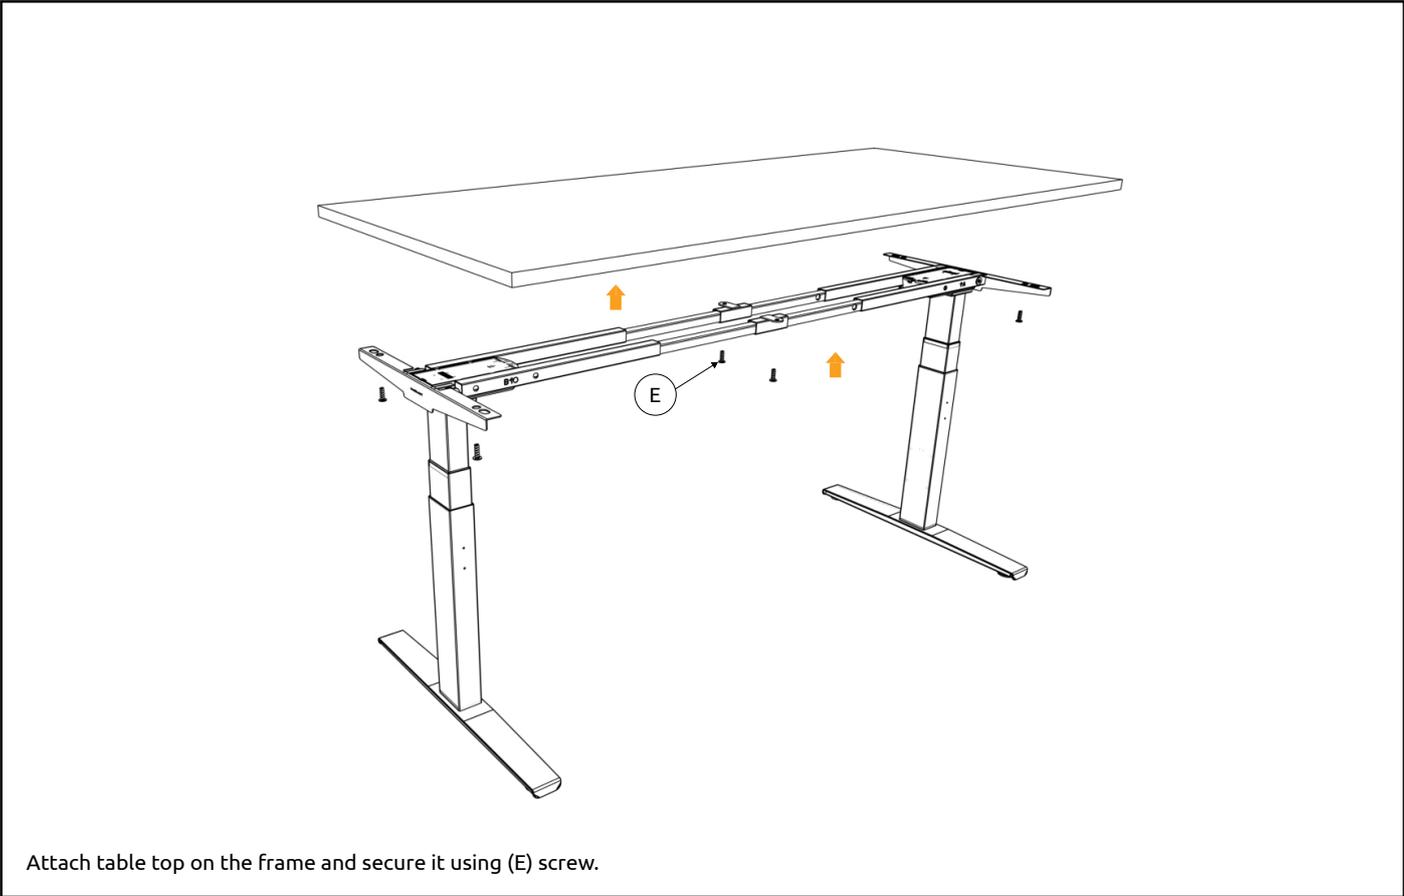

**3** **Accessories**

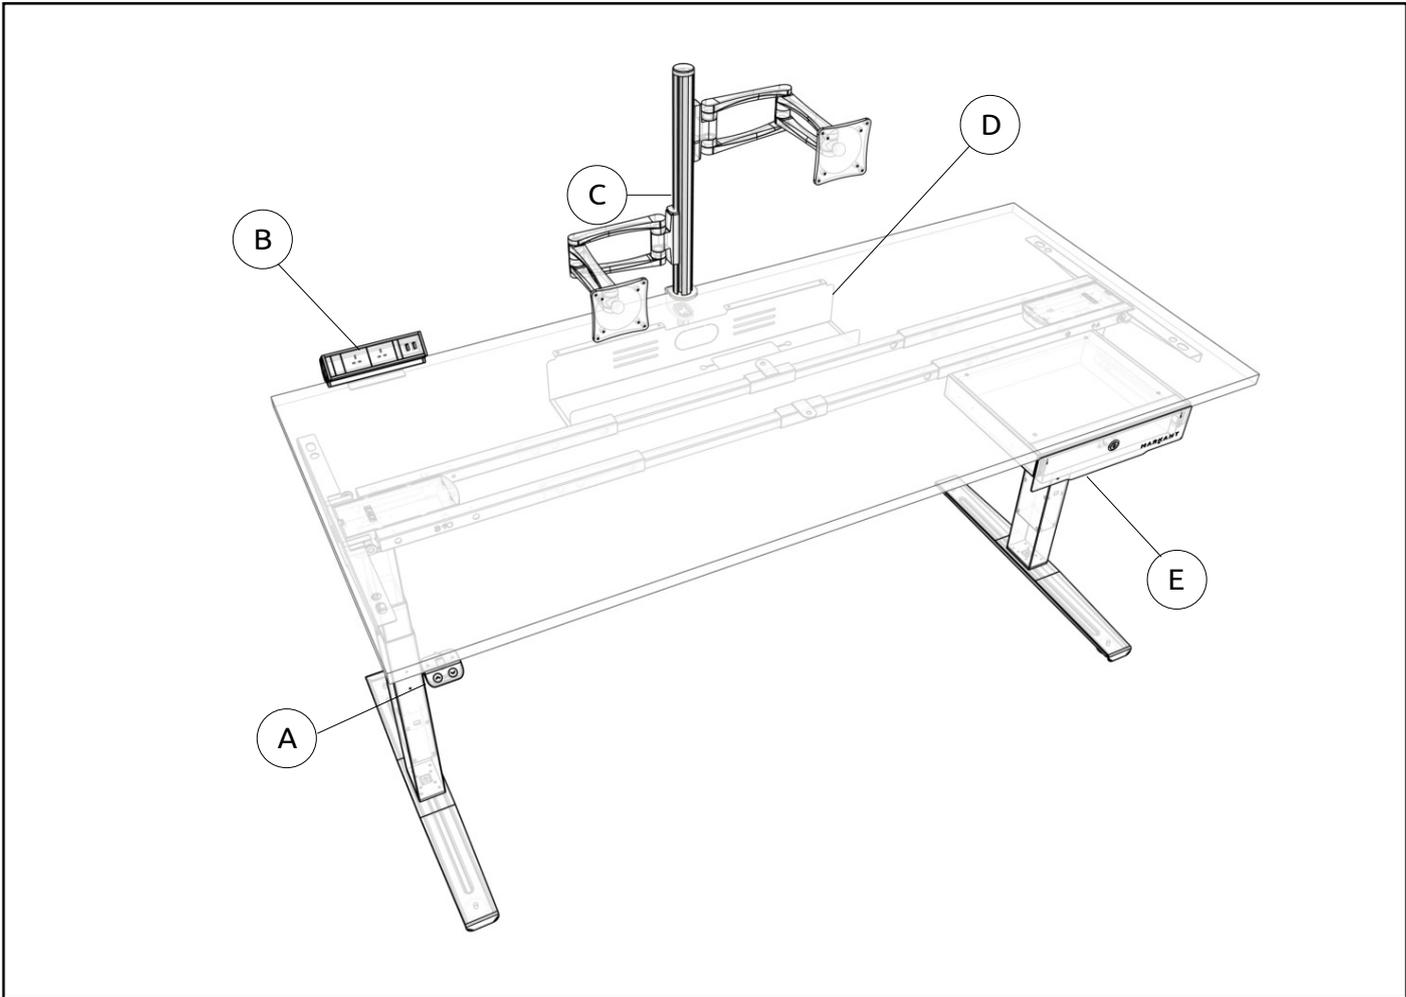


**MAIN COMPONENTS**

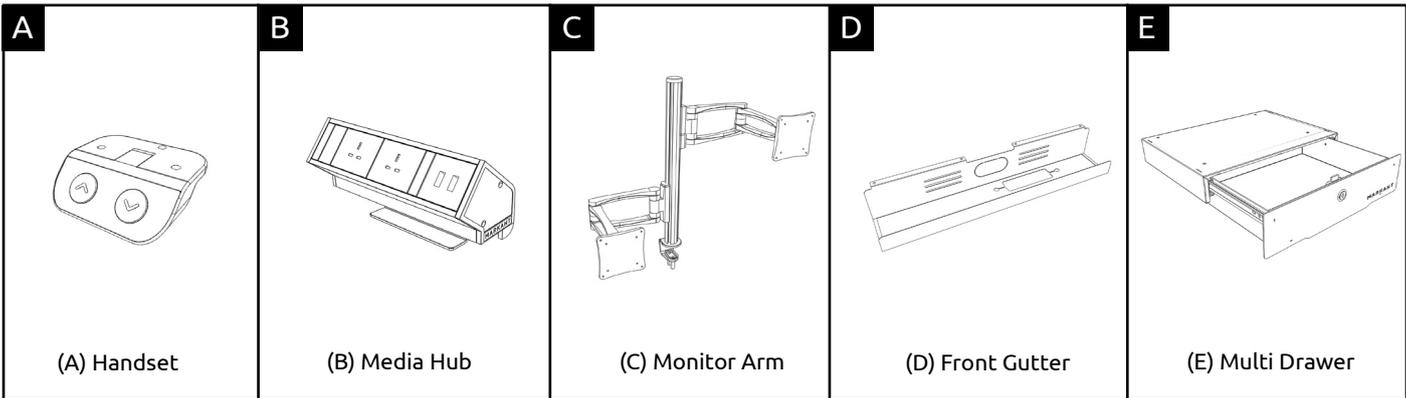

**TOOLS & MANPOWER**




1

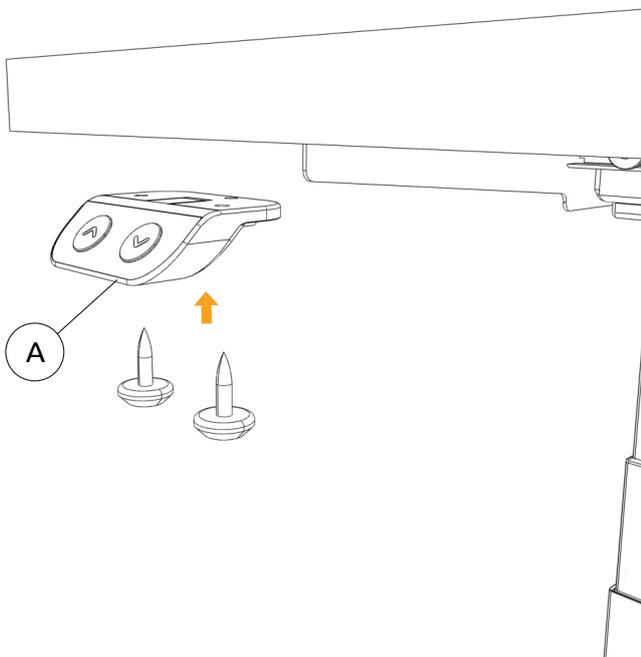


Attach (A) Handset below the table top using a screw.

2

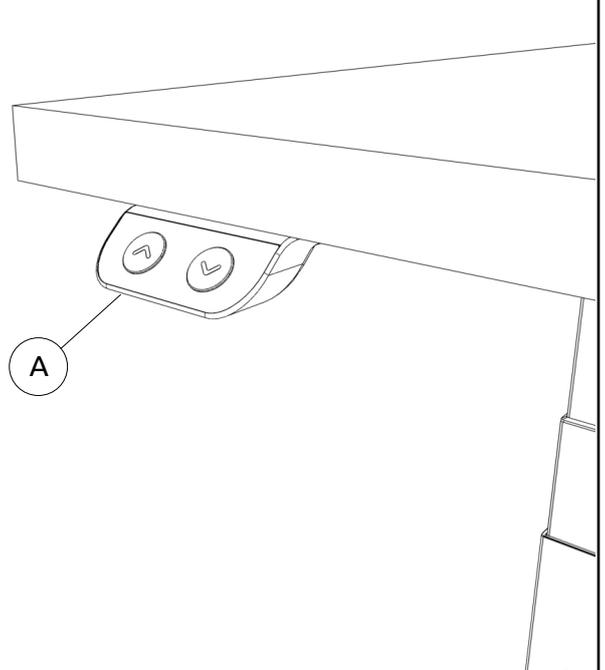


The installation for (A) Handset is completed.

3






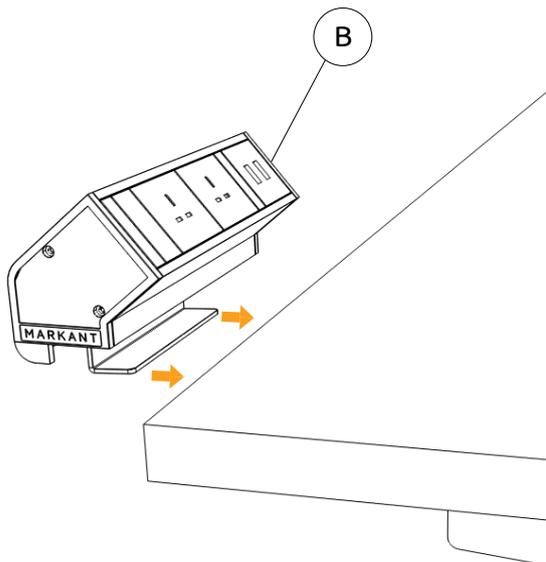


Attach (B) Media Hub on the table top.


4

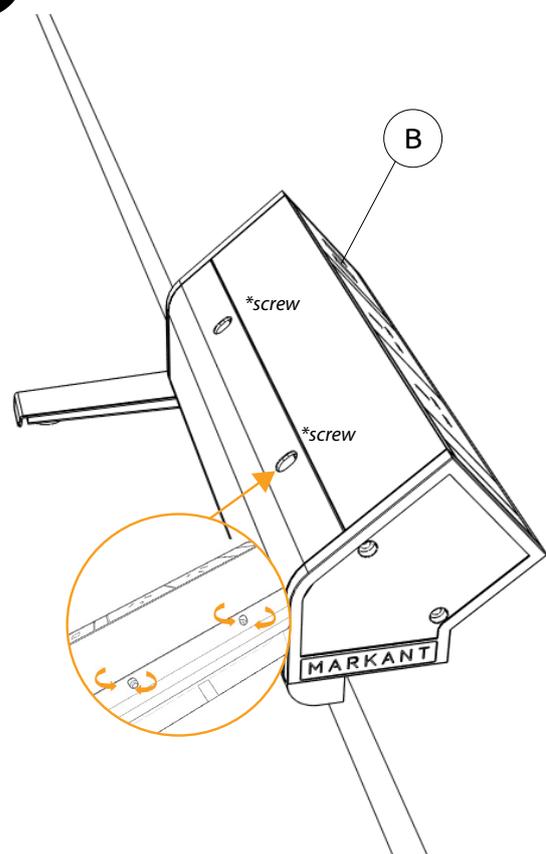


Tighten the screw on top of (B) Media Hub. The installation for Media Hub is completed.

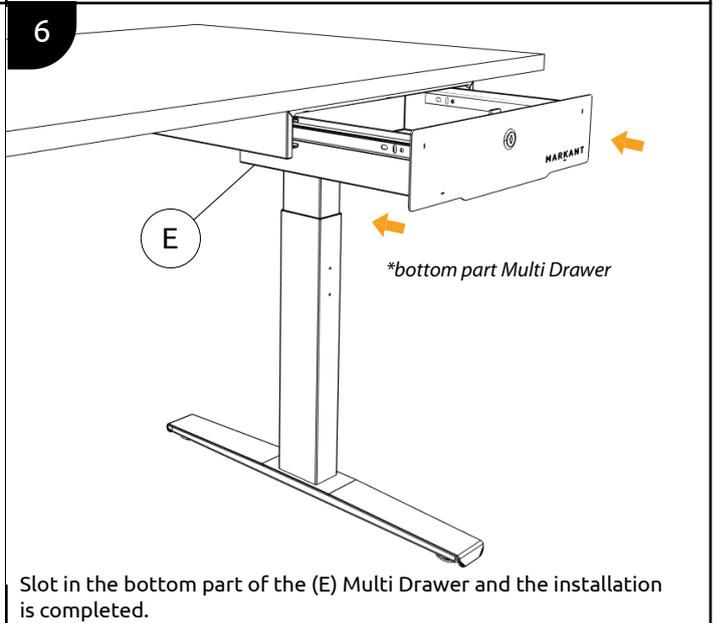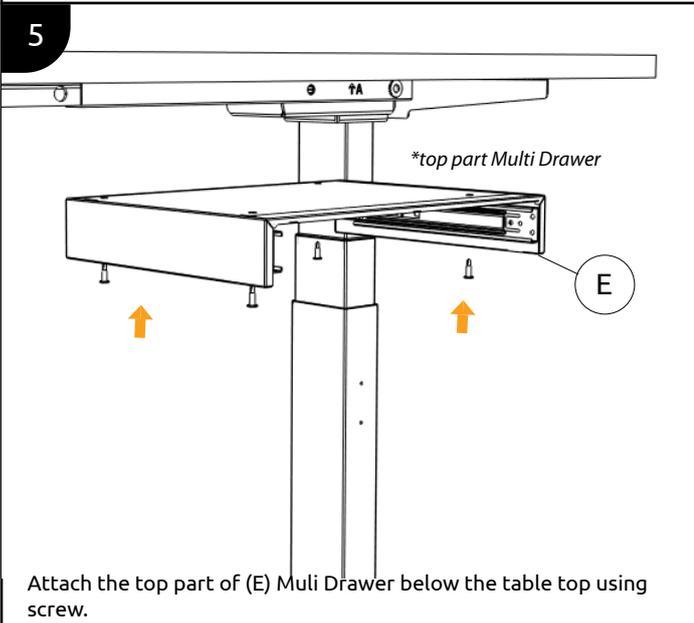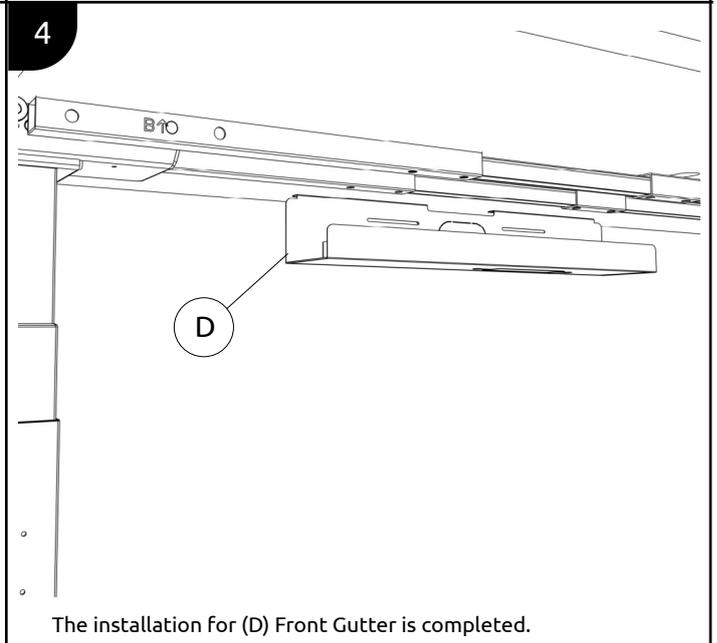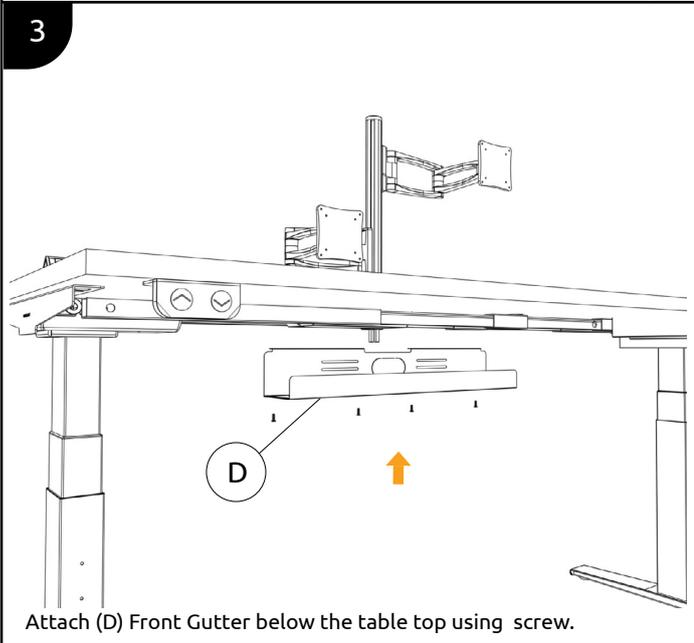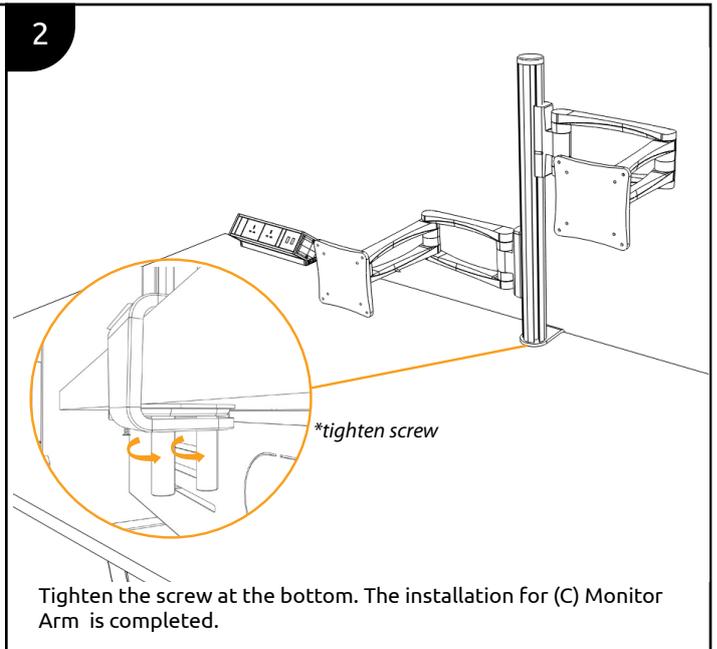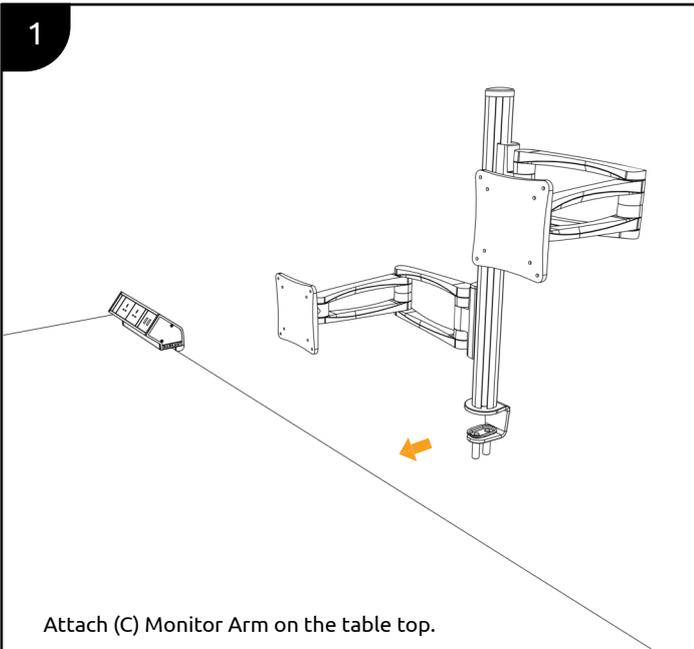


4 Control Box

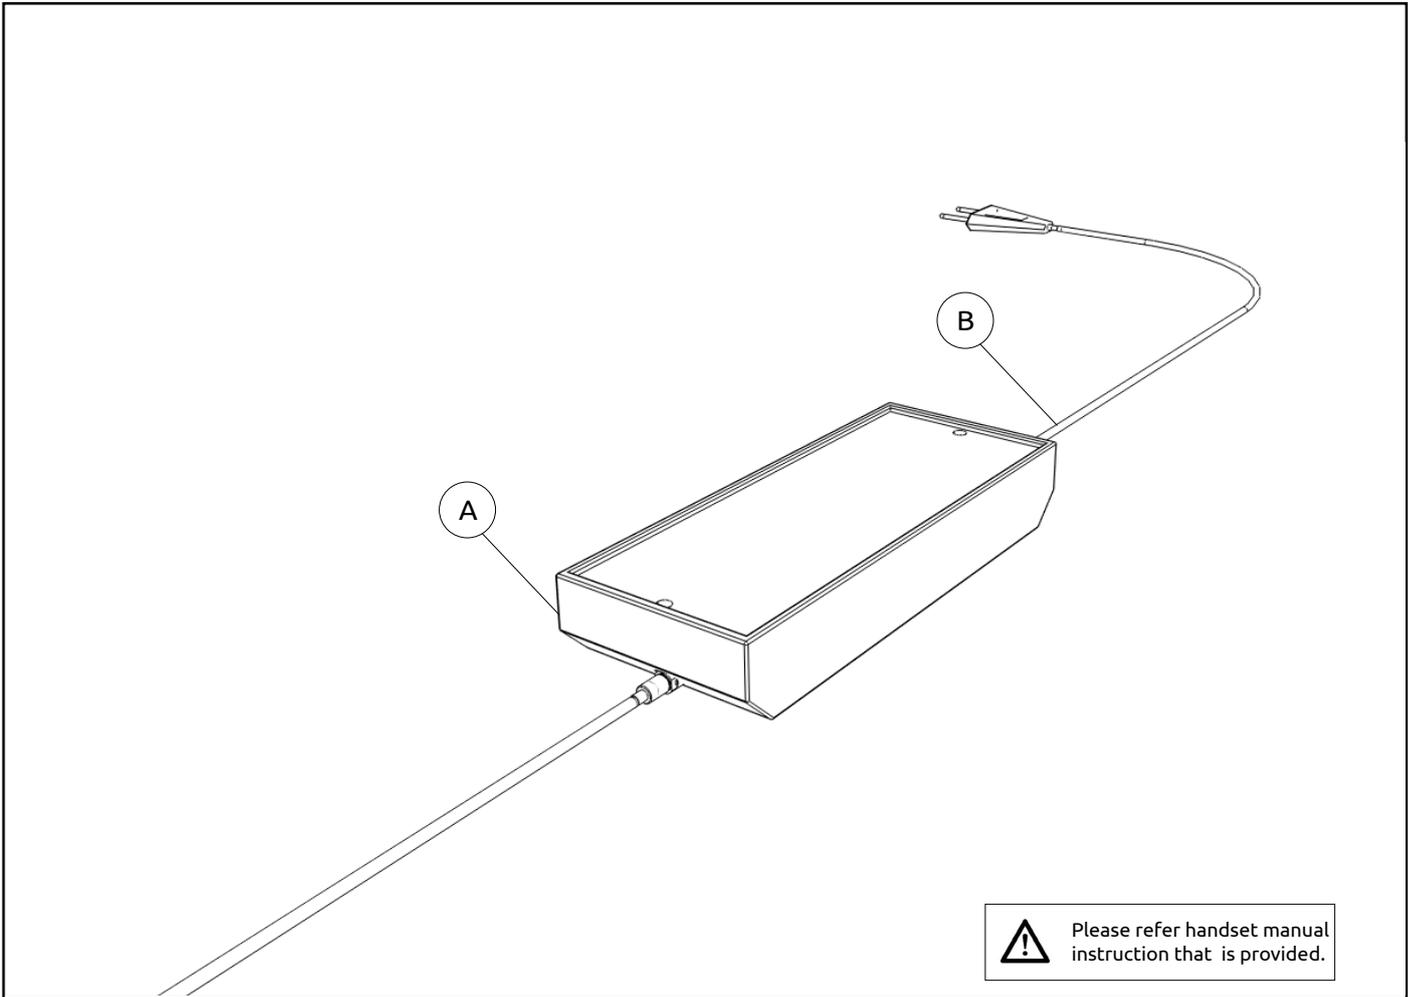


MAIN COMPONENTS

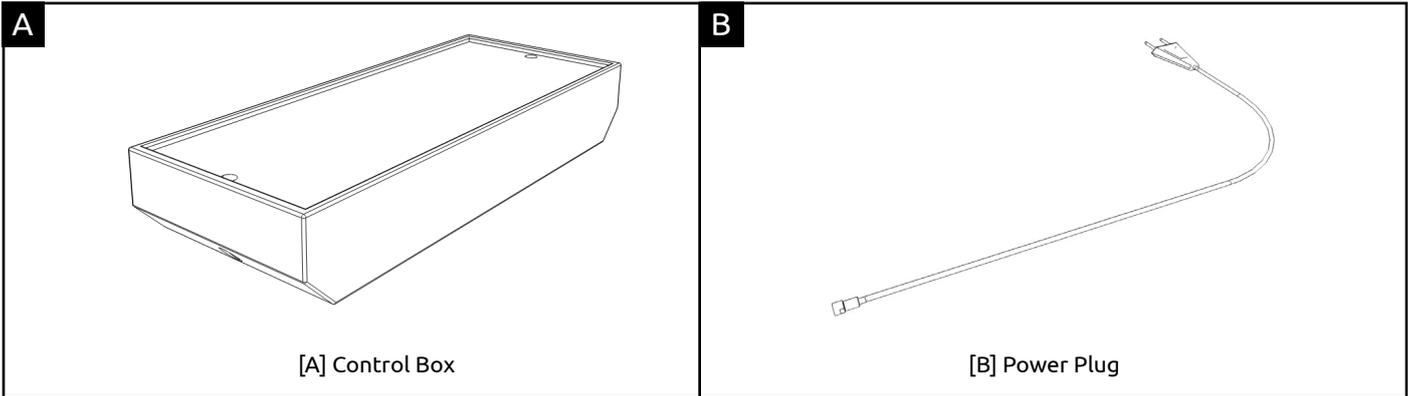




TOOLS & MANPOWER

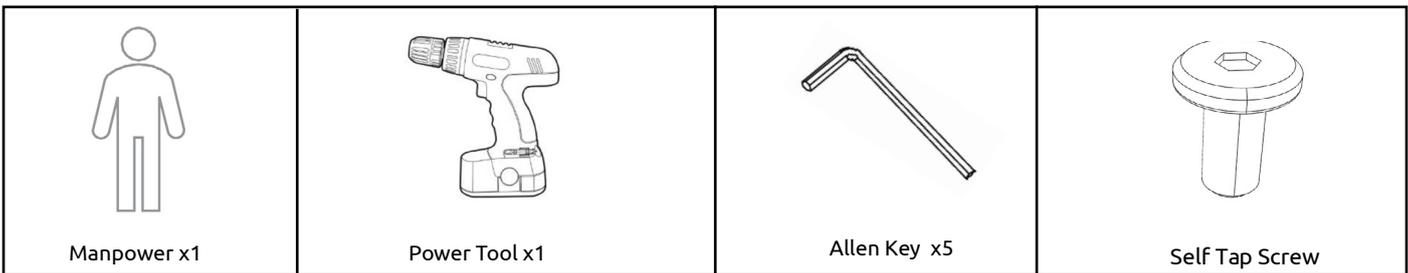

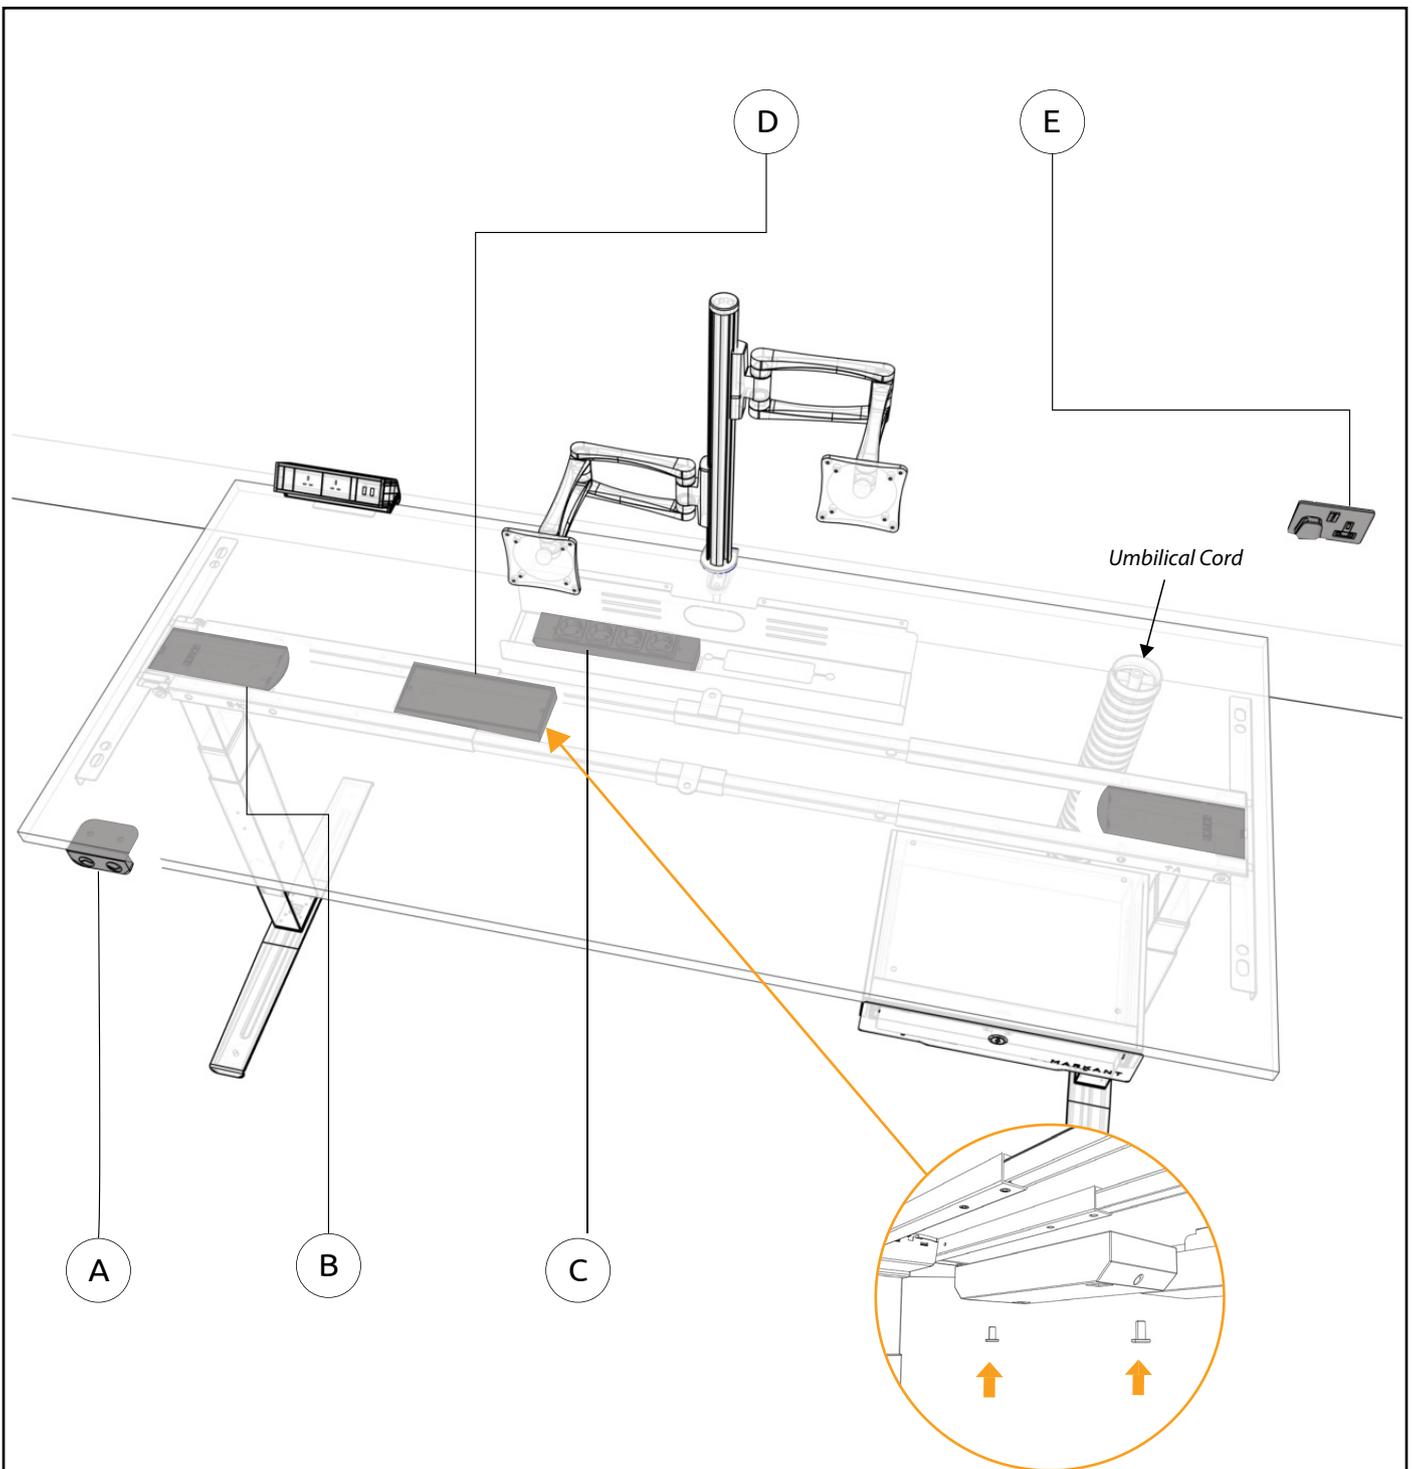


STEP 1: Attach (C) control box below the table top using self-tap screw.

STEP 2: Plug in the main plug to the power extension inside the trunk towards the power extension inside the front gutter.

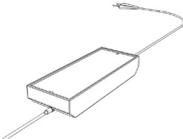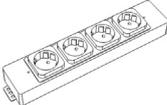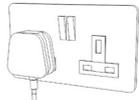 <p>(A) Handset</p>	 <p>(B) Actuator</p>	 <p>(C) Control Box</p>	 <p>(D) Power Extension</p>	 <p>(E) Wall Socket</p>
--	---	--	---	--




- |   |  |
|---|--|
| <p><b>1</b> Cable line from (D) control box to the (A) handset.</p>                               | <p><b>4</b> Cable line from the (C) power extension inside the front gutter to the monitor arm.</p>  |
| <p><b>2</b> Cable line from the (D) control box to the (B) actuator.</p>                          | <p><b>5</b> Cable line from the (E) wall socket go through the umbilical cord towards the (C) power extension inside the front gutter.</p> |
| <p><b>3</b> Cable line from the (C) power extension inside the front gutter to the Media Hub.</p> | <p><b>6</b> Cable line from the (C) power extension inside the front gutter to the (D) control box.</p>                                    |

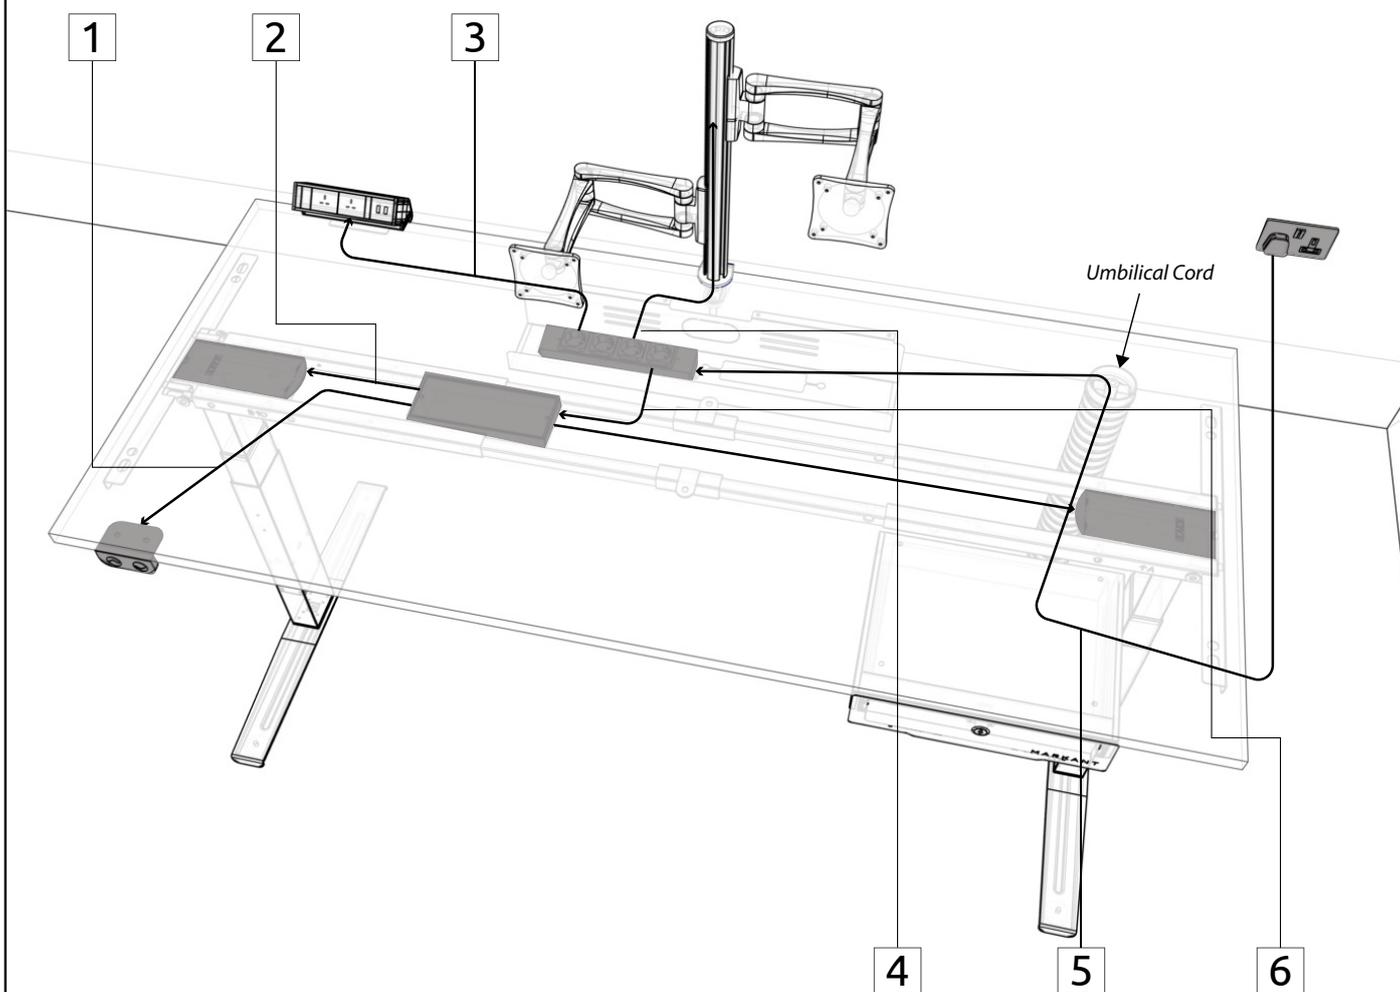

STEP 3: Attach the cable point to the rest of the accessories.



STEP 4: Reset procedure to follow before use: Hold up- and down button until desk is in lowest position and then slightly goes up.

   Please refer to the handset manual.

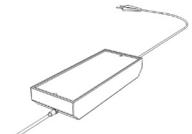				
(A) Handset	(B) Actuator	(C) Control Box	(D) Power Extension	(E) Wall Socket

**6 Recycleable Guideline**

 All components are easy to dismantle and recycle. Undo the step of all installation for recycleable or reuse purposes.

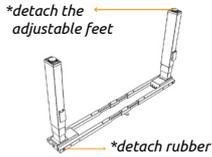NO.	ITEMS	QTY	MATERIAL	WEIGHT (g) / pc	RECYCLABLE/ NON-RECYCLABLE
1		1	Metal	20302.64	RECYCLABLE
2		2	Metal	861.36	RECYCLABLE
3		1	Metal	1211.84	RECYCLABLE
4		3	XXX	50	(WEEE) WASTE ELECTRICAL & ELECTRONIC EQUIPMENT
5		2	XXX	10	RECYCLABLE
6		8	XXX	10	RECYCLABLE
7		2	XXX	10	RECYCLABLE