



TOOLS & MANPOWER

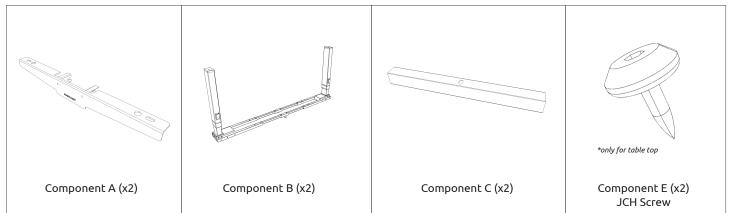


MAIN COMPONENTS

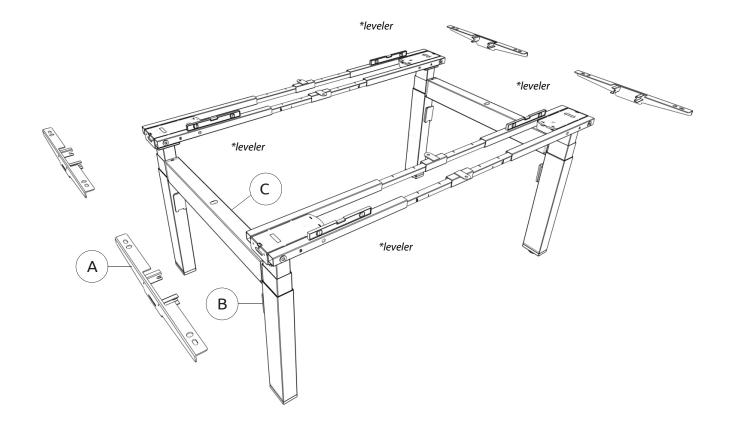

MARKANT


Matrix Pro Combi installation manual (frame)

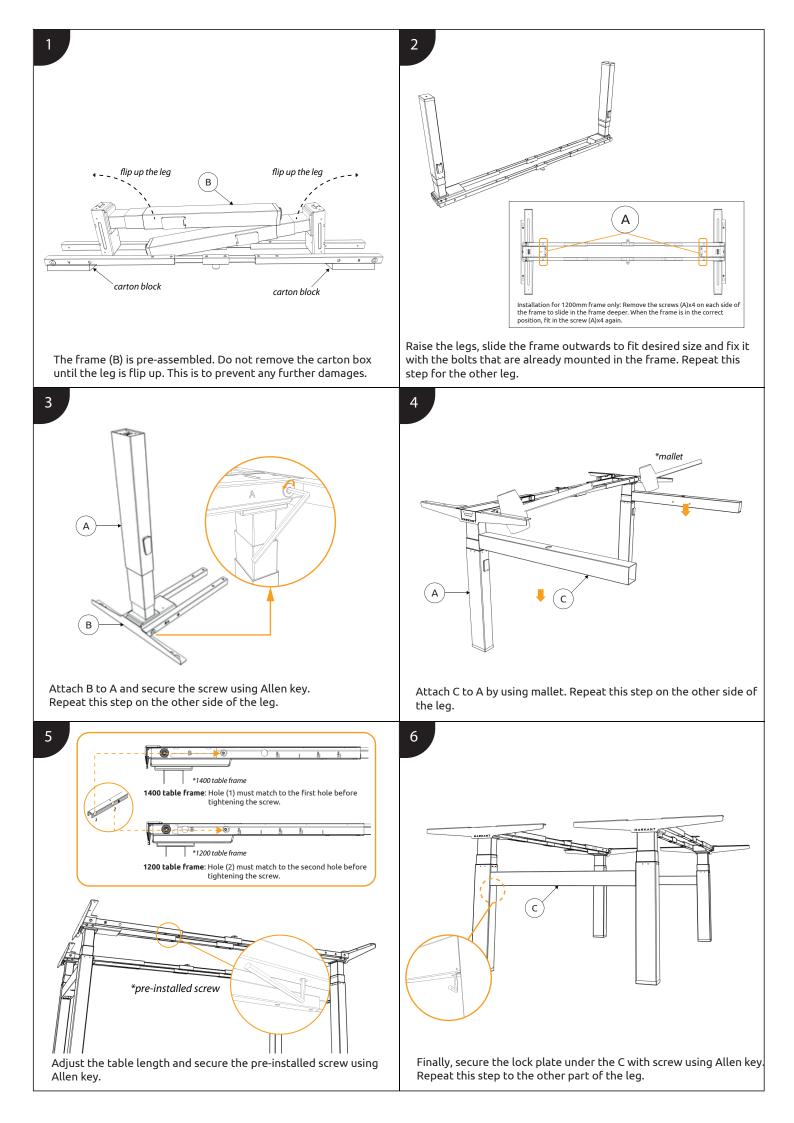



Matrix Pro Combi installation manual


(cable gutter)

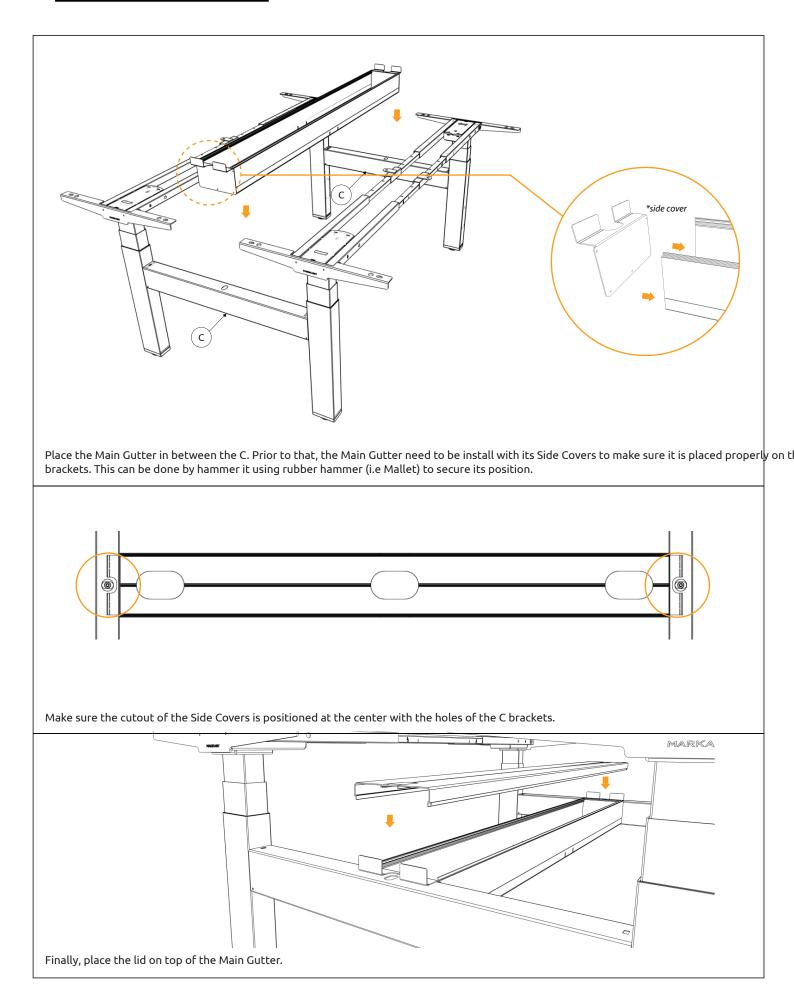




Matrix Pro Combi installation manual

(table top)

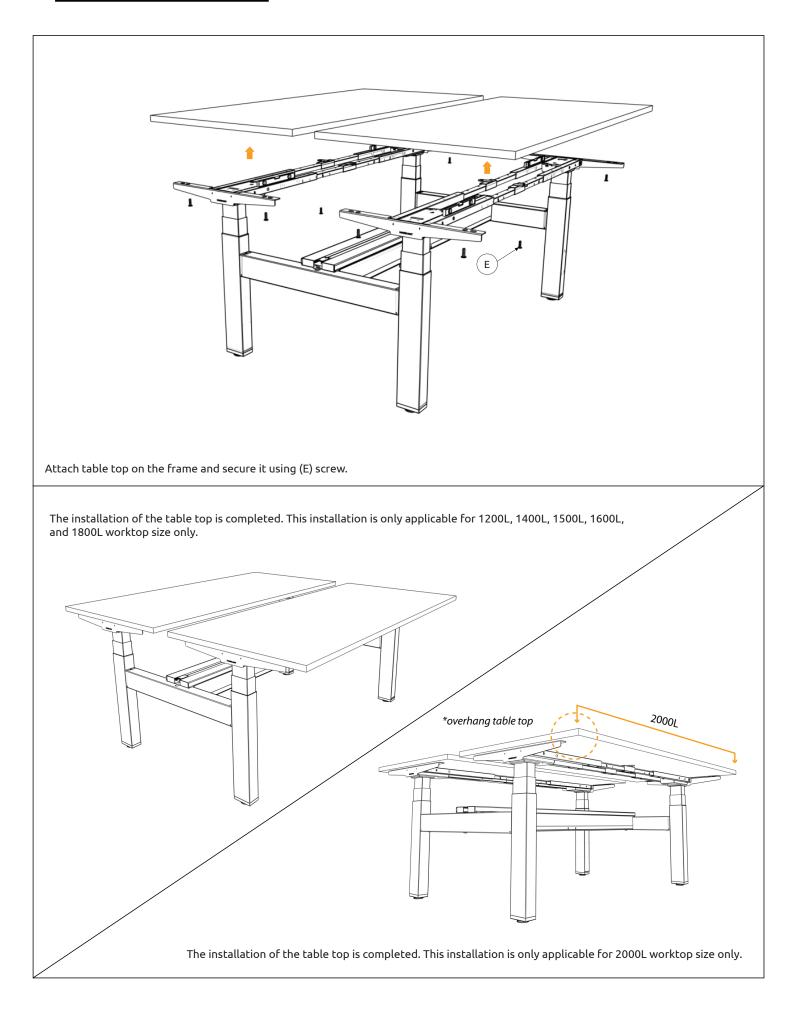




Matrix Pro Combi installation manual (Elbow & Front gutter)

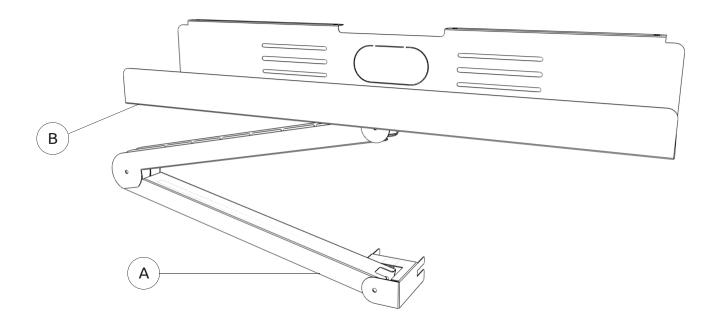


MAIN COMPONENTS

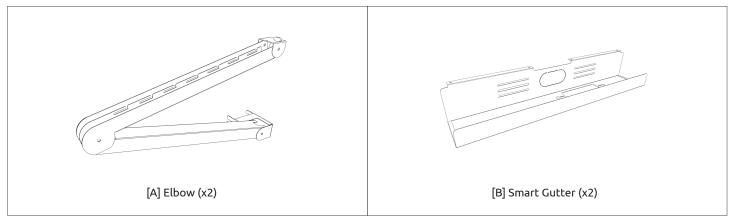


TOOLS & MANPOWER




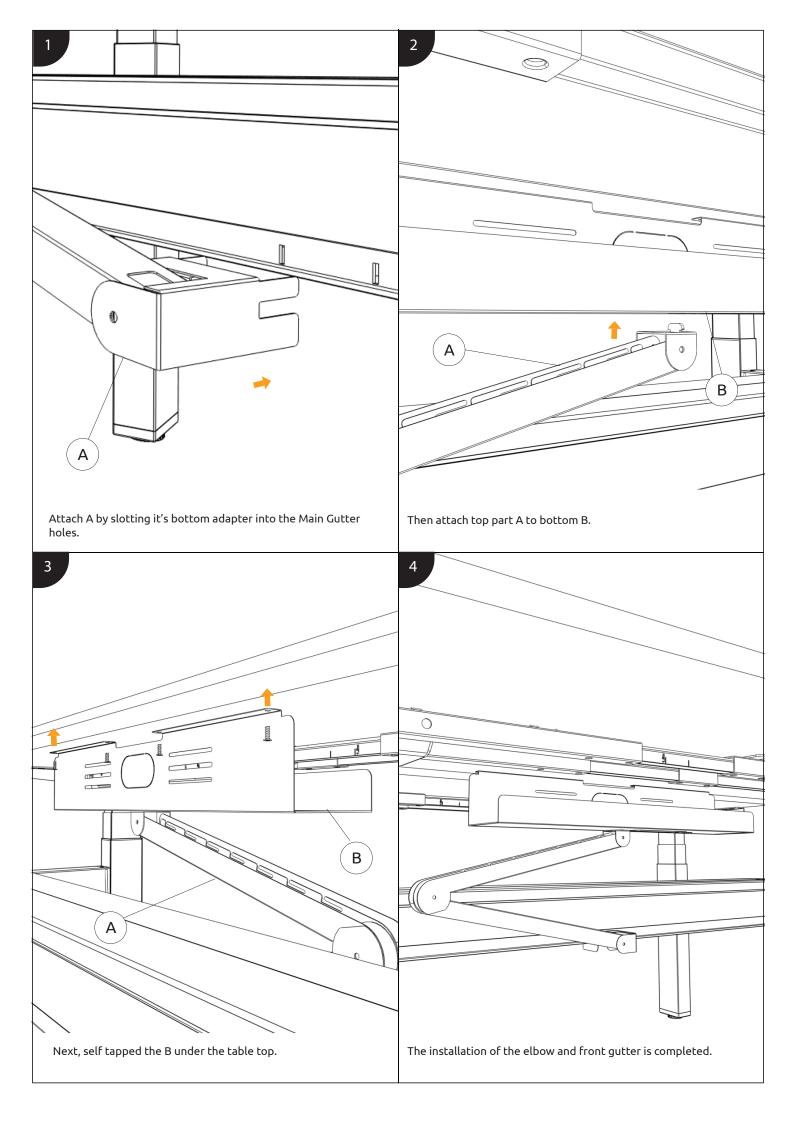

MARKANT

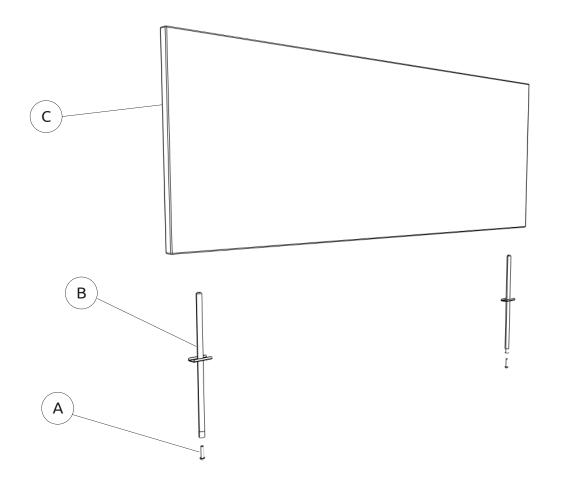


MAIN COMPONENTS

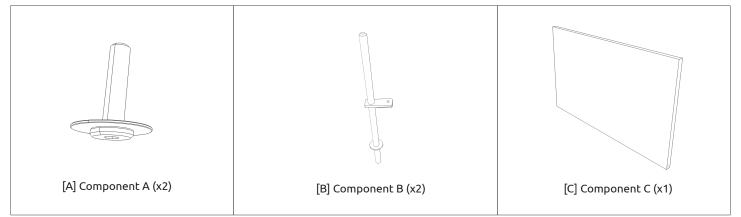


TOOLS & MANPOWER



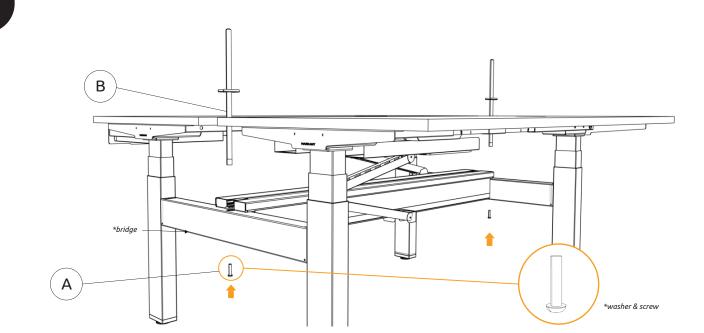


Slot in A into the bridge's holes. Secure it's position by tighten it to B with washers and screws as provided.

1

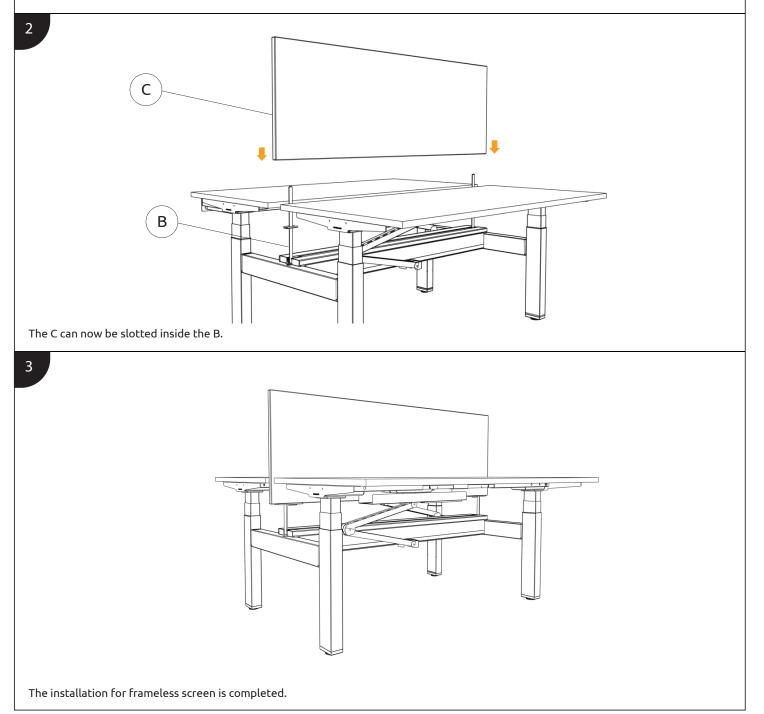




Matrix Pro Combi installation manual (accesories)

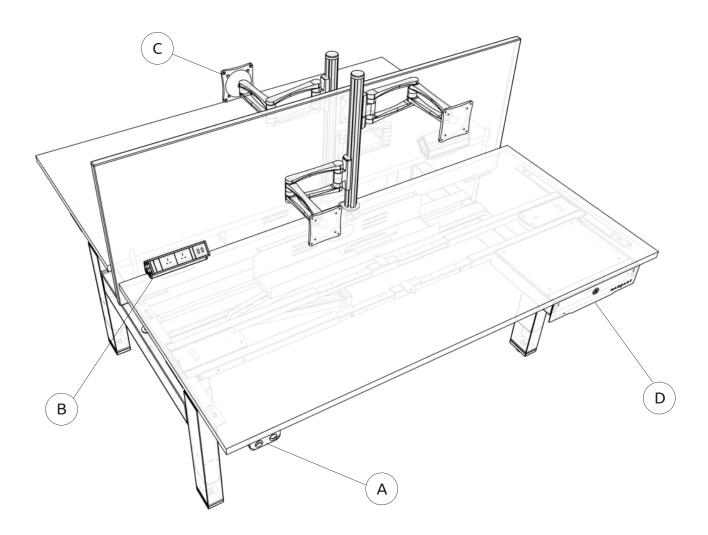


MAIN COMPONENTS

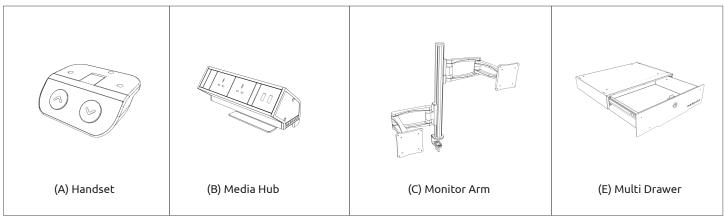


TOOLS & MANPOWER




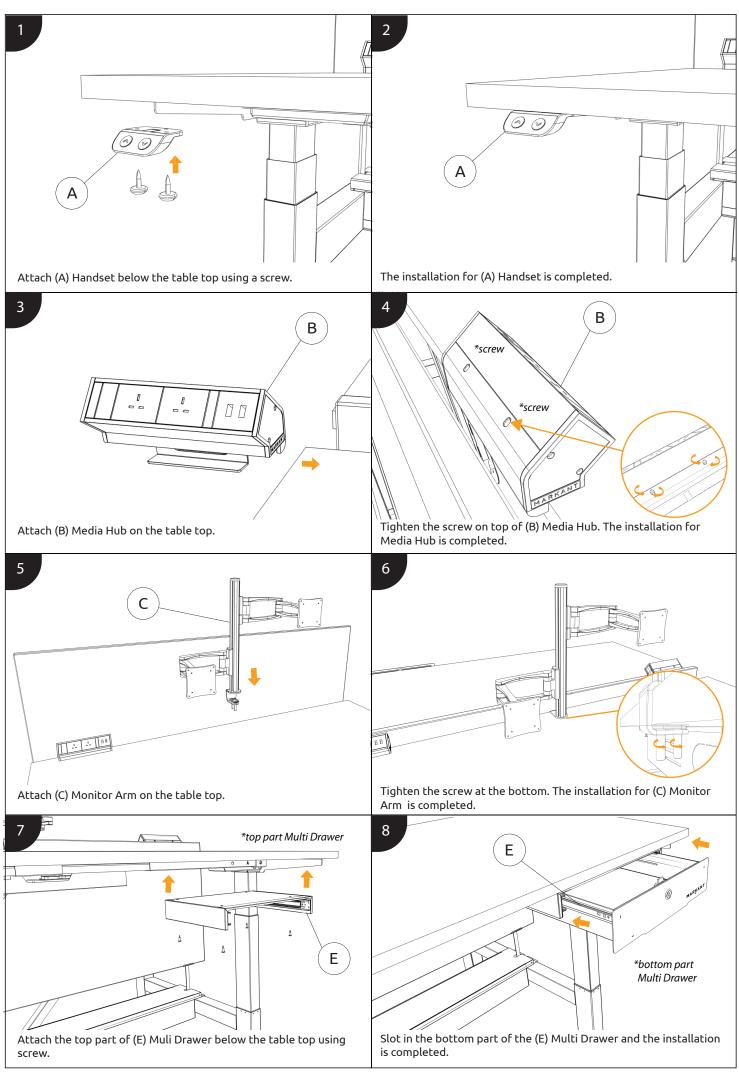




Matrix Pro Combi installation manual (control box)

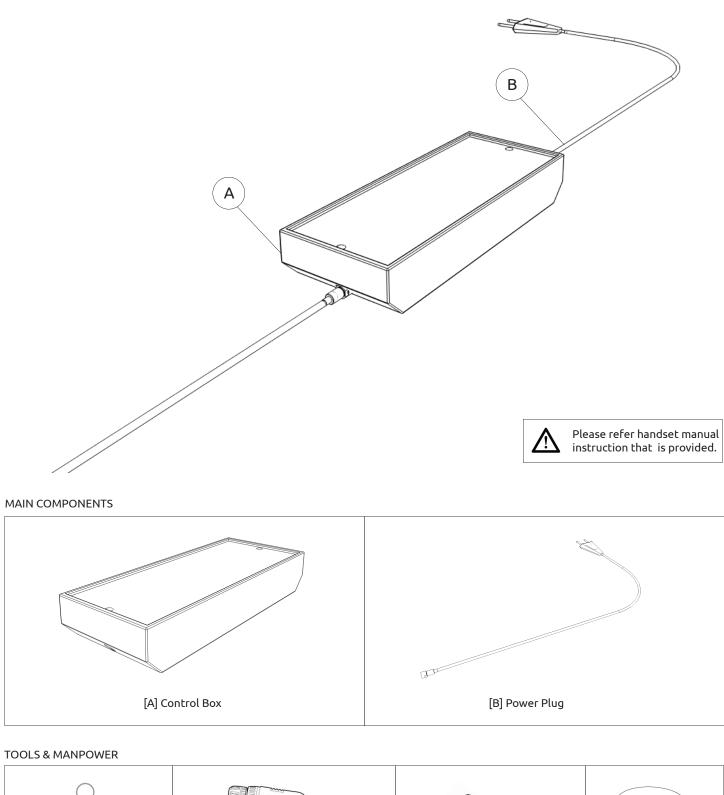

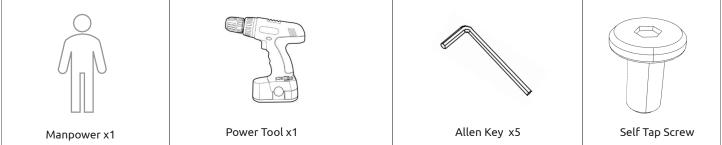

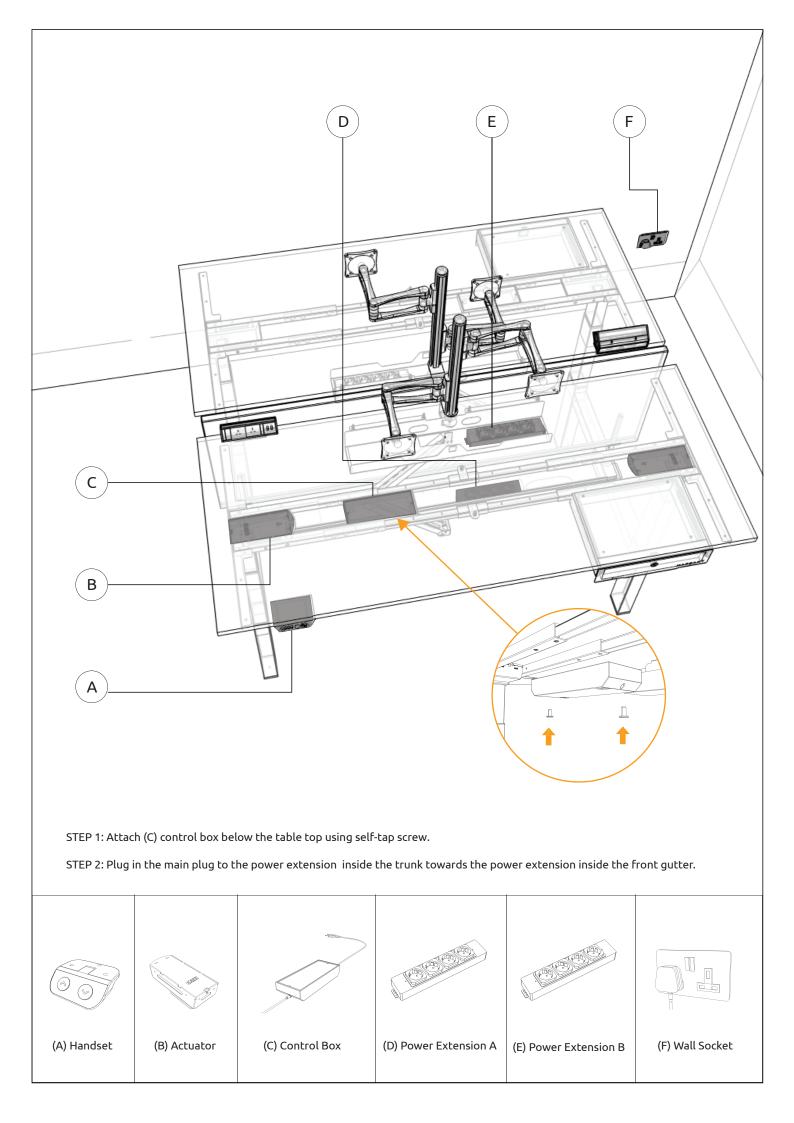

1 Cable line from (C)	control box to the (A) handset.		ble line from the (E) powe onitor arm.	r extension B to the
2 Cable line from the	e (C) control box to the (B) actuate	or. 6 Cab	ble line from the (E) powe control box).	r extension B to the
	e (D) power extension A inside the wer extension B inside the front		le line from the (F) wall so power extension A.	ocket to the
4 Cable line from the (E) power extension B inside the front gutter to the Media Hub.				
		5		T
STEP 3: Attach the cable point to the rest of the accesories. STEP 4: Reset procedure to follow before use: Hold up- and down button until desk is in lowest position and then slightly goes up.				
(A) Handset (B) Actuate	or (C) Control Box	(D) Power Extension A	(E) Power Extension B	(F) Wall Socket