




# HYBRID SOFA INSTALLATION MANUAL

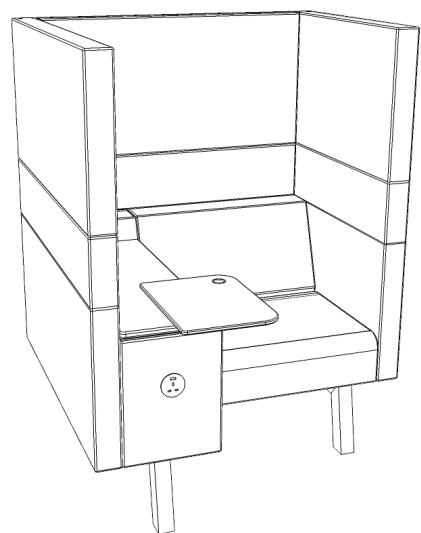


LAYOUT 1

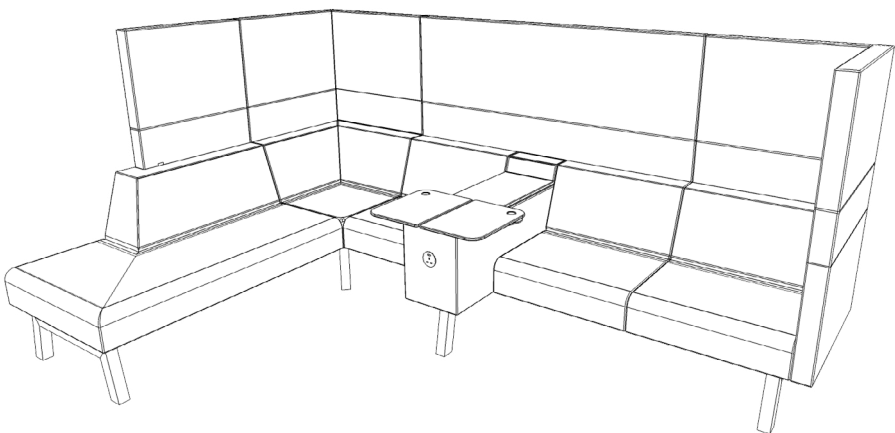


LAYOUT 2

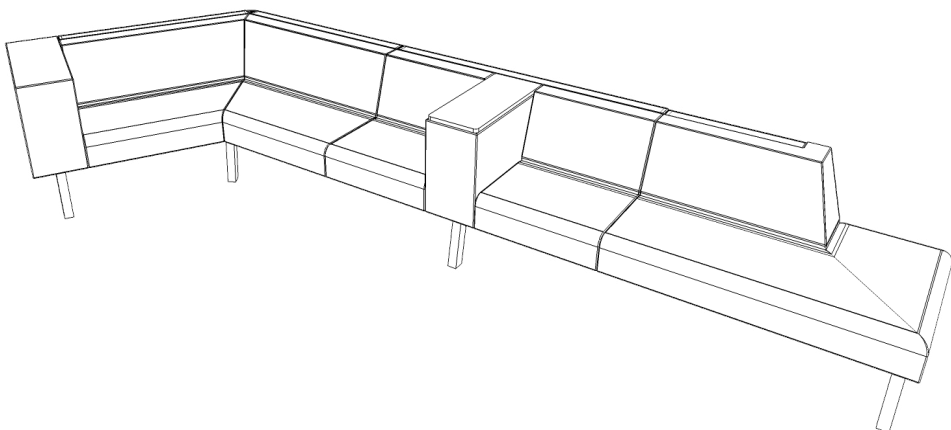


LAYOUT 3

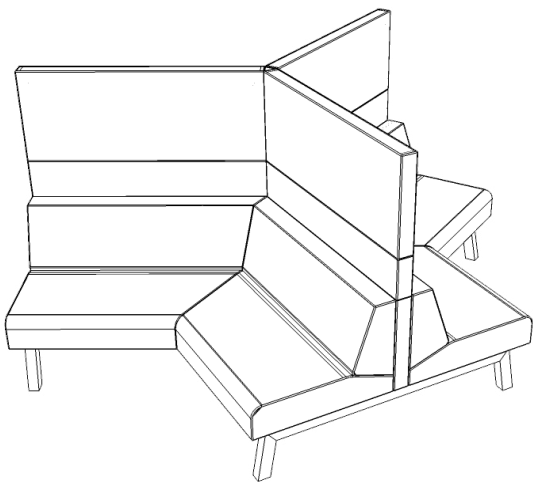


LAYOUT 4

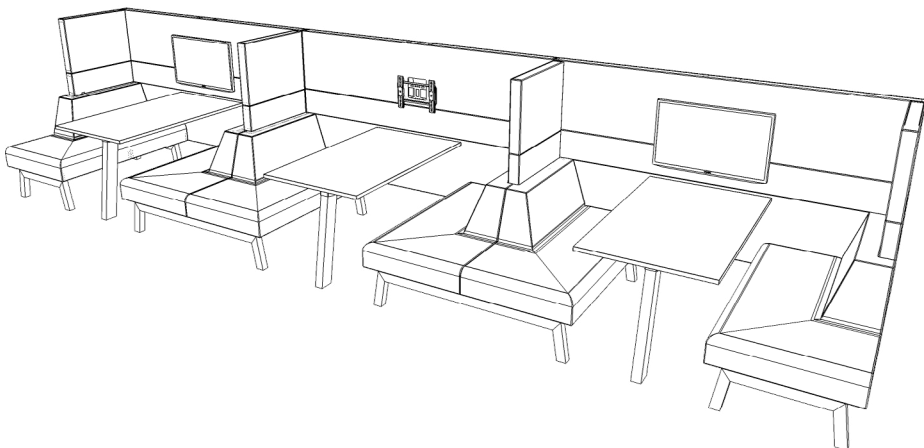



LAYOUT 5

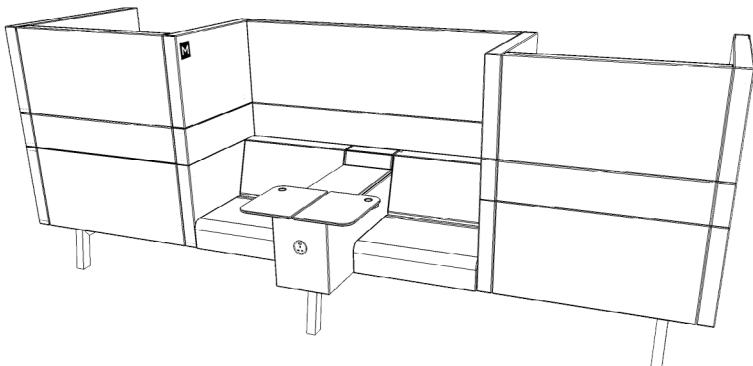

LAYOUT 6

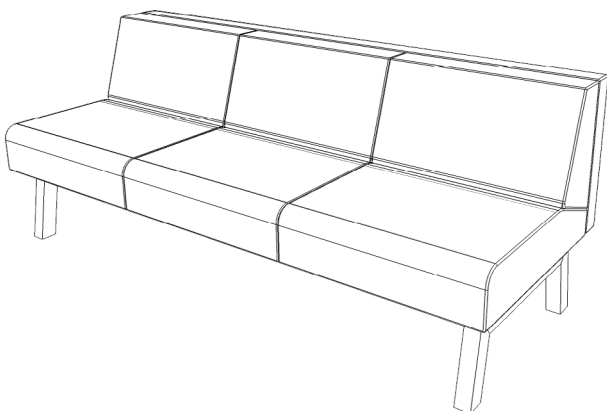


LAYOUT 7

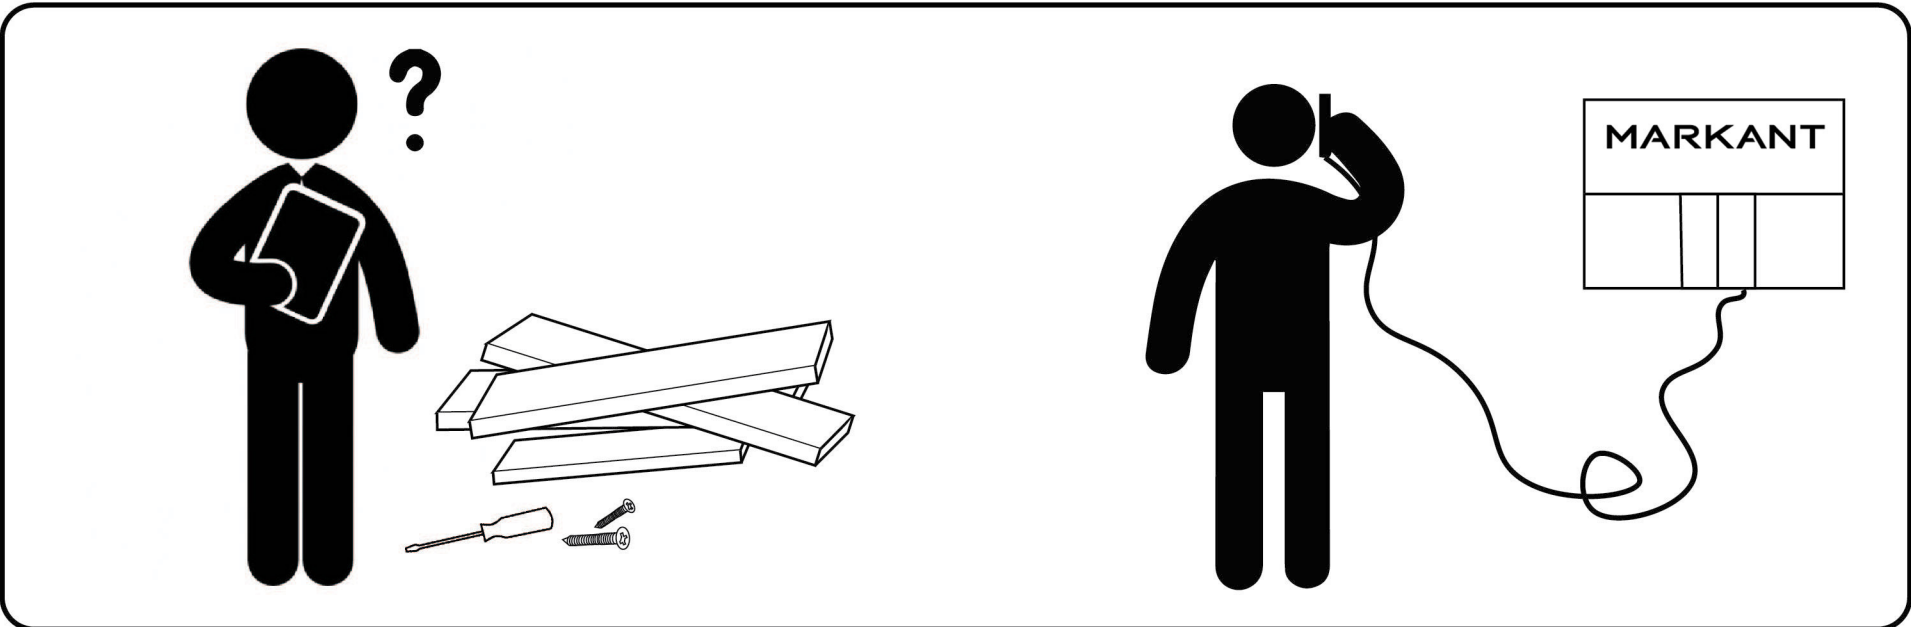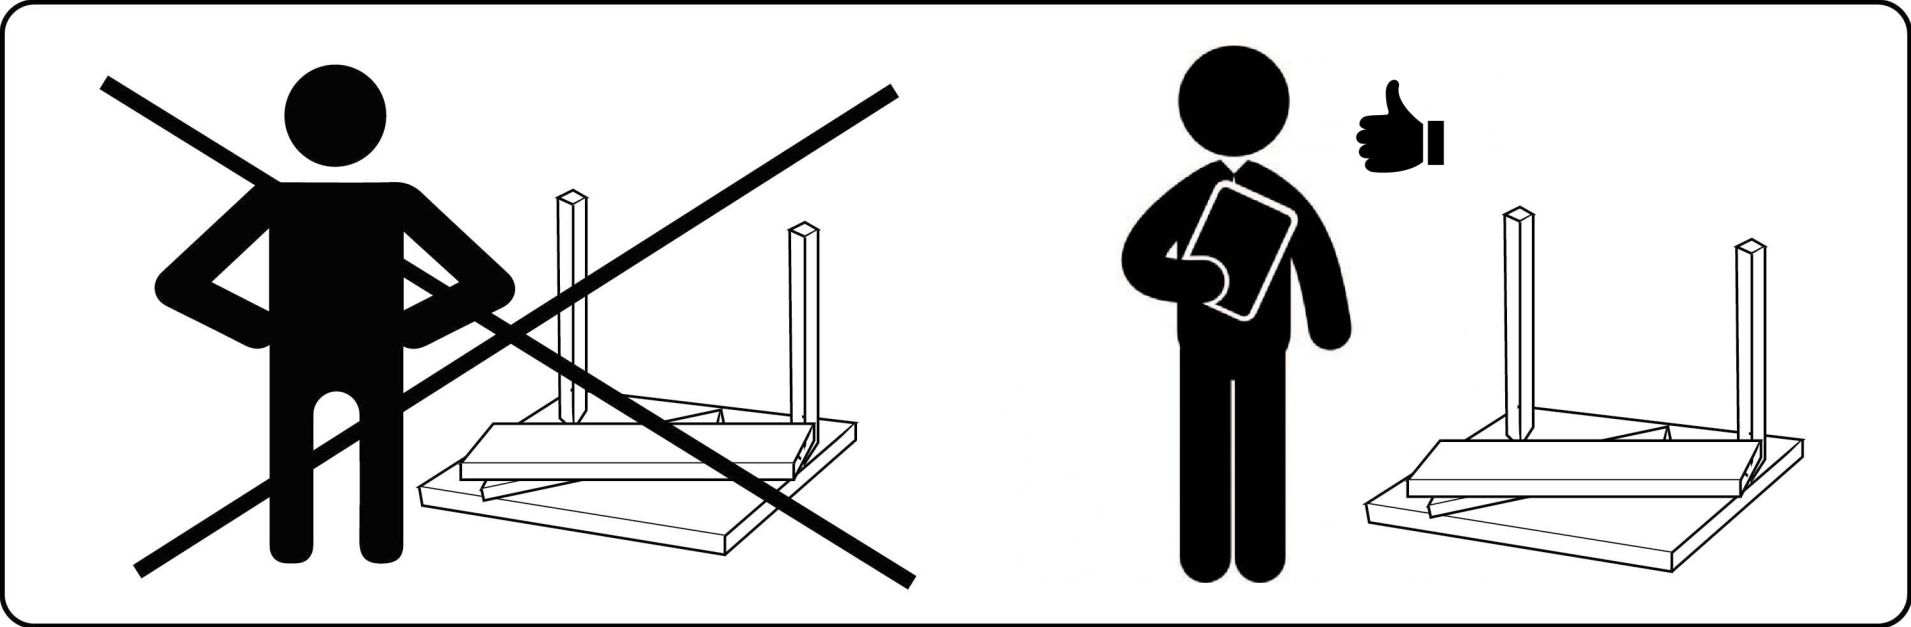


# INDEX

Chapter	Page
<a href="#">HARDWARE</a>	page 1
<a href="#">LAYOUT 1</a>	page 2-8
<a href="#">LAYOUT 2</a>	page 9-17
<a href="#">LAYOUT 3</a>	page 18-26
<a href="#">LAYOUT 4</a>	page 27-31
<a href="#">LAYOUT 5</a>	page 32-40
<a href="#">LAYOUT 6</a>	page 41-53
<a href="#">LAYOUT 7</a>	page 54-58


# HARDWARE

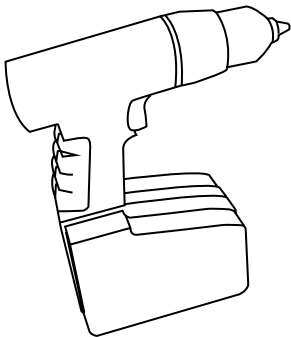


Power tool

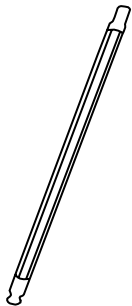


Allenkey




Cap screw M6 x 30mm




Cap screw M6 x 40mm

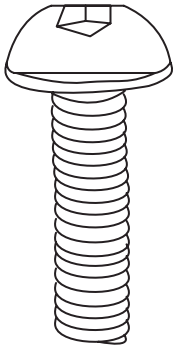


Button cap screw M8 x 25mm

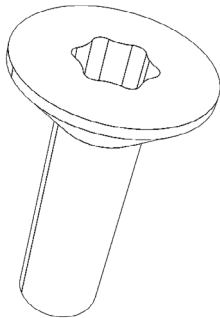


Self tapping screw

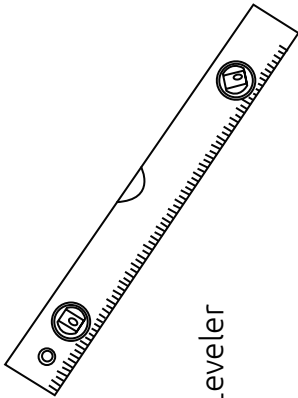

Leveler

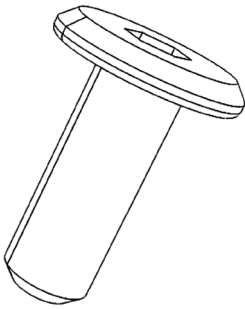

JCBC Screw

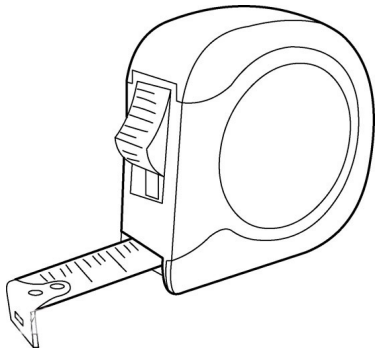


Measuring Tape


*\*POWER TOOL, ALLEN KEY & LEVELER ARE NOT INCLUDED*




# LAYOUT 1

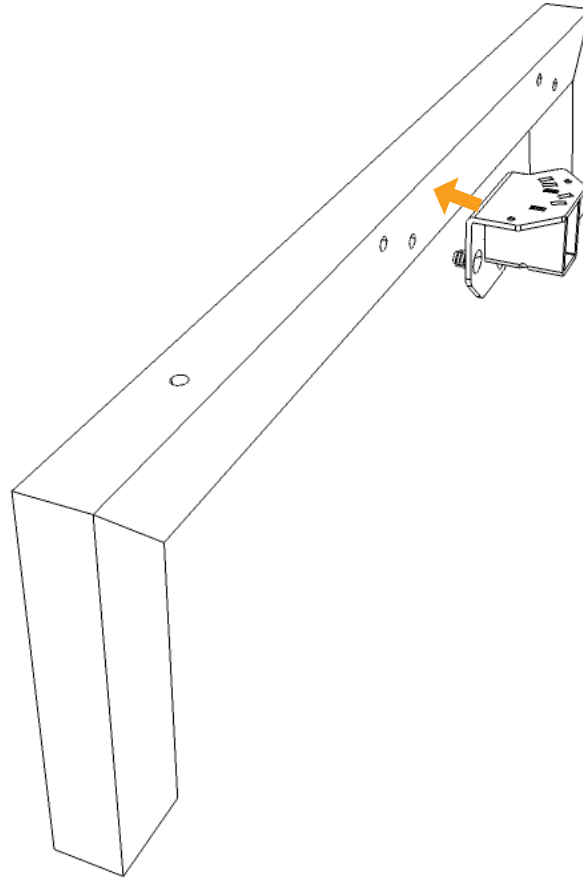


STEP 1: Screw in both side of the leg and beam supporter.

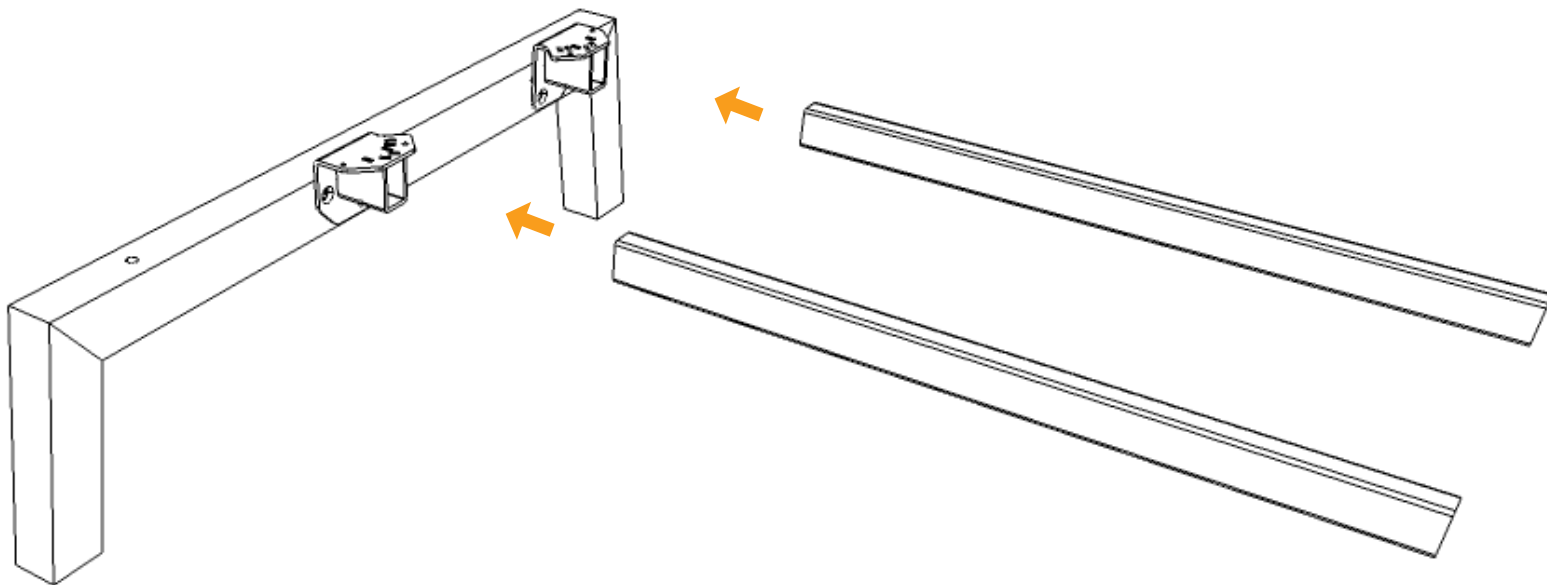


STEP 2: Slot in the X-beam .

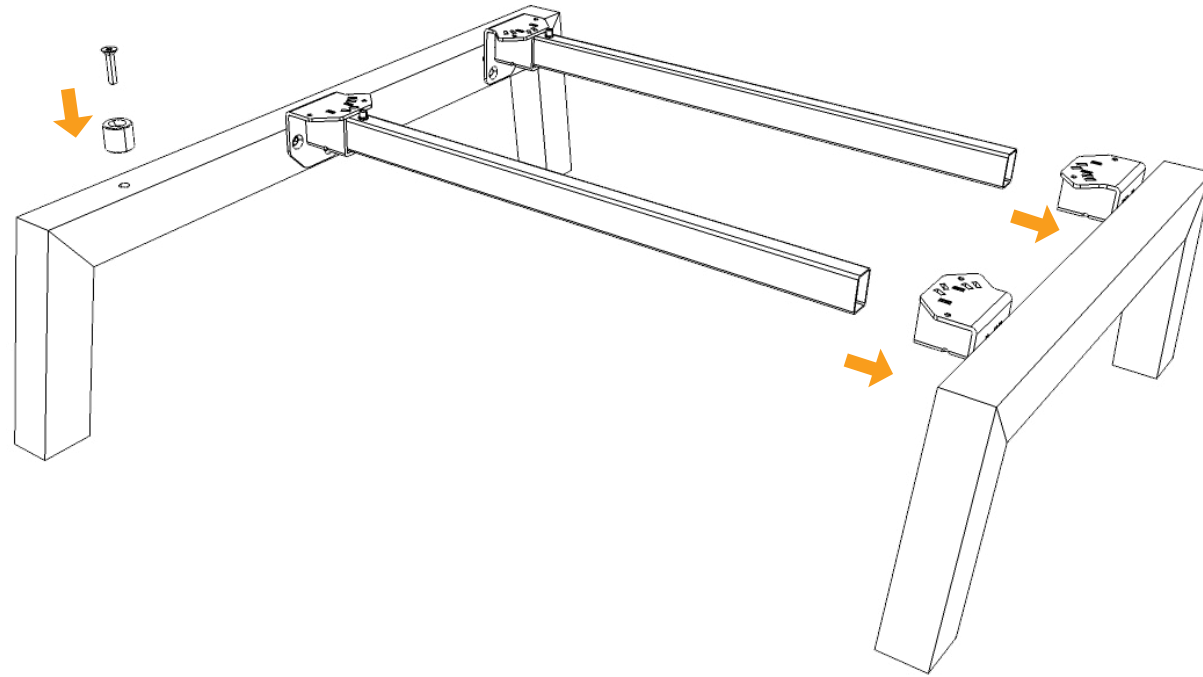

STEP 3: Repeat Step 1 on the other leg installation. Insert in tapping screw on top of the longer leg.

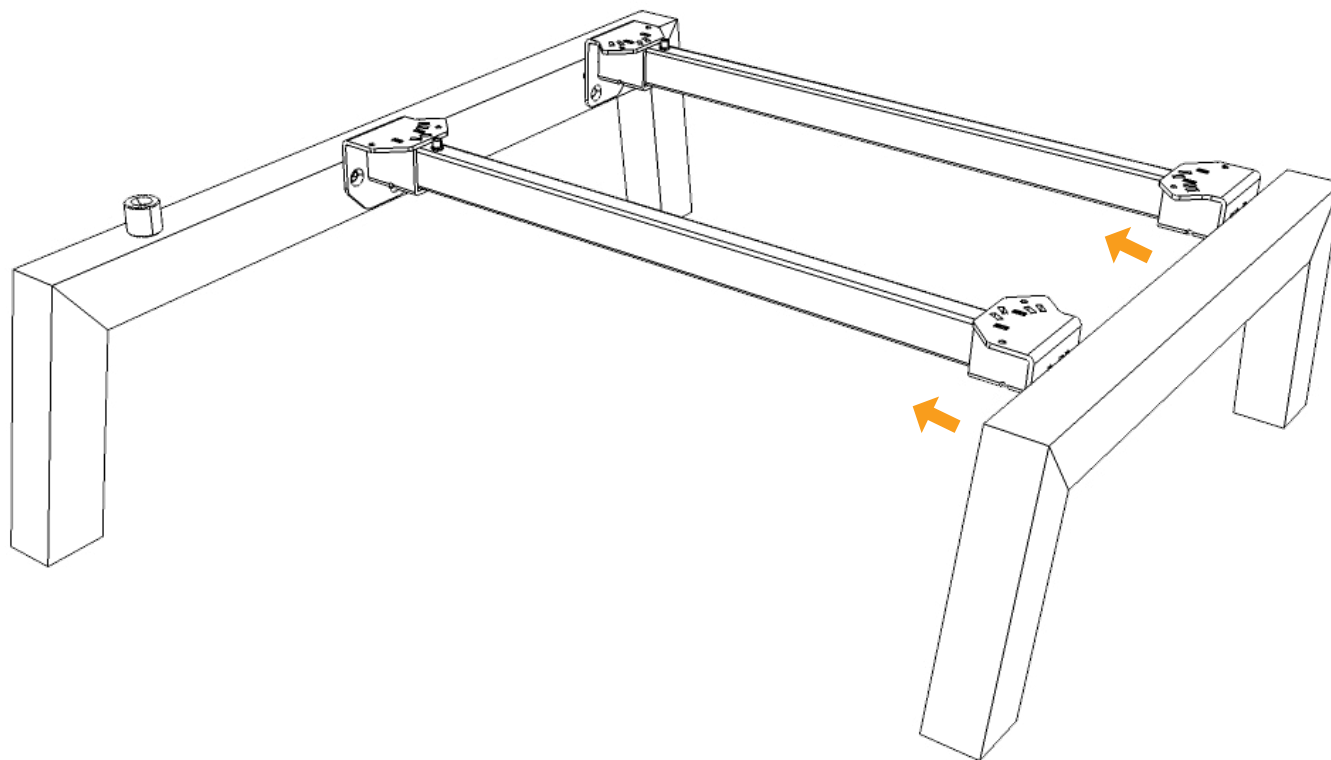


STEP 4: Slot in the other end of X-beam to the other leg.

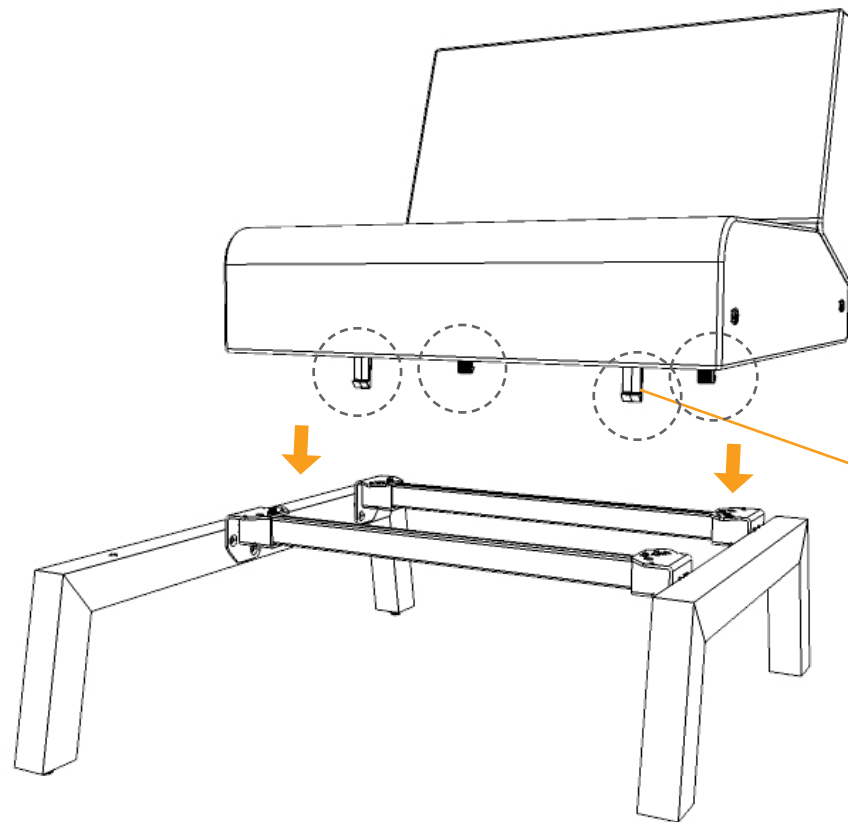

\*Click this in to attach the seat.


STEP 5: Snap in click fix seater to the X-beam.

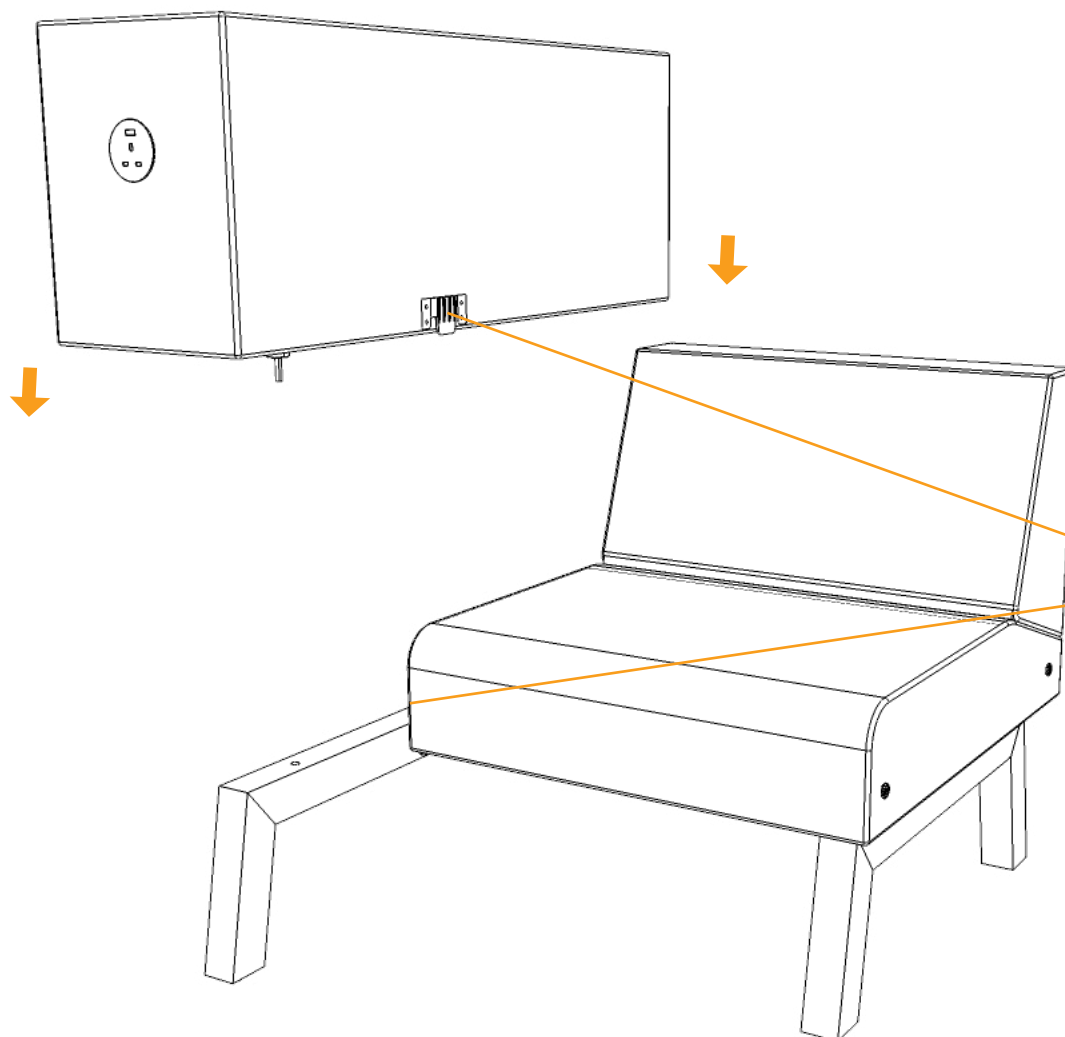


\*Hook in sofa connector.

STEP 6: Snap in click fix bizz class box to the X-beam.


\*swivel top installation

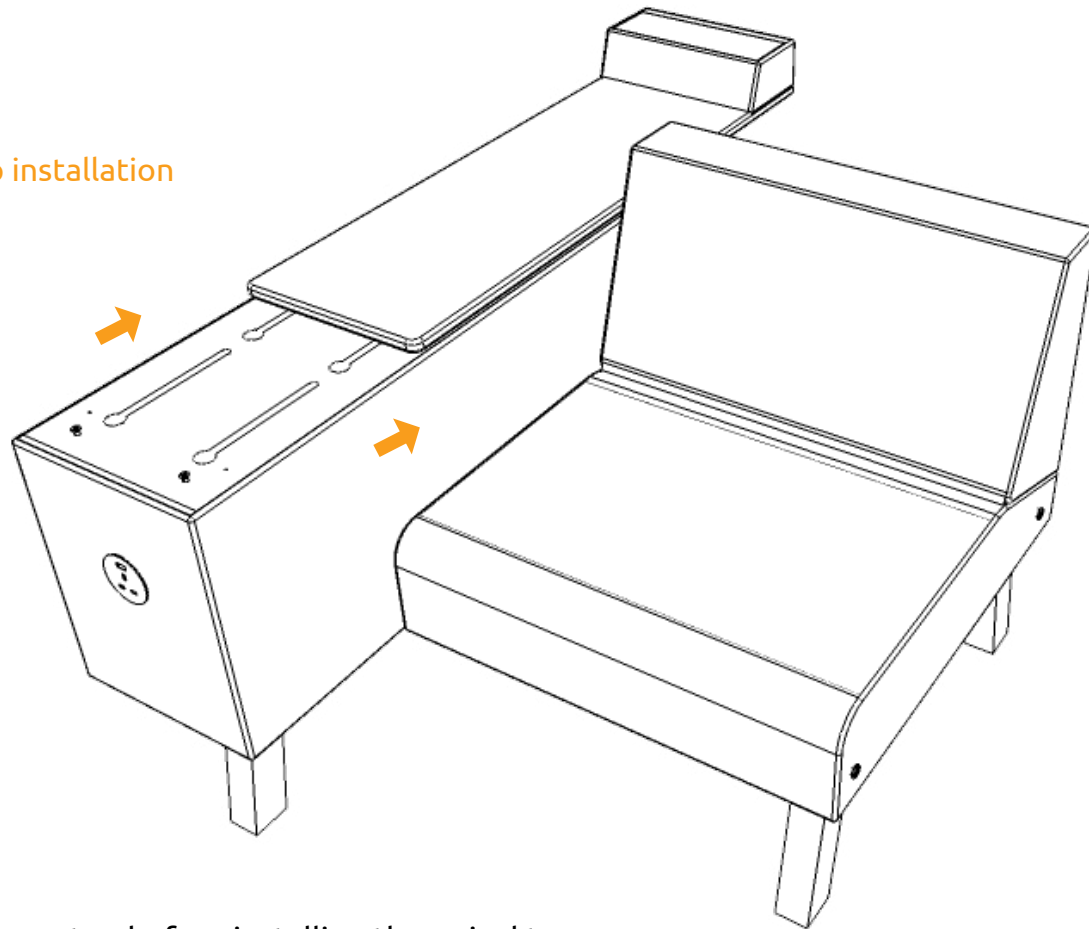


STEP 7: Slide out the upper top before installing the swivel top.

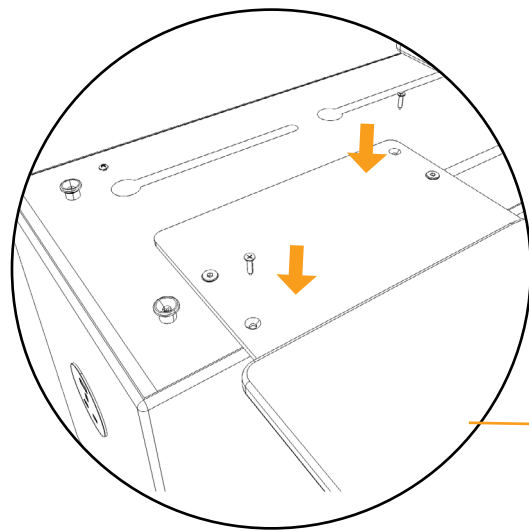


\*tapping screw

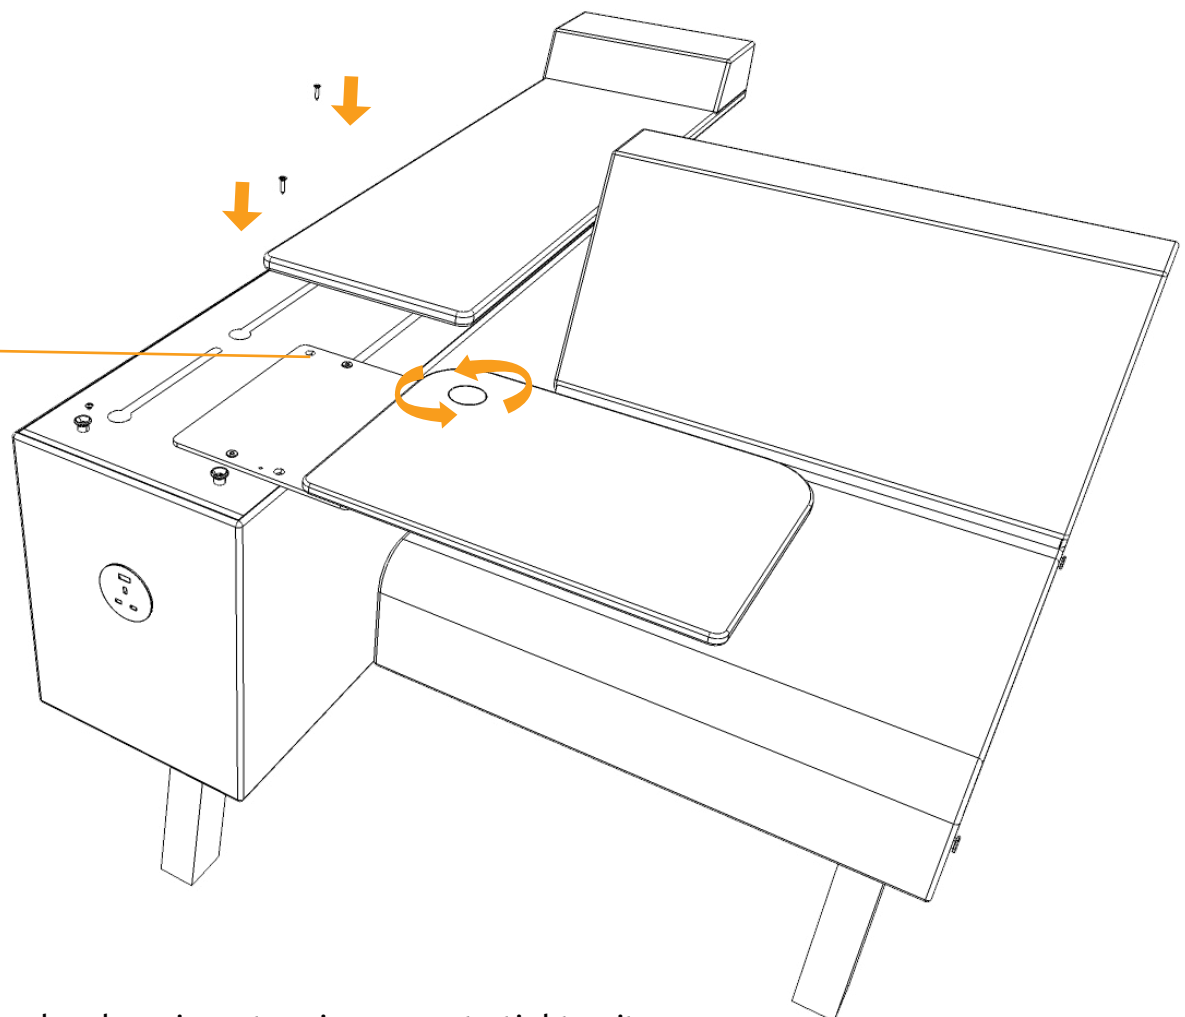



STEP 8: Install swivel top to the bizz class box by using a tapping screw to tighten it.

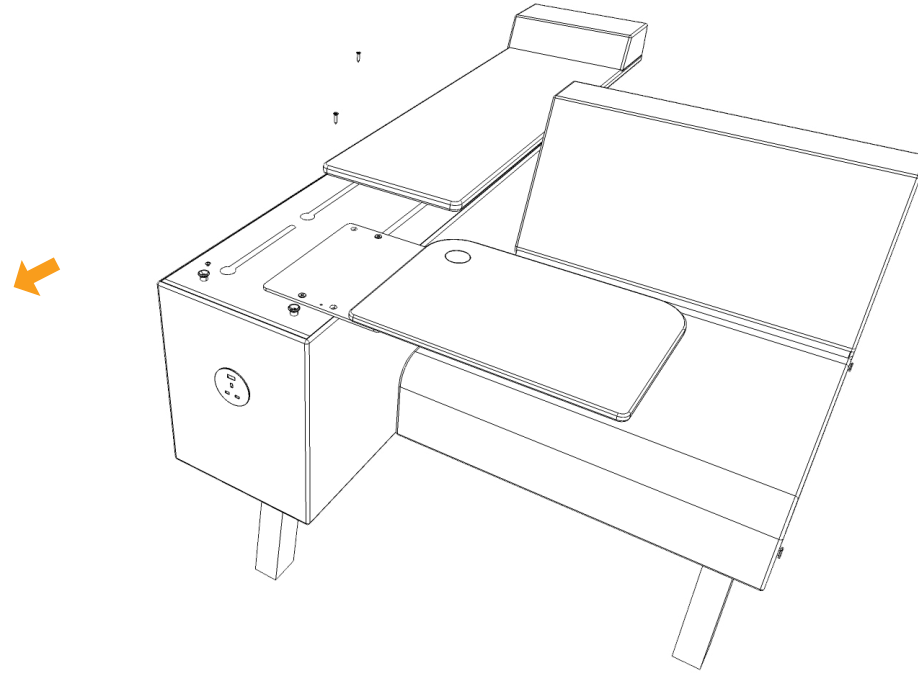


STEP 9: Slide back in the upper top to complete the swivel top installation.

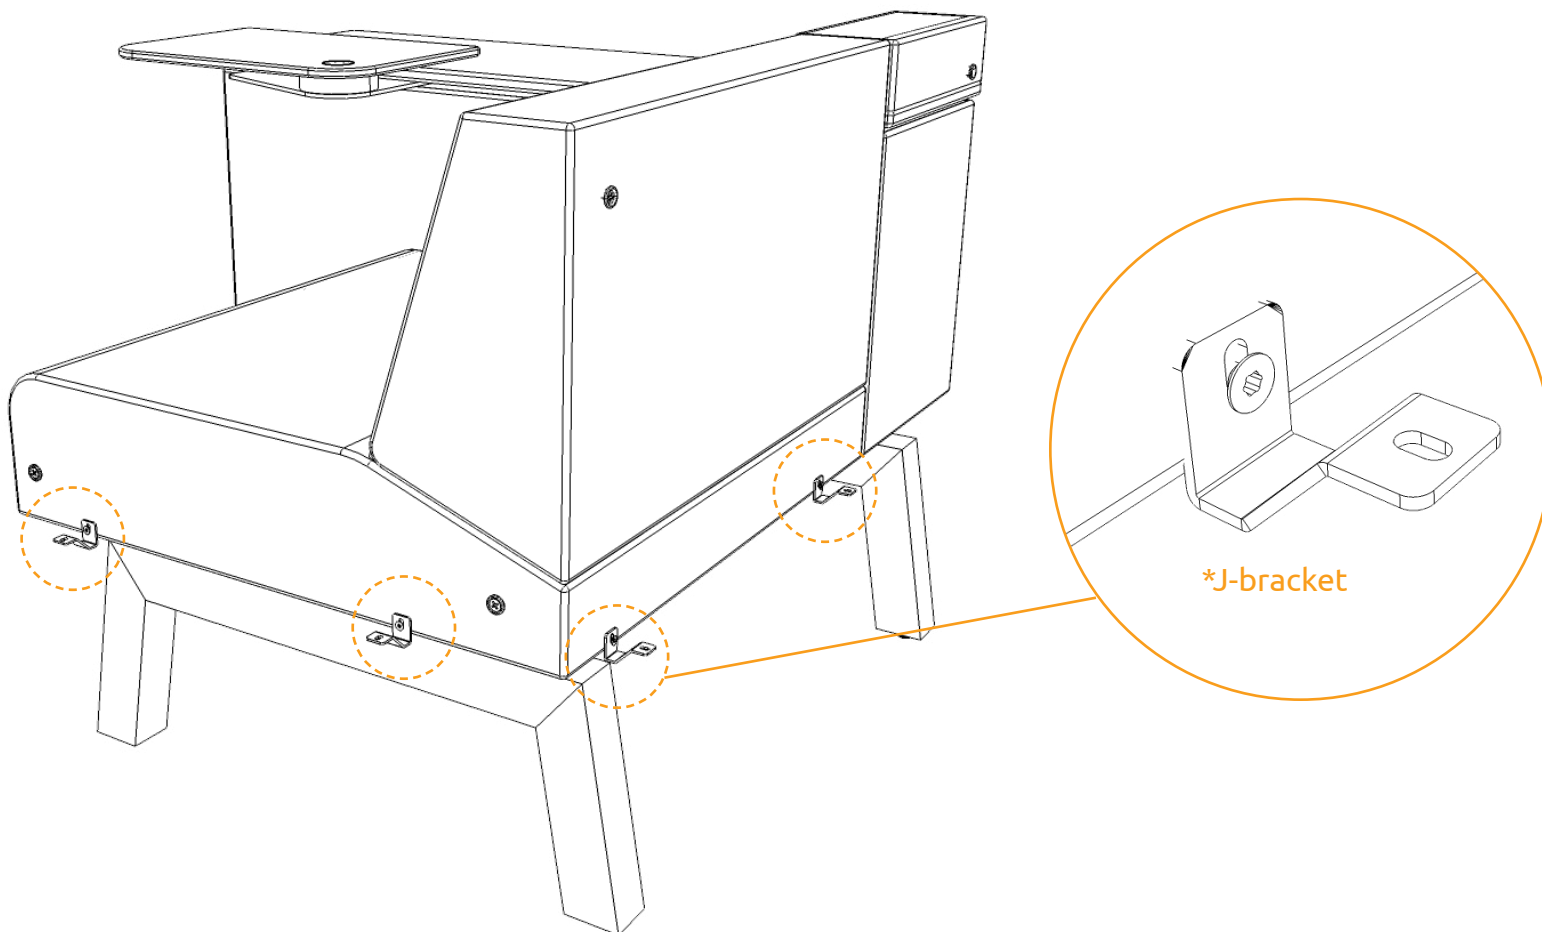


STEP 10: Add in J bracket at the bottom of the seat.

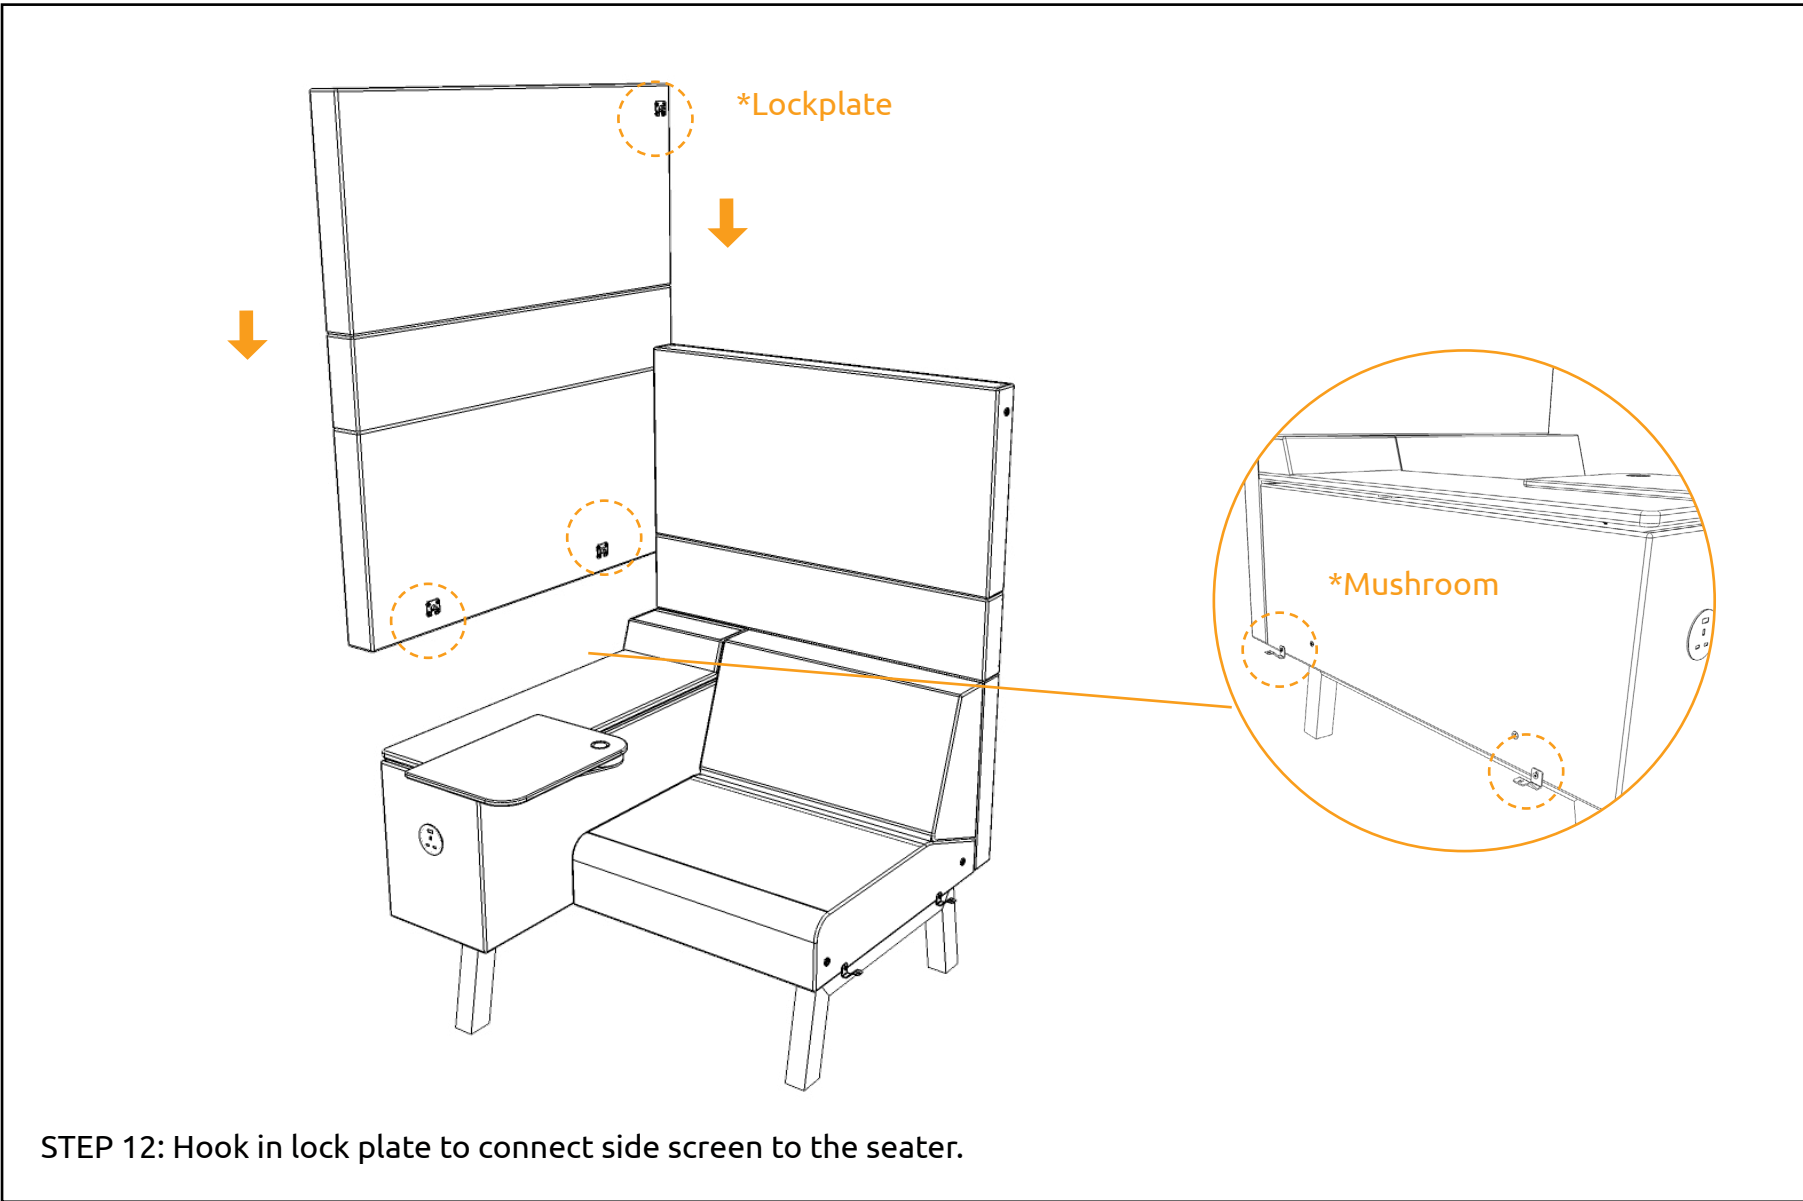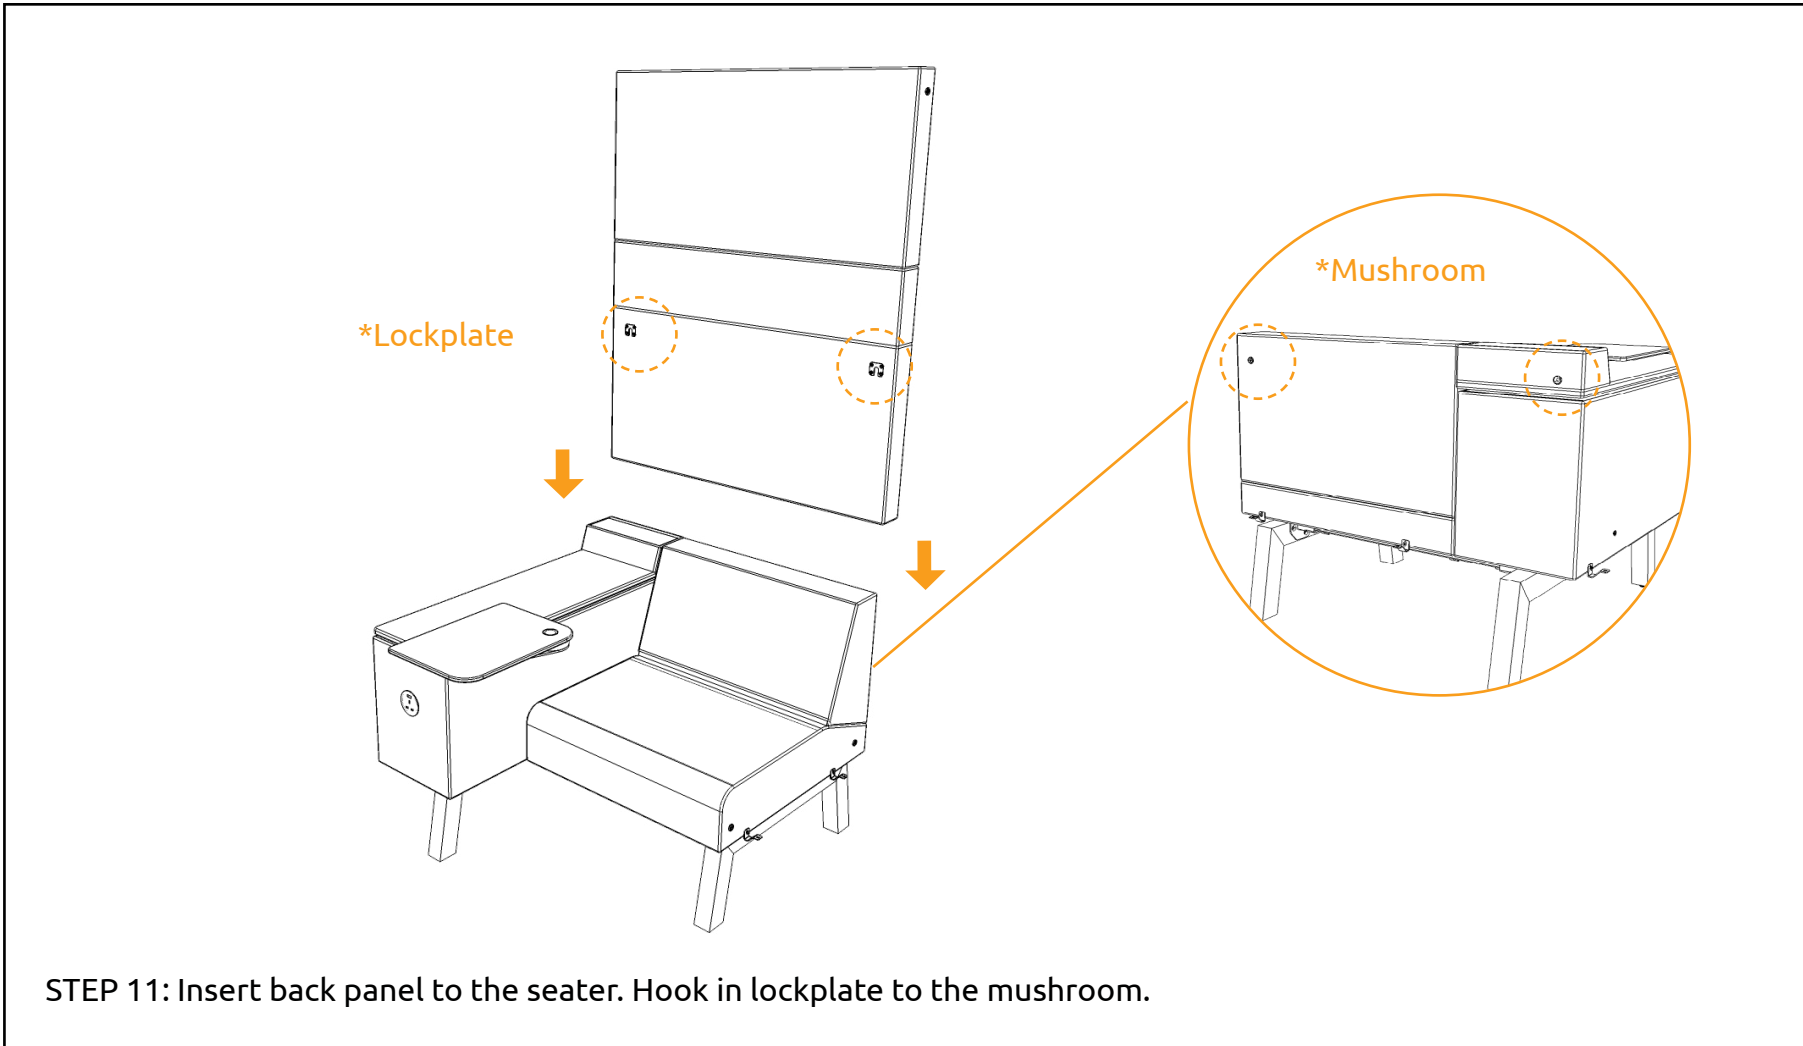


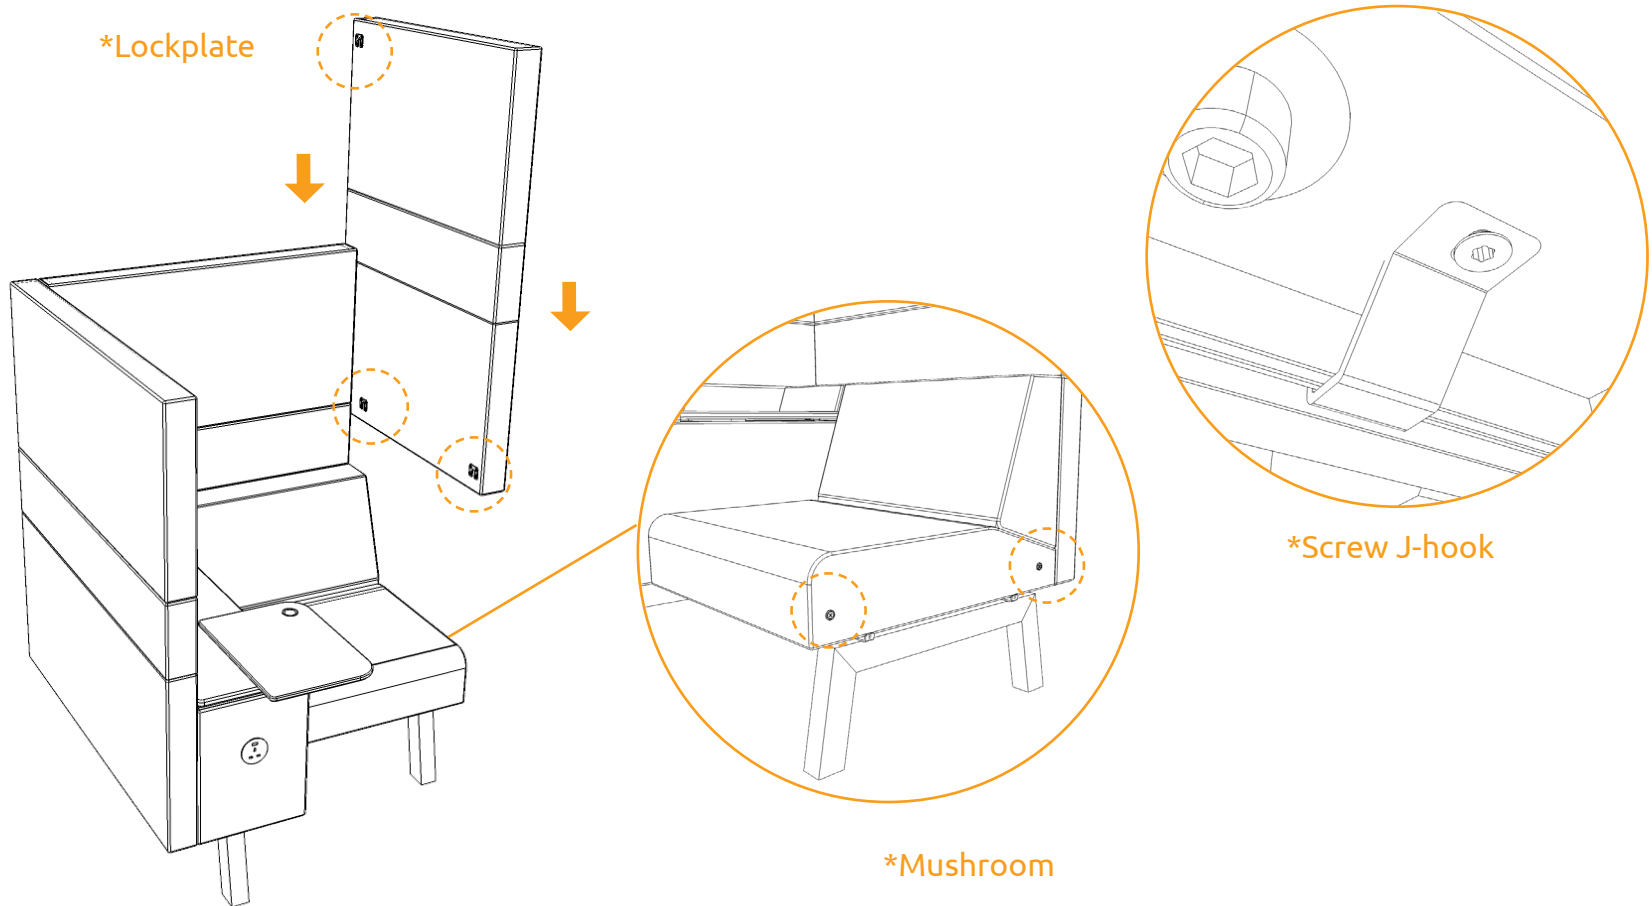


STEP 13: Repeat Step 12 to connect side screen to the other end of the seater.  
Finally, screw and tighten the J-hook to the panel after all panels are placed.


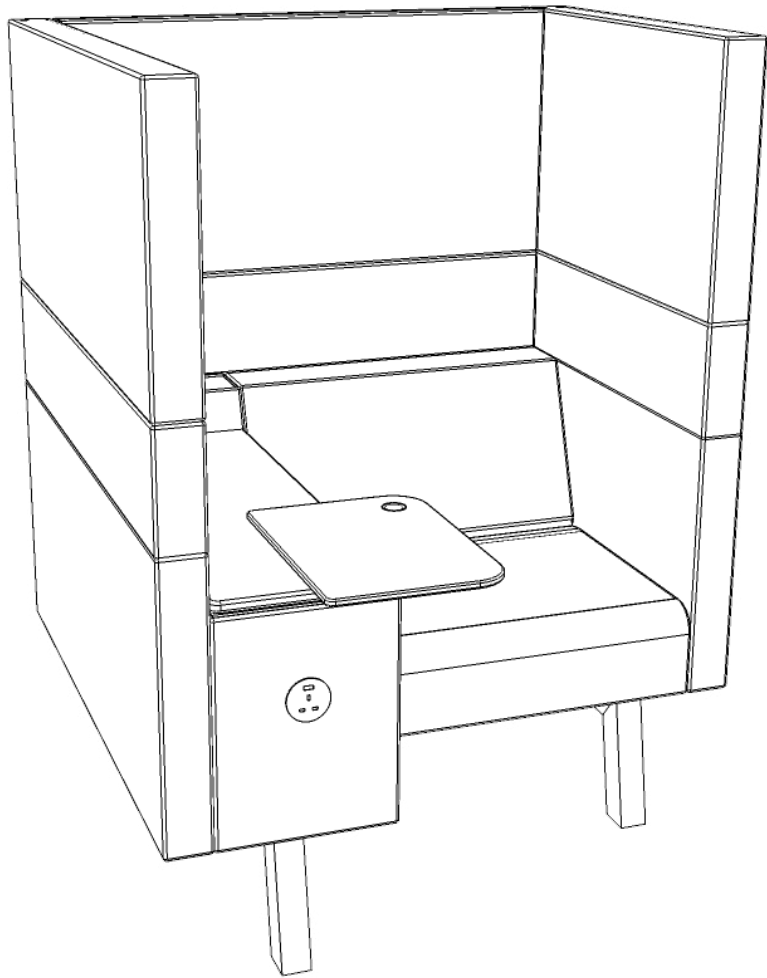



THE INSTALLATION FOR LAYOUT 1 IS COMPLETE.

# LAYOUT 2

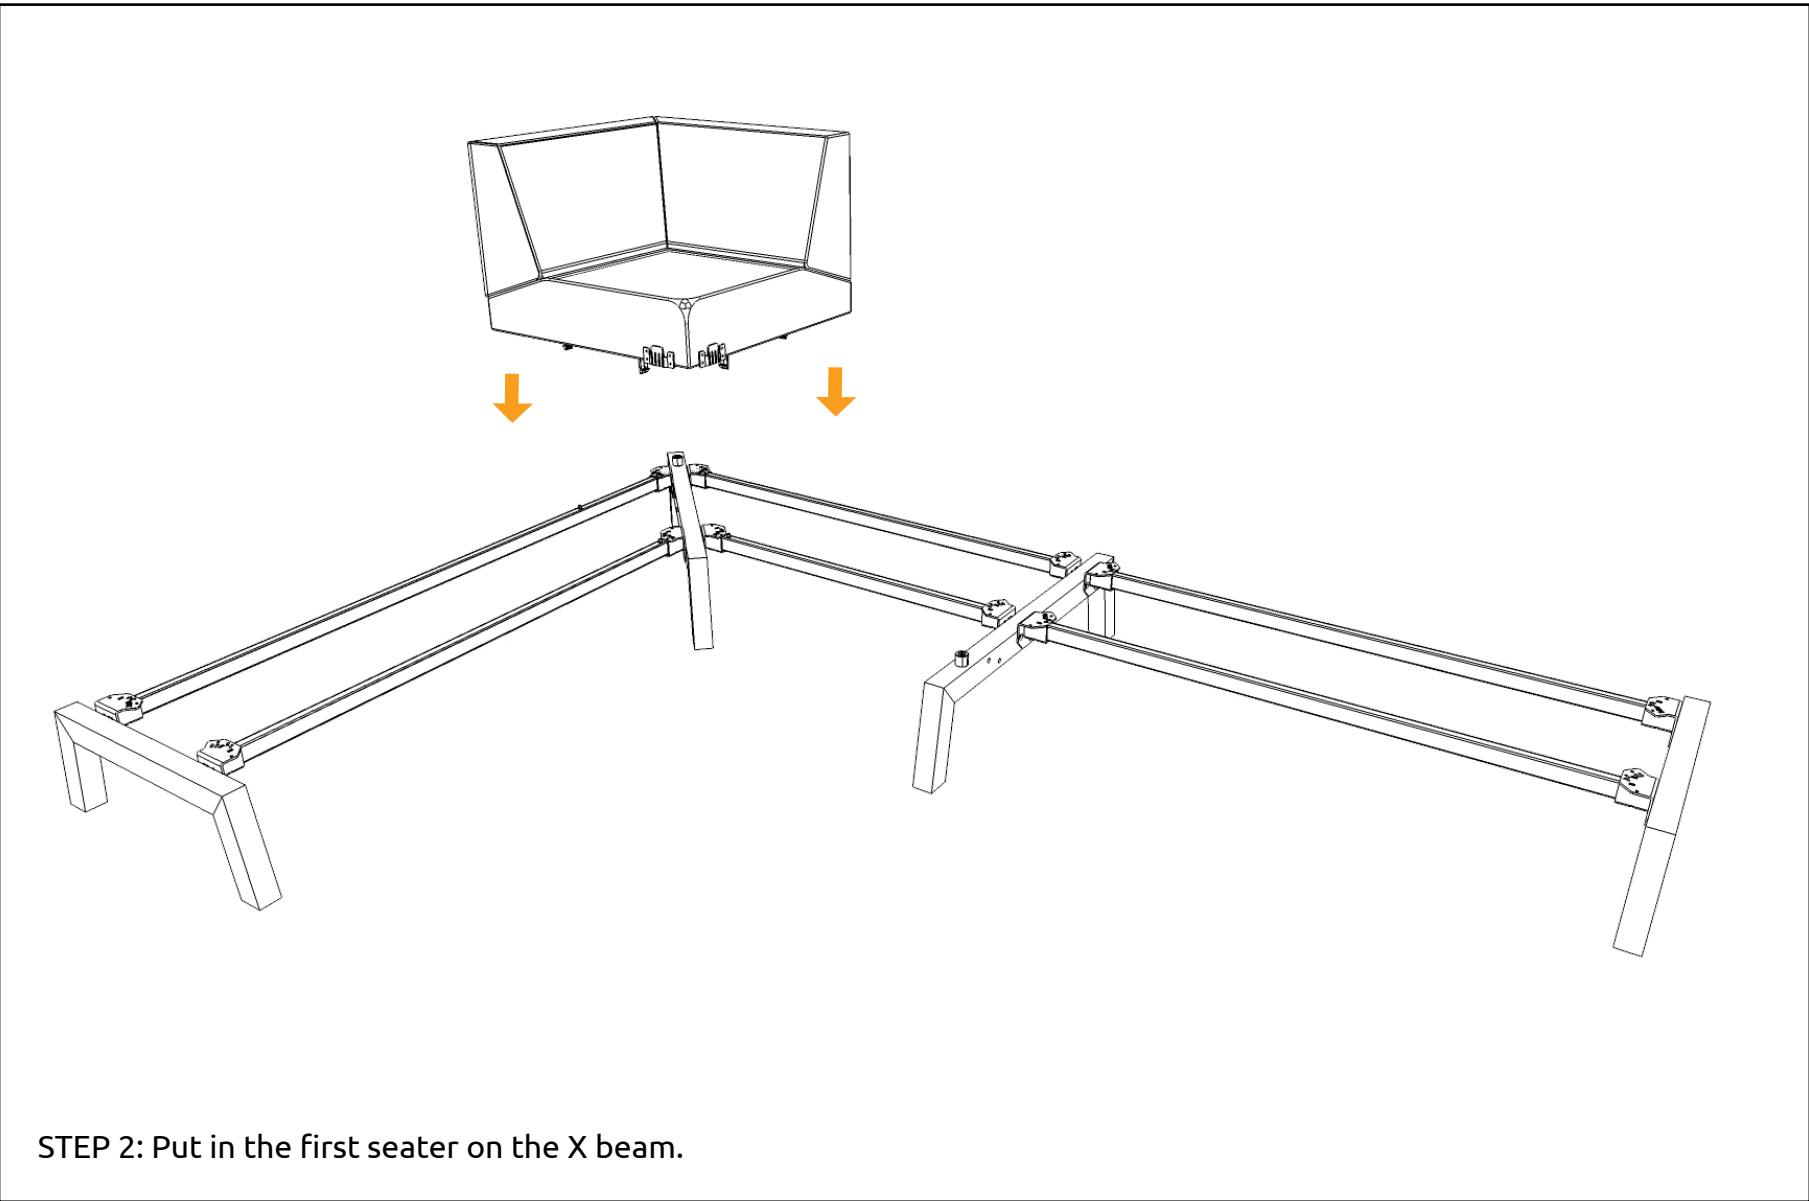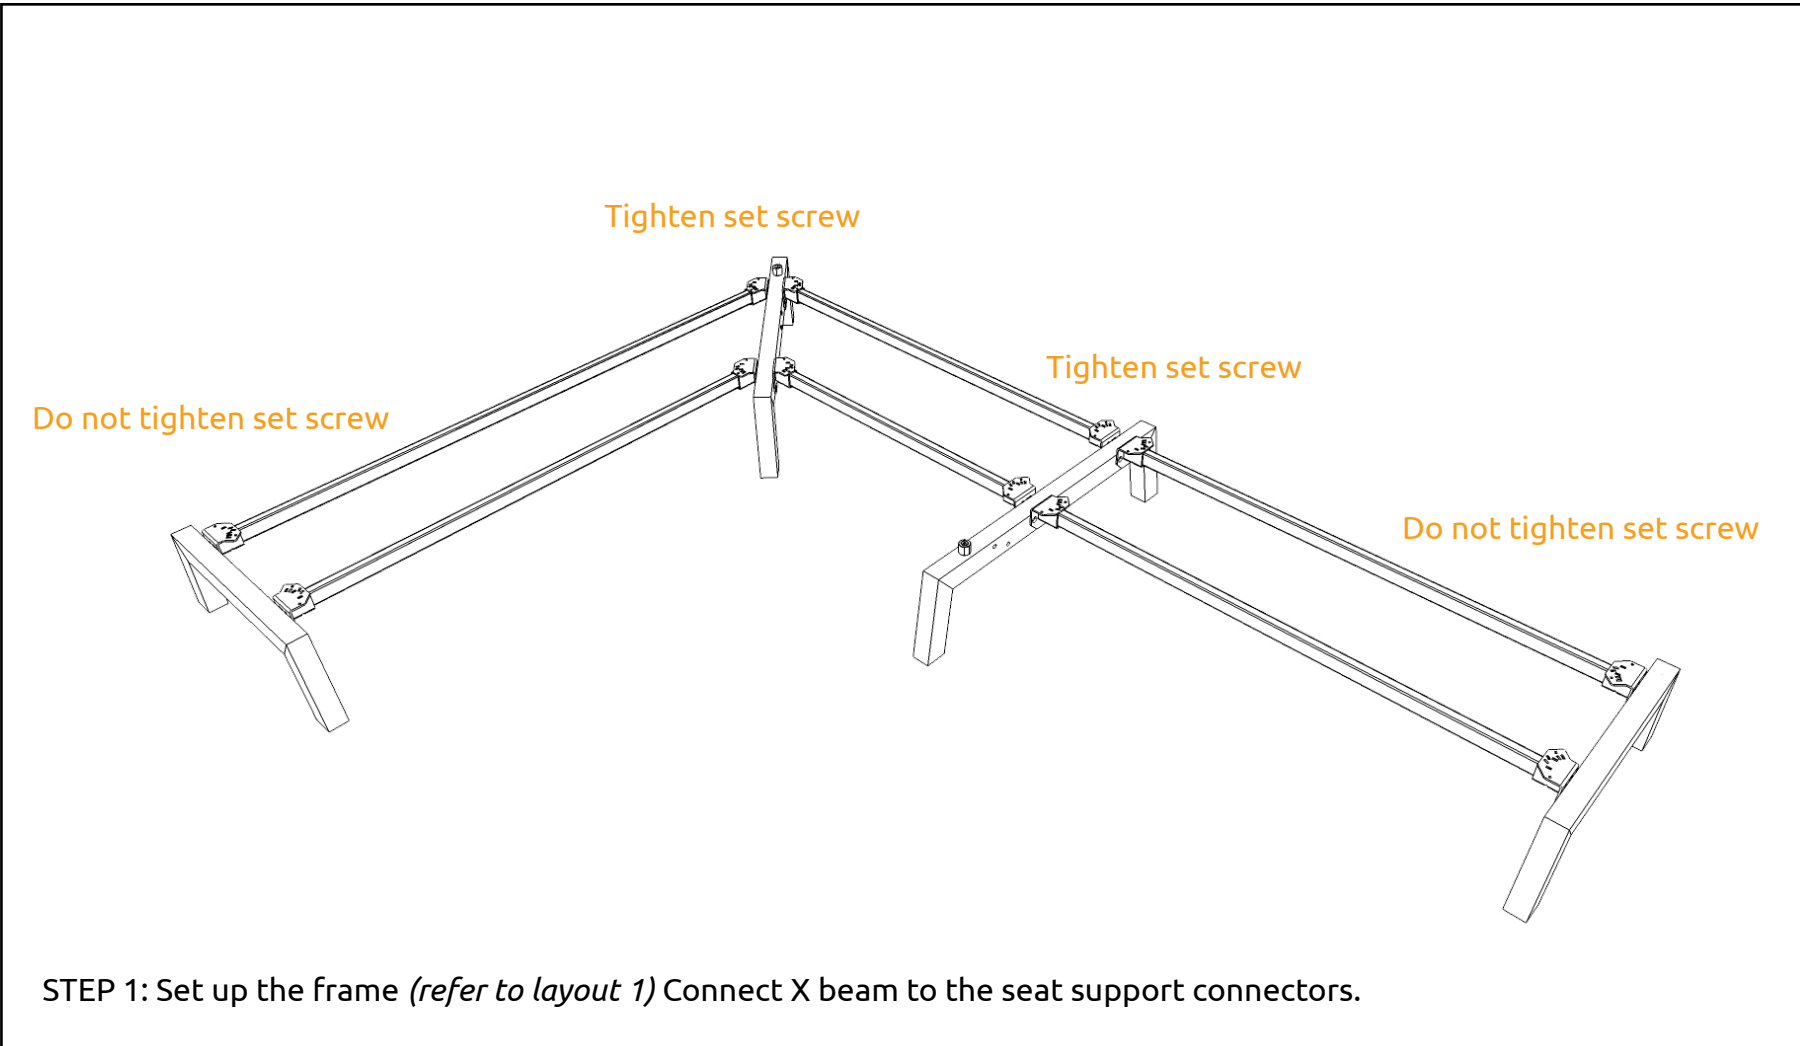




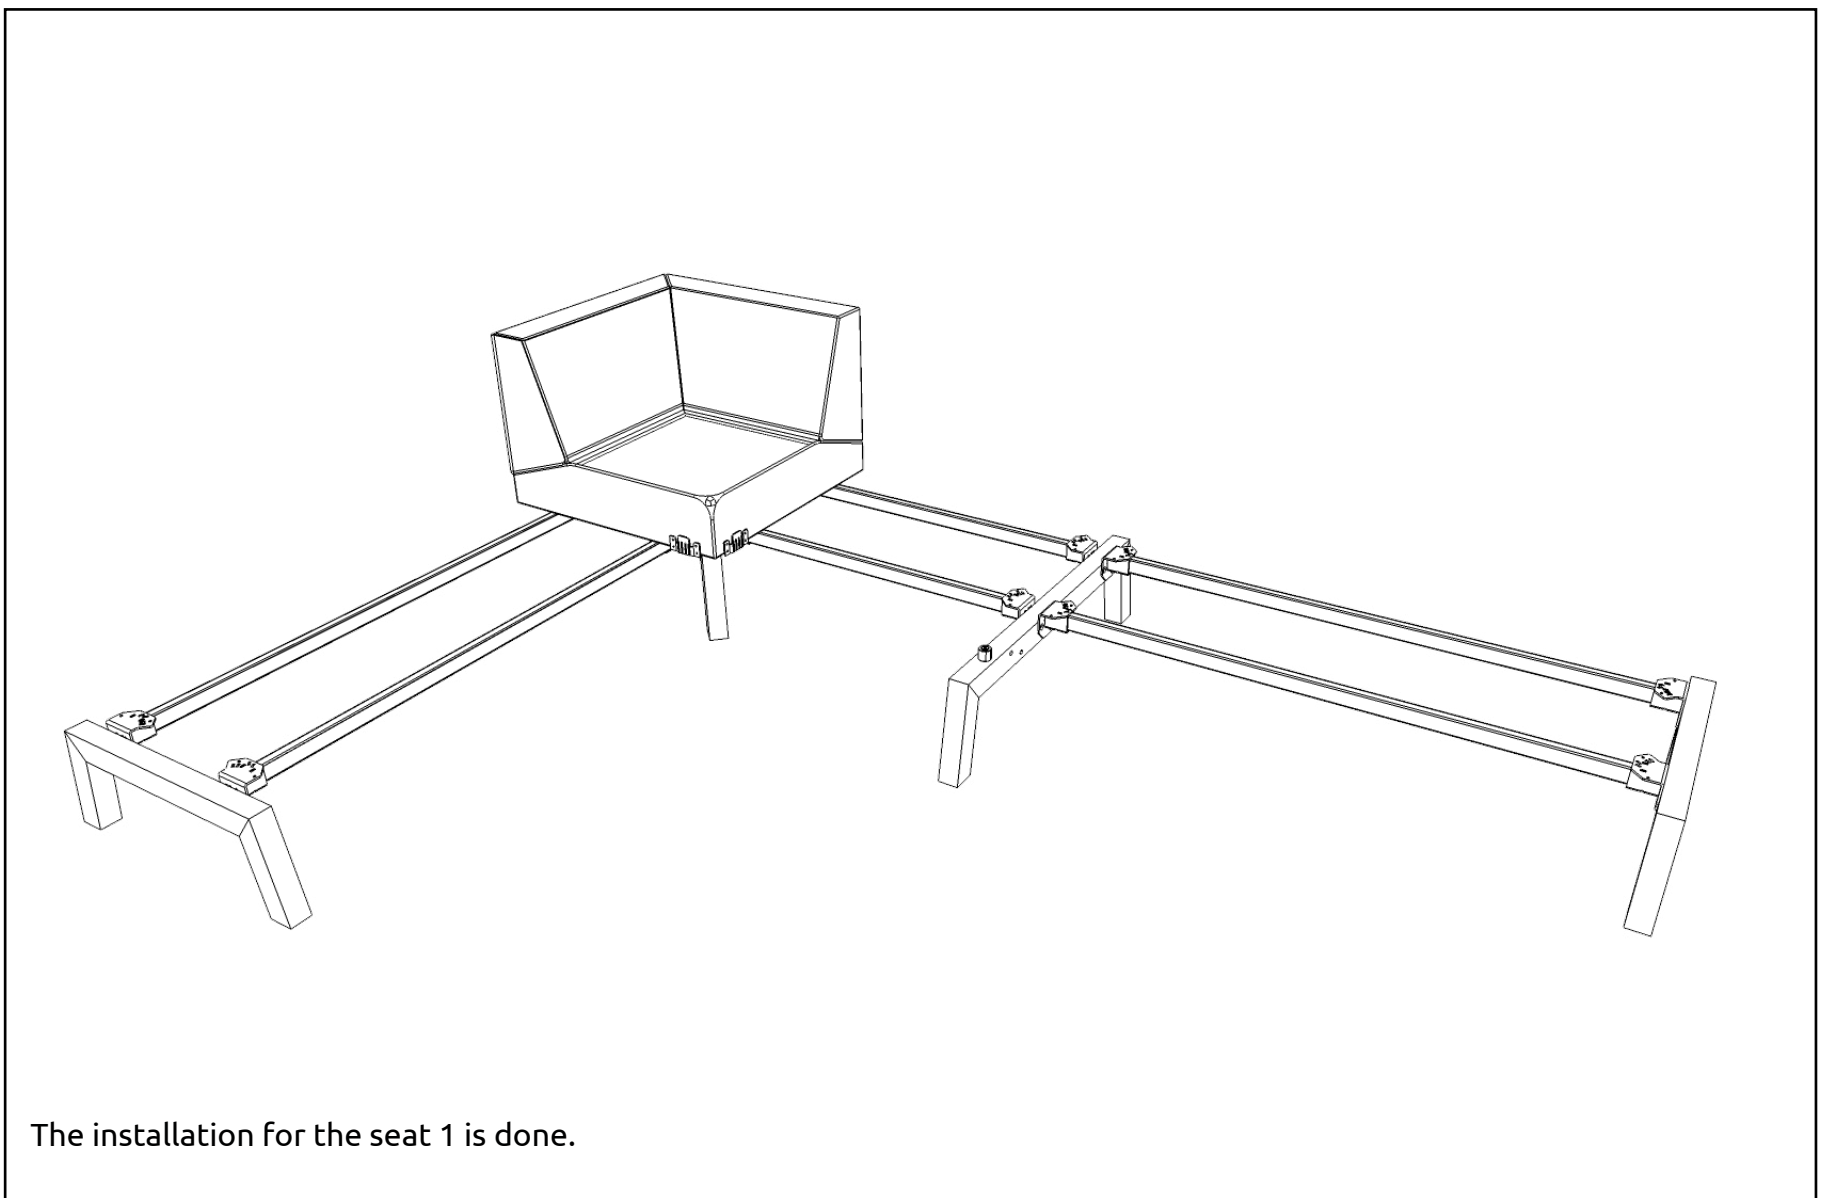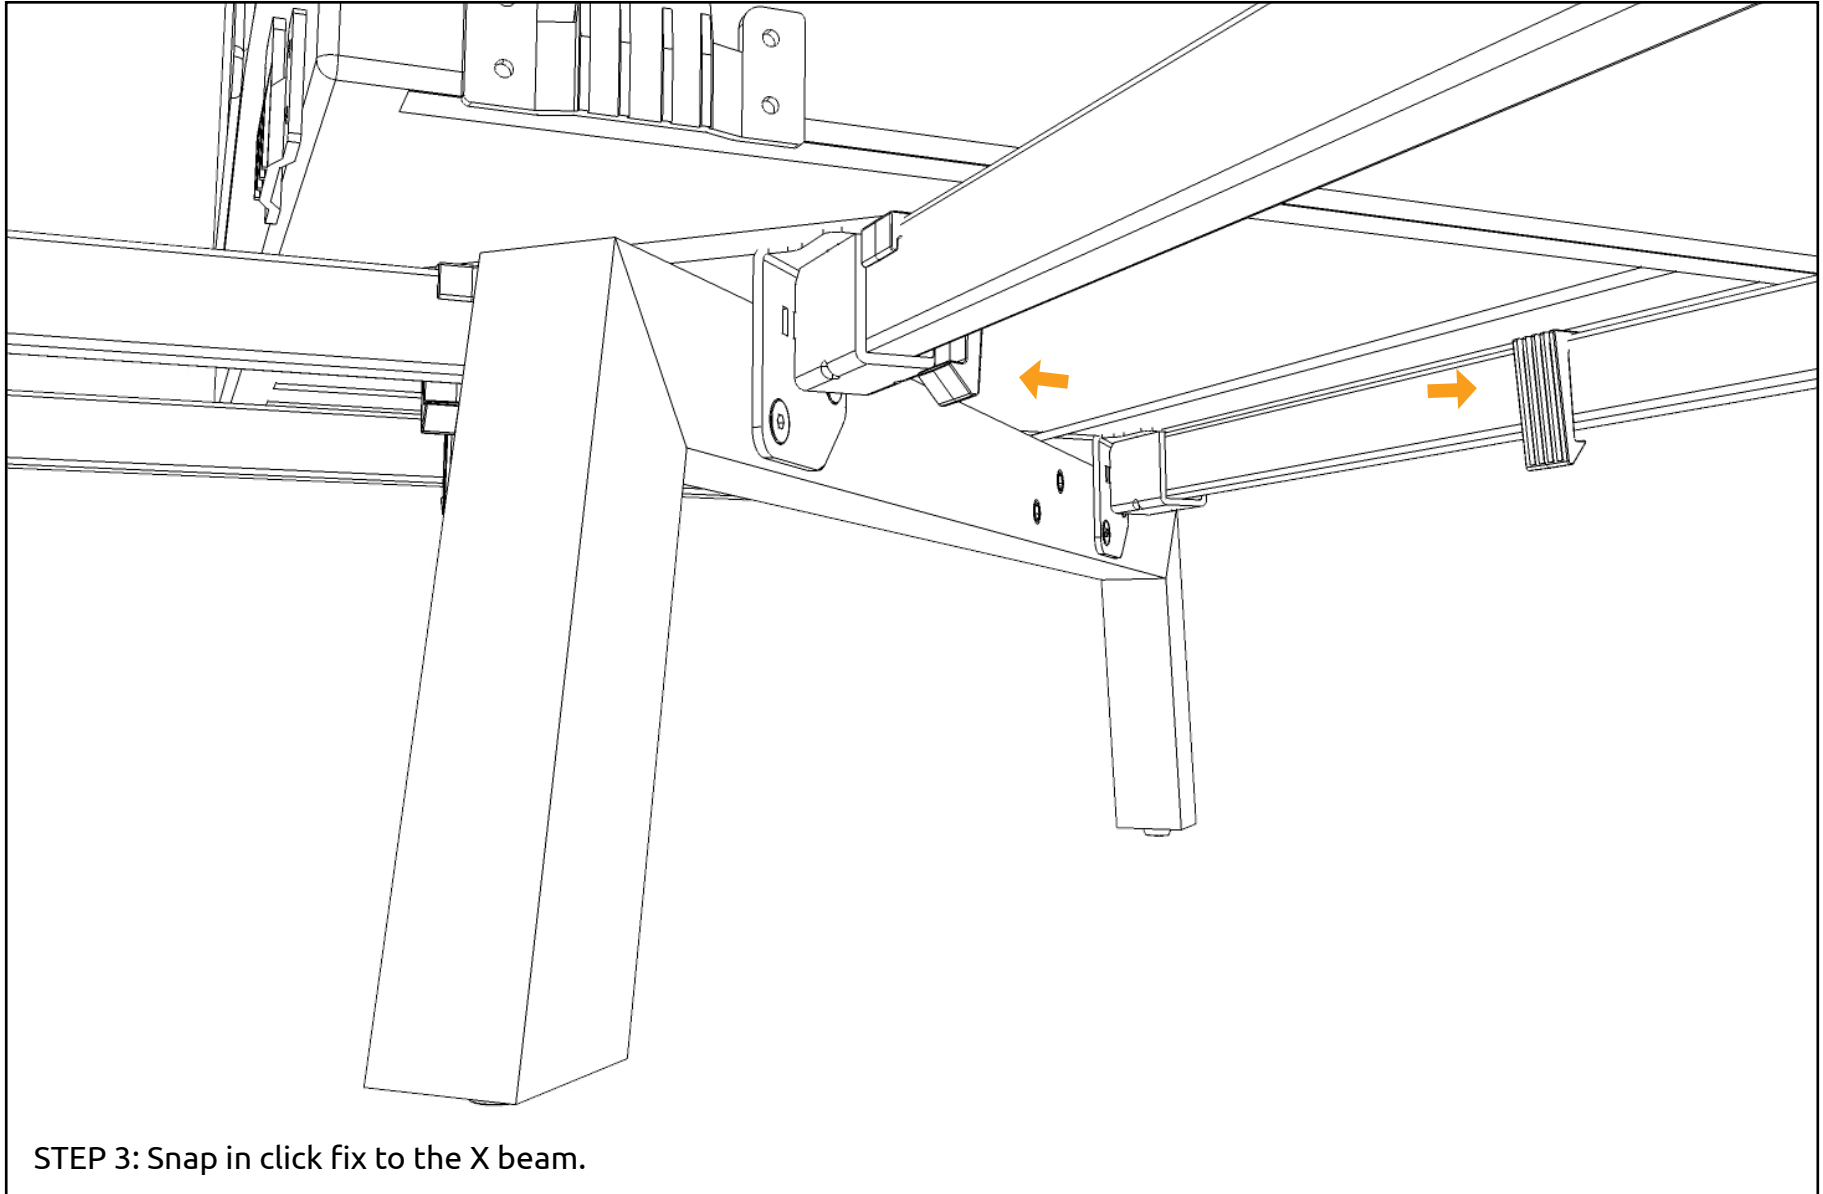


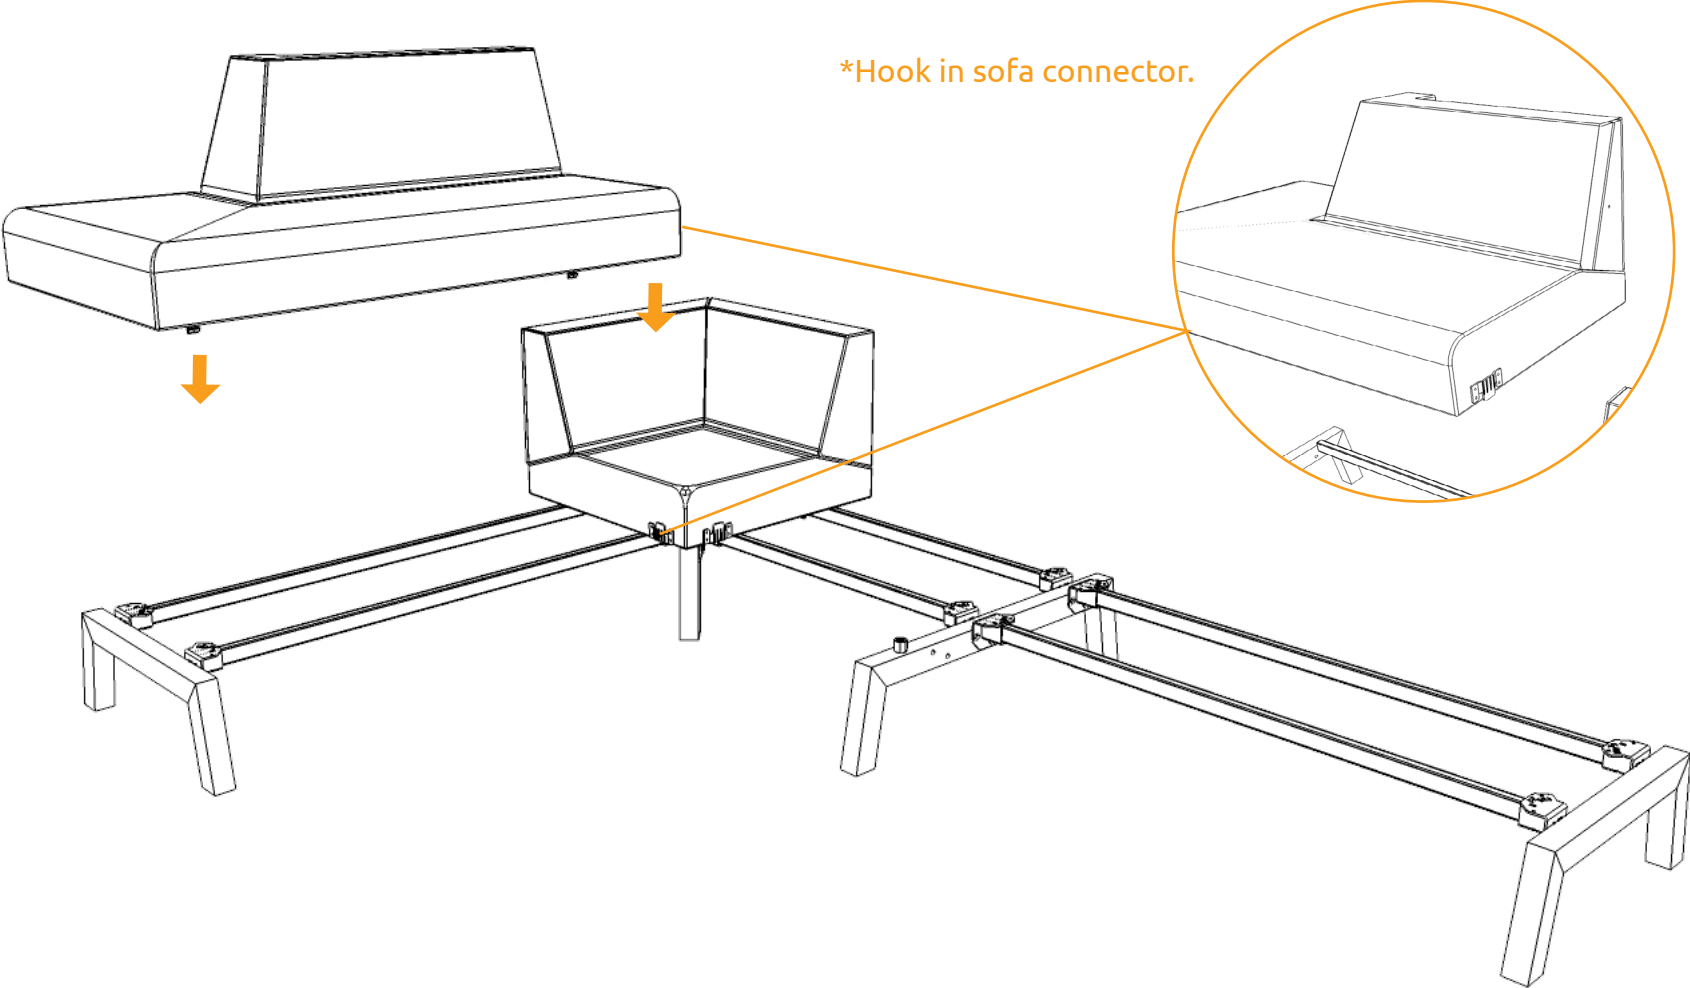


STEP 4: Repeat step 2-3 to install seat 2.

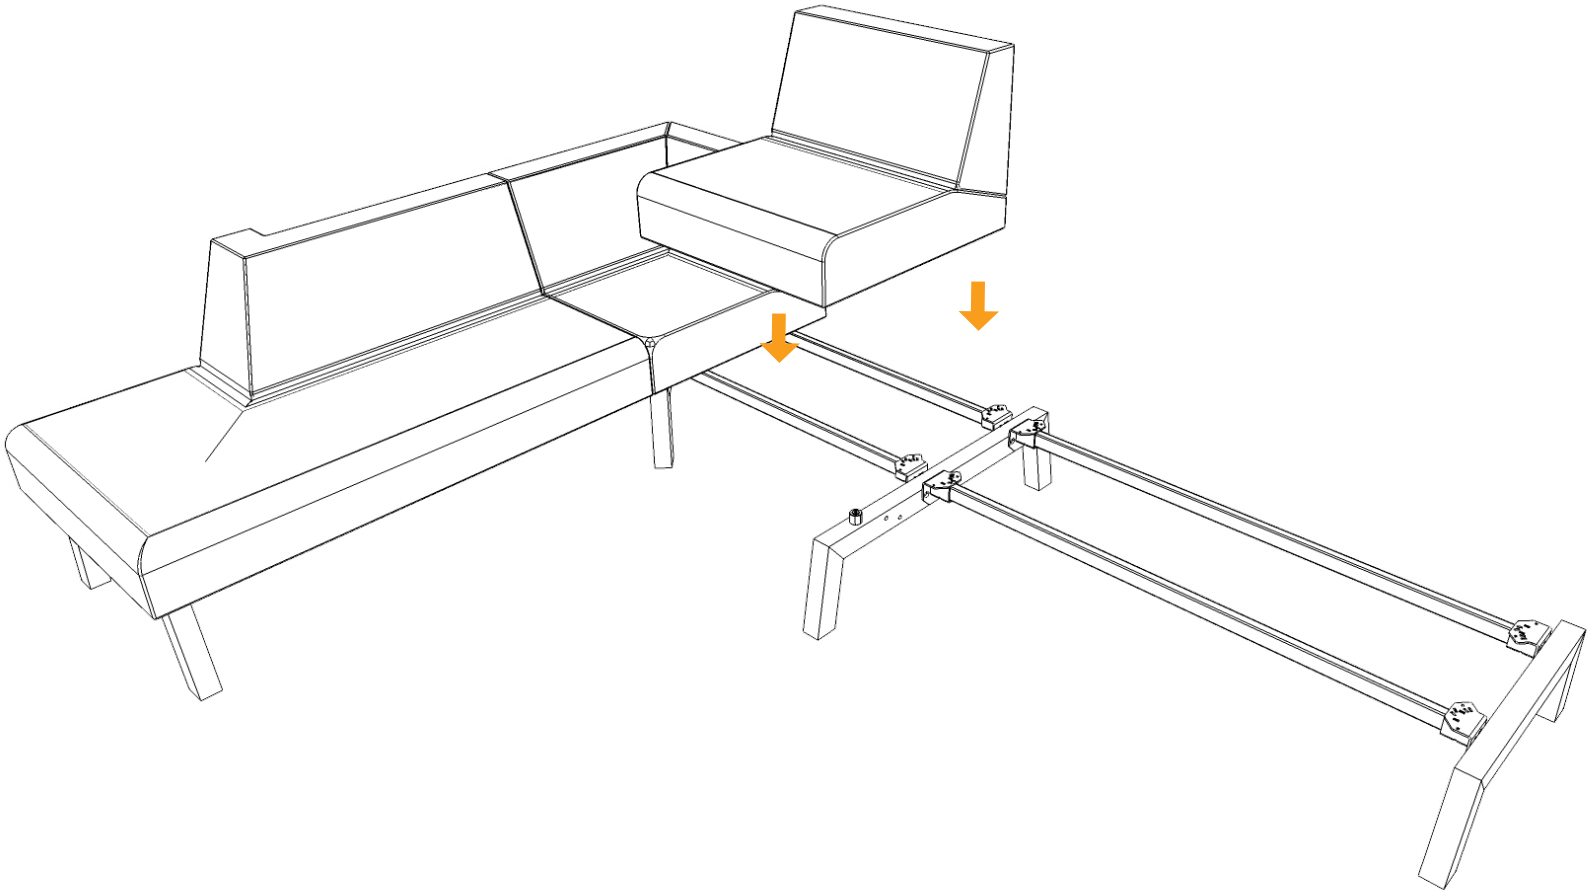



STEP 5: Repeat step 2-3 to install seat 3.


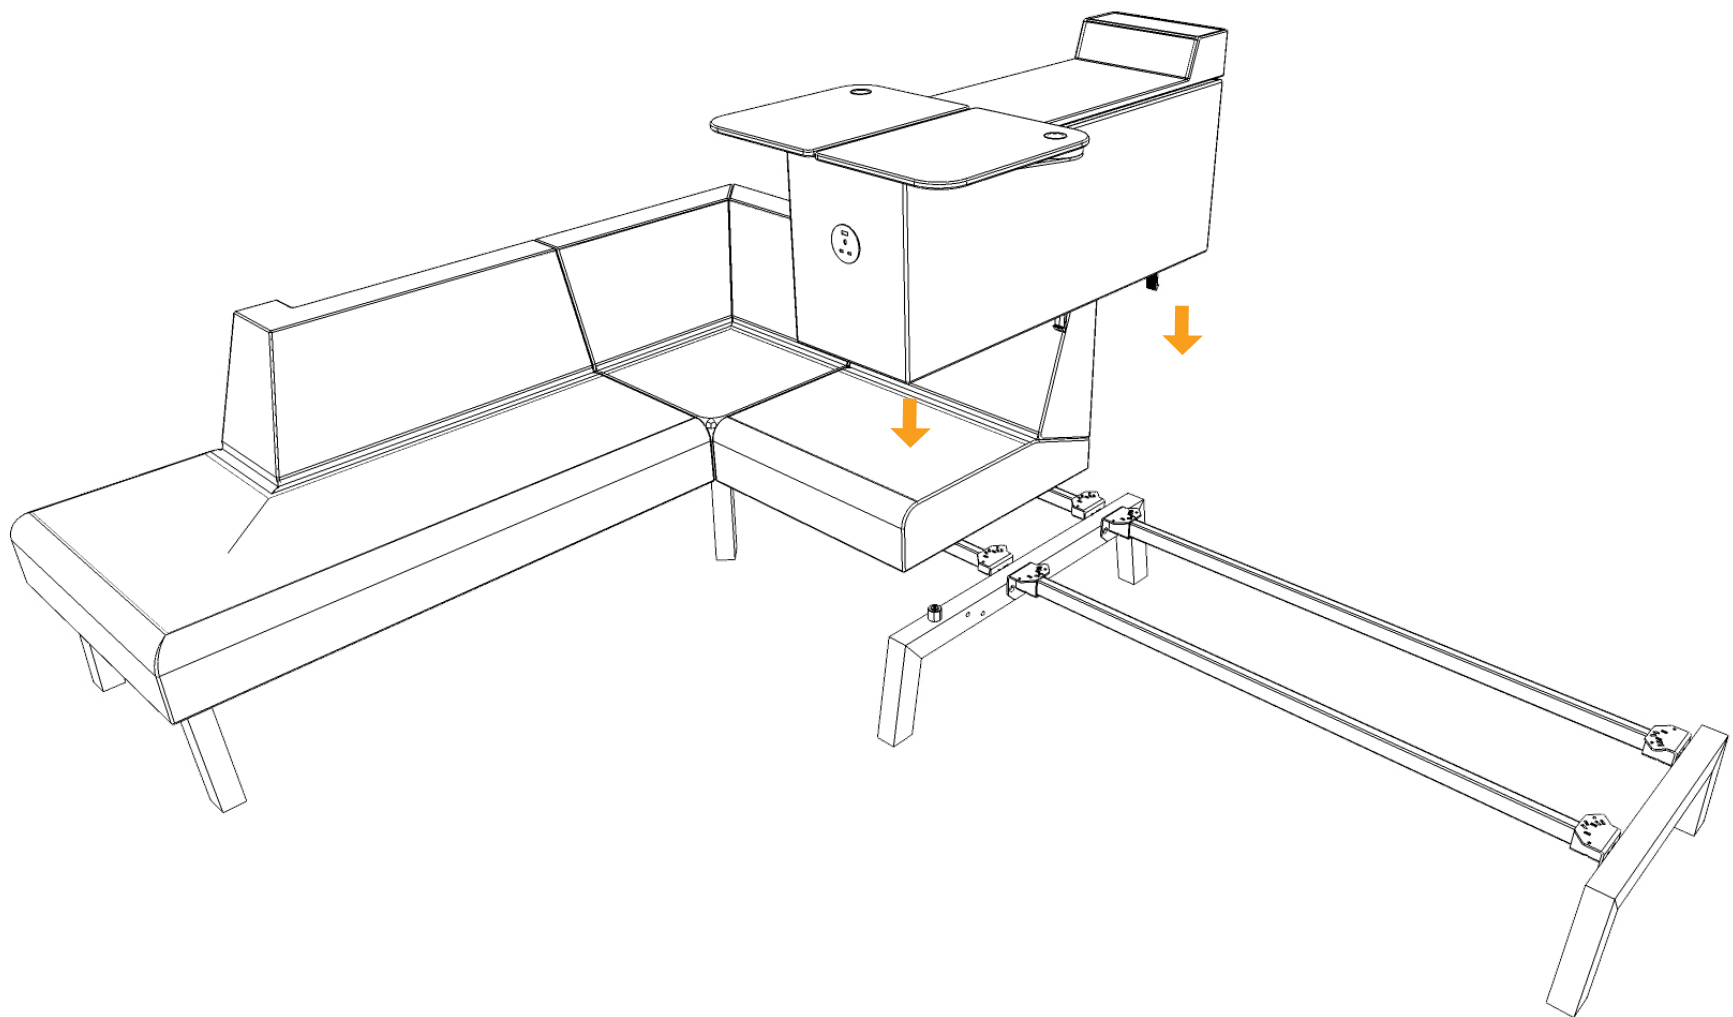



STEP 6: Repeat step 2-3 to install seat 4 together with the swivel top (*refer to layout 1 for swivel top installation*).

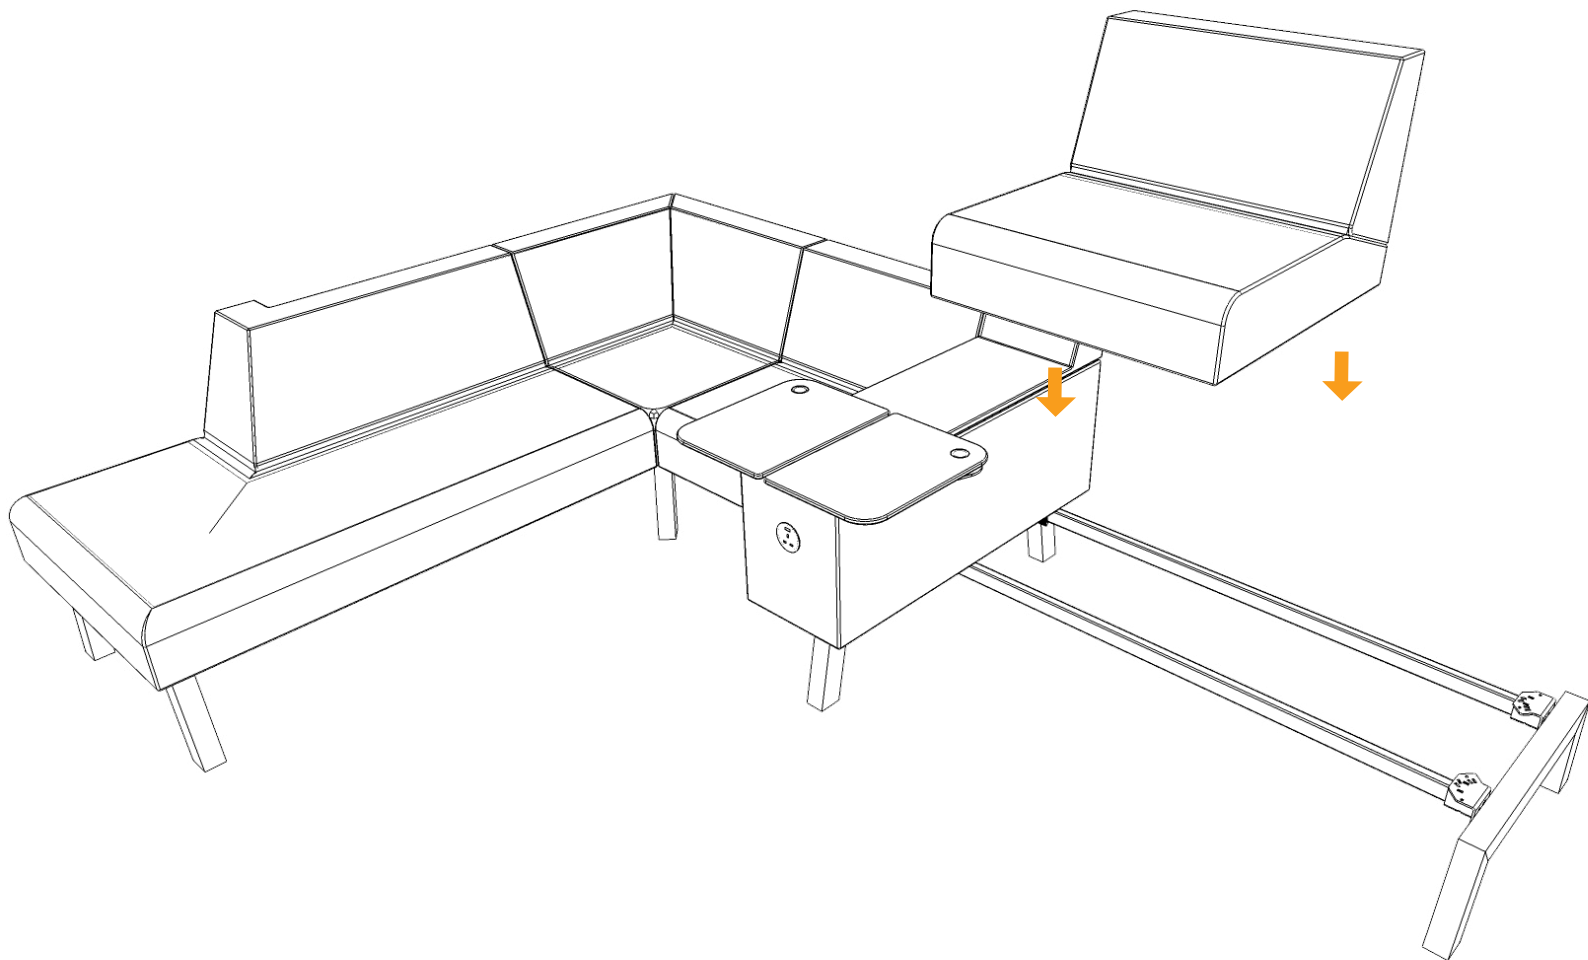


STEP 7: Repeat step 2-3 to install seat 5.

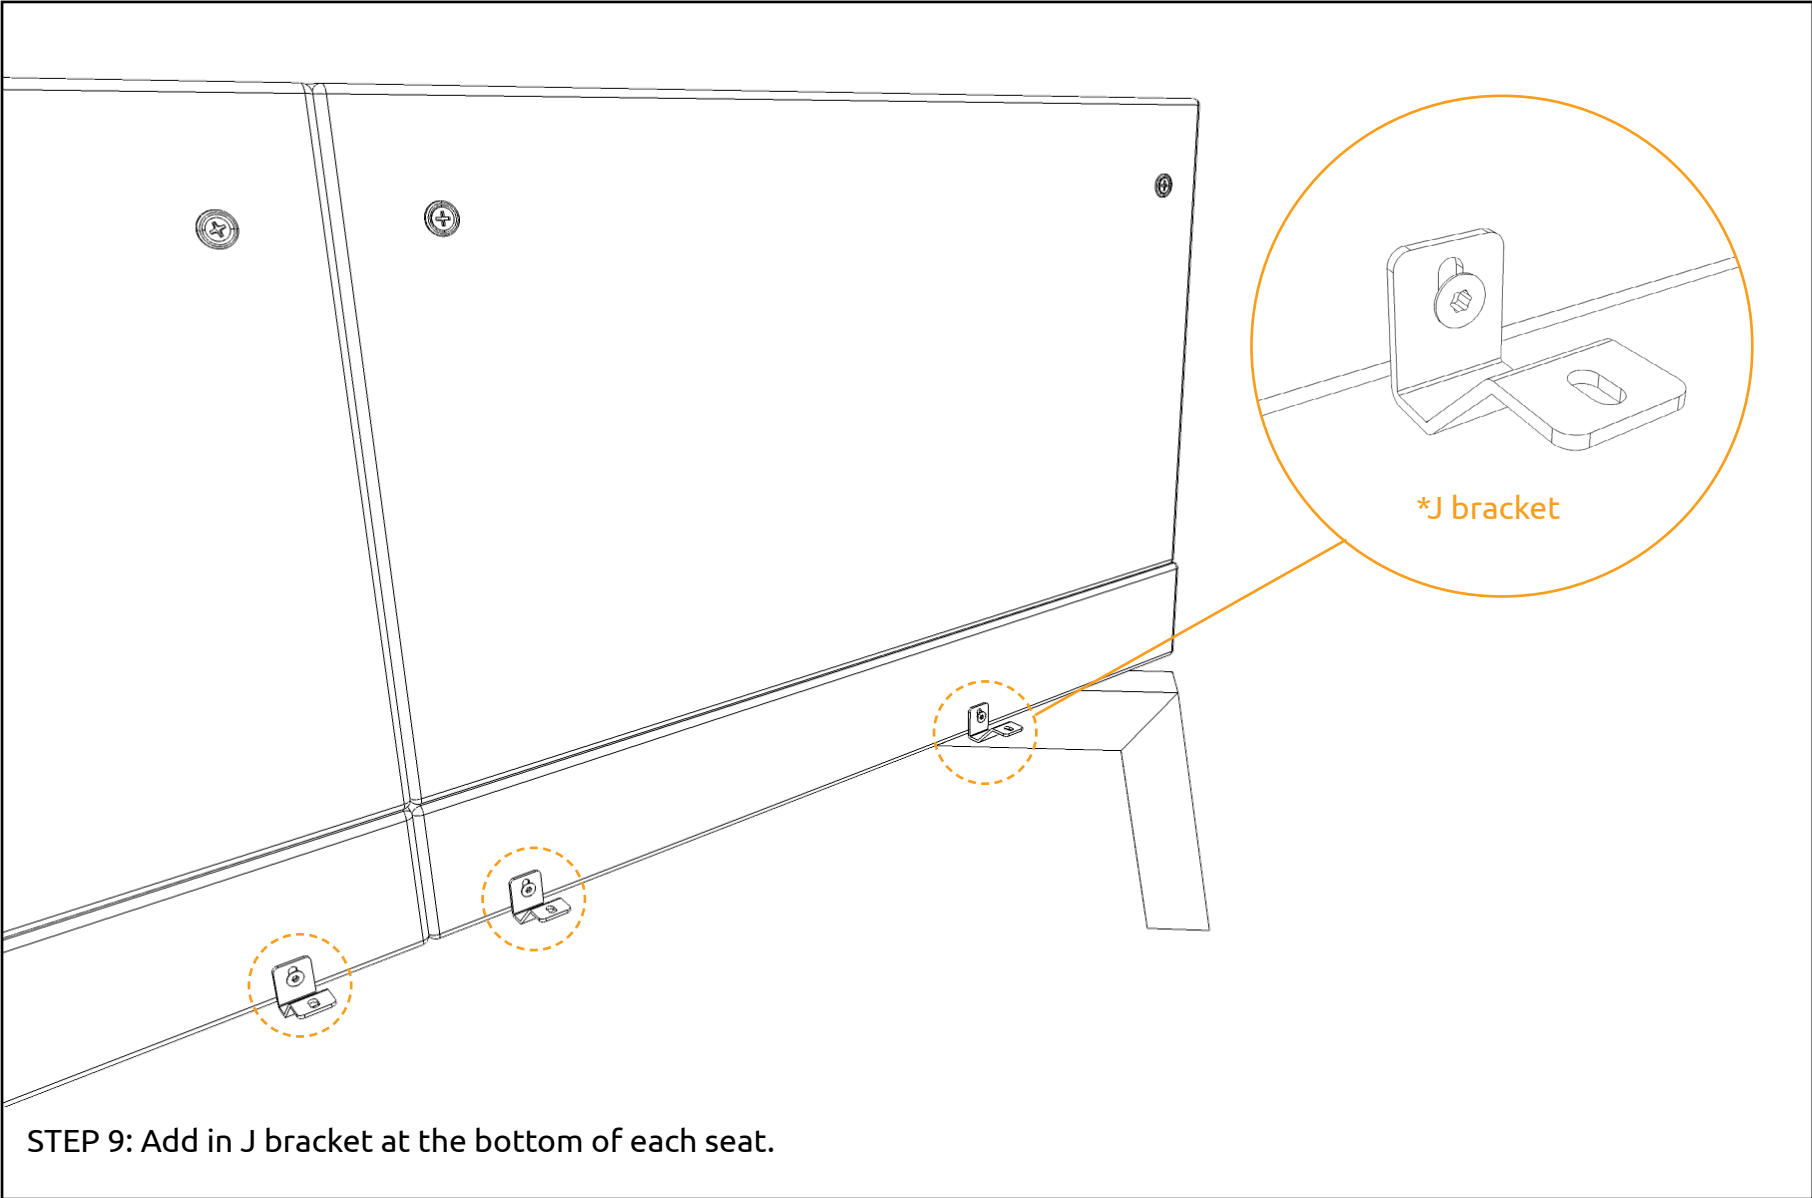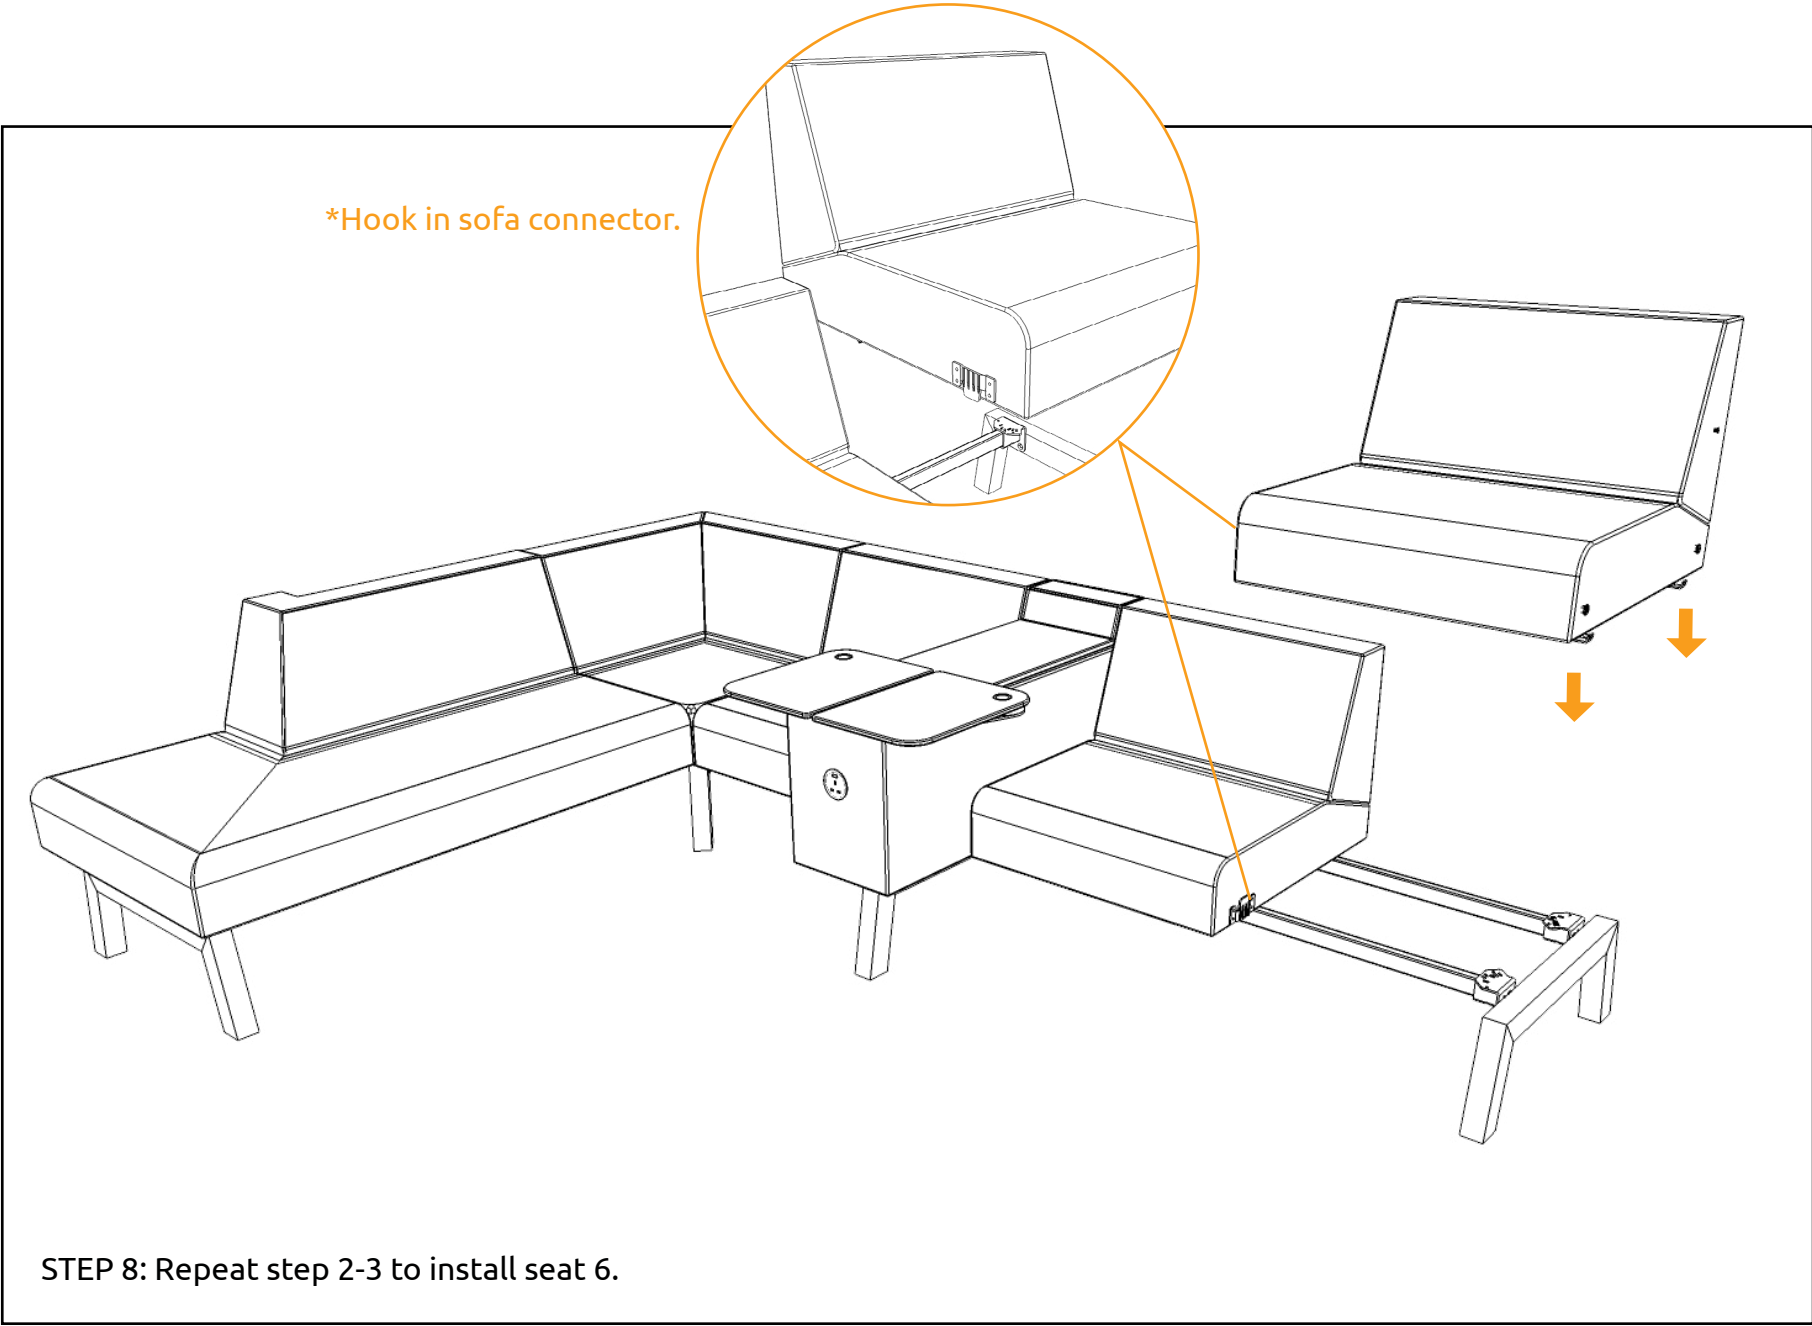

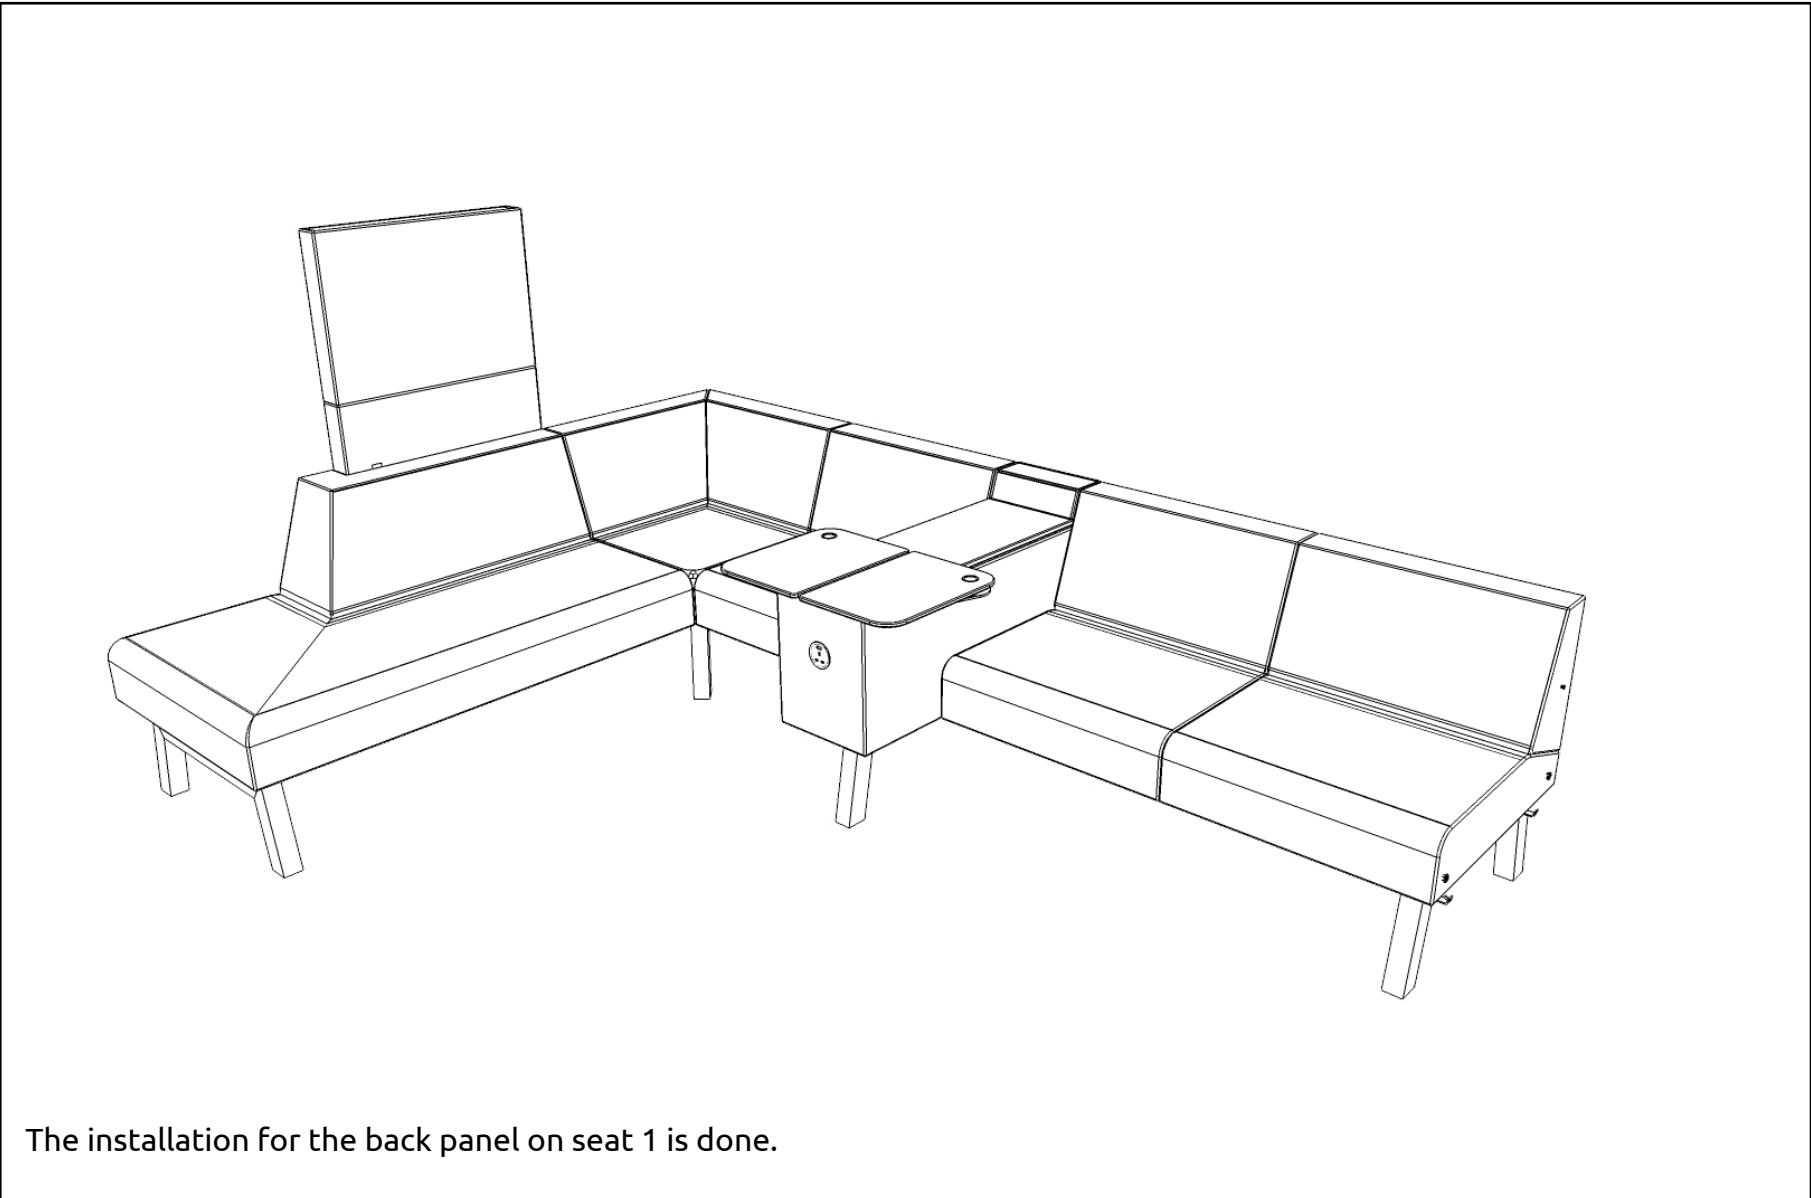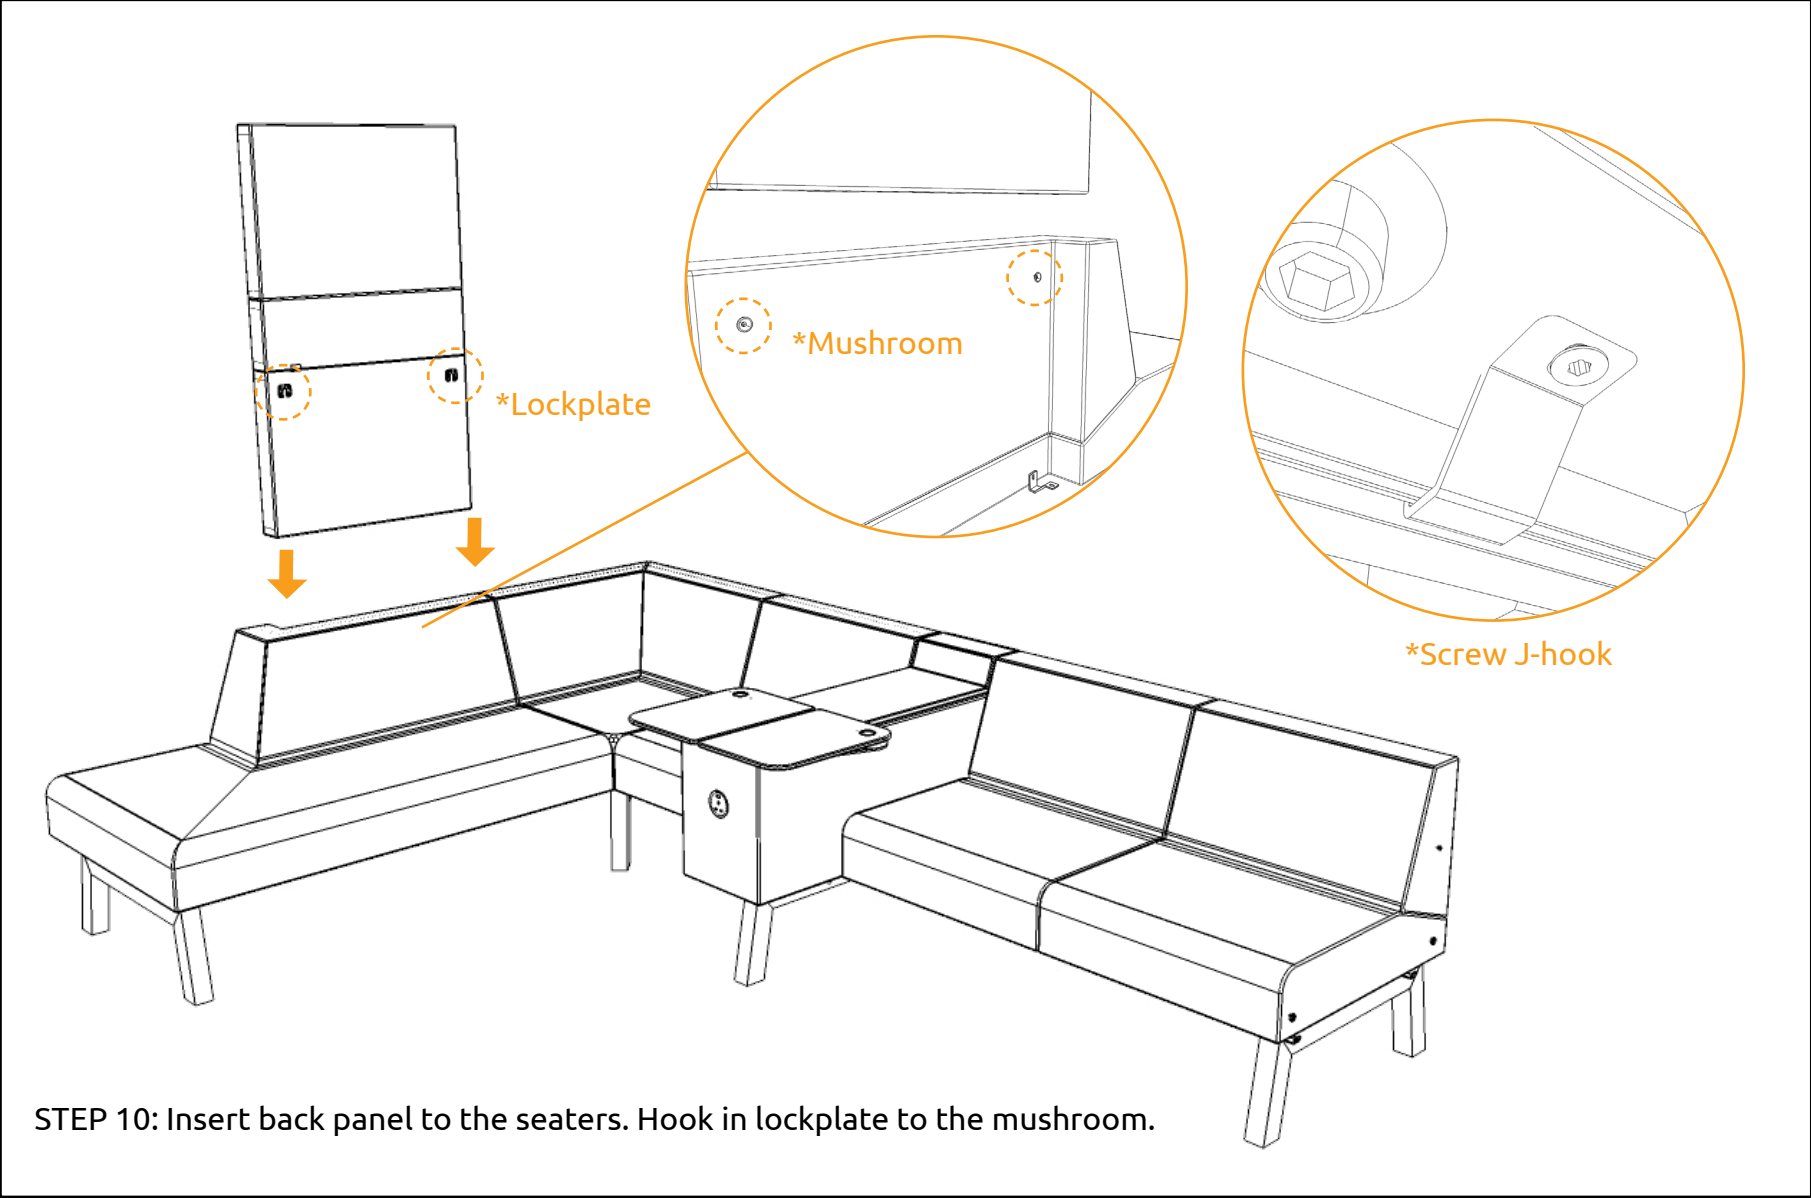

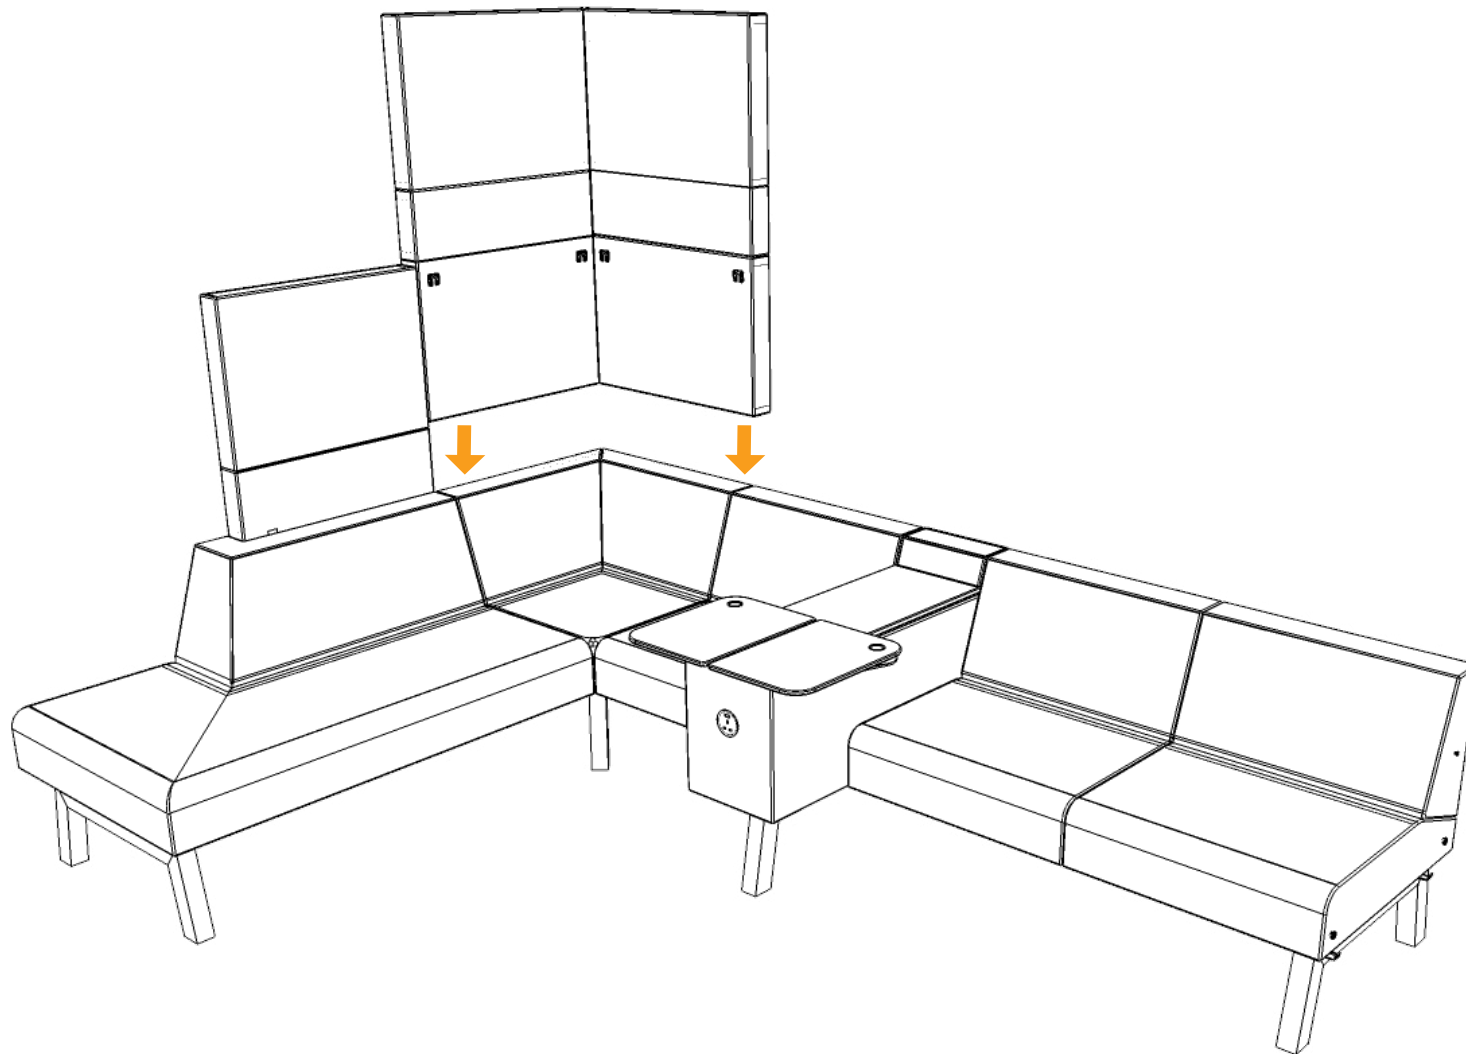


STEP 11: Repeat step 10 to install back panel for seat 2.

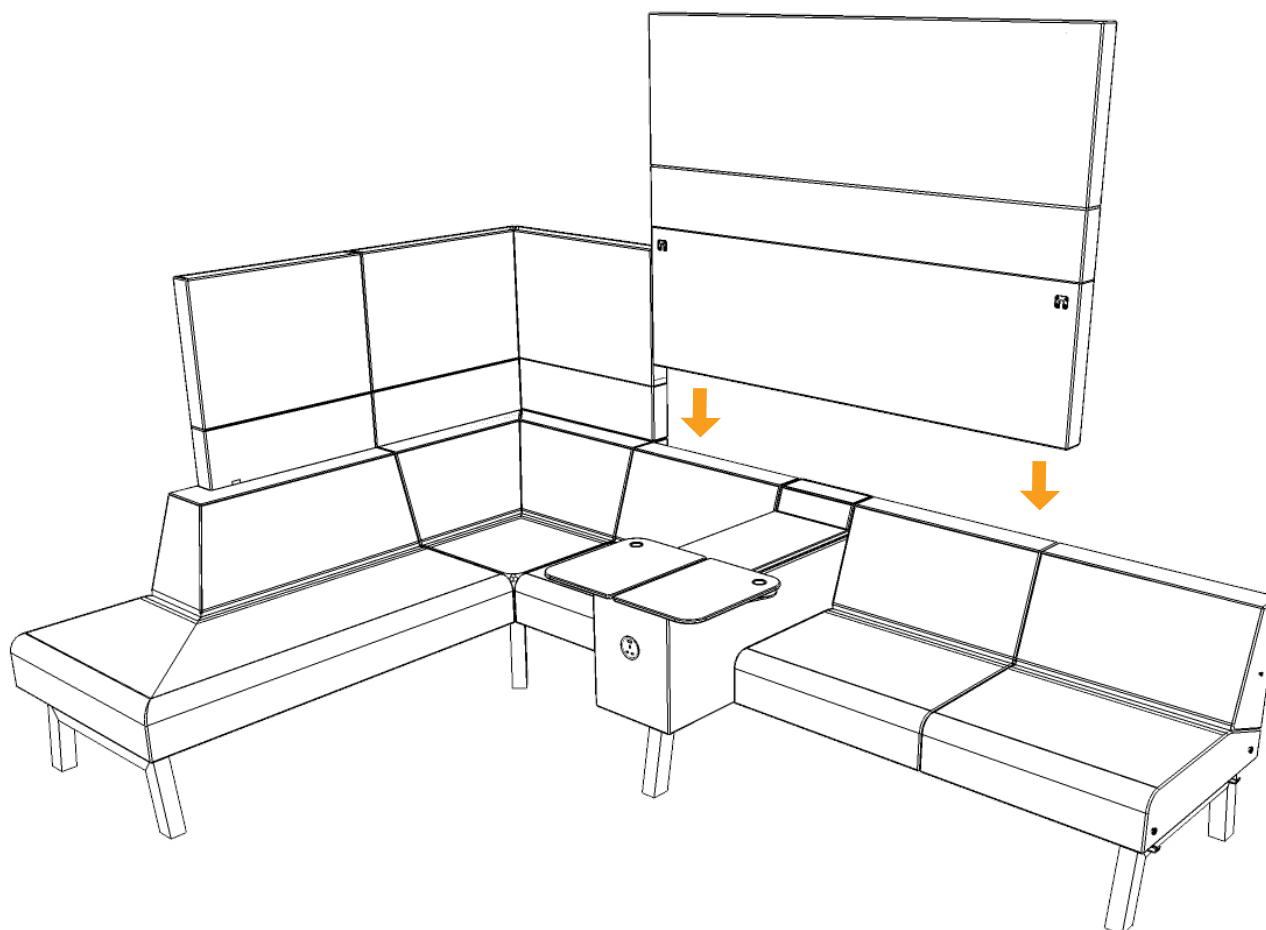


STEP 12: Repeat step 10 to install back panel for seat 3,4 and 5.




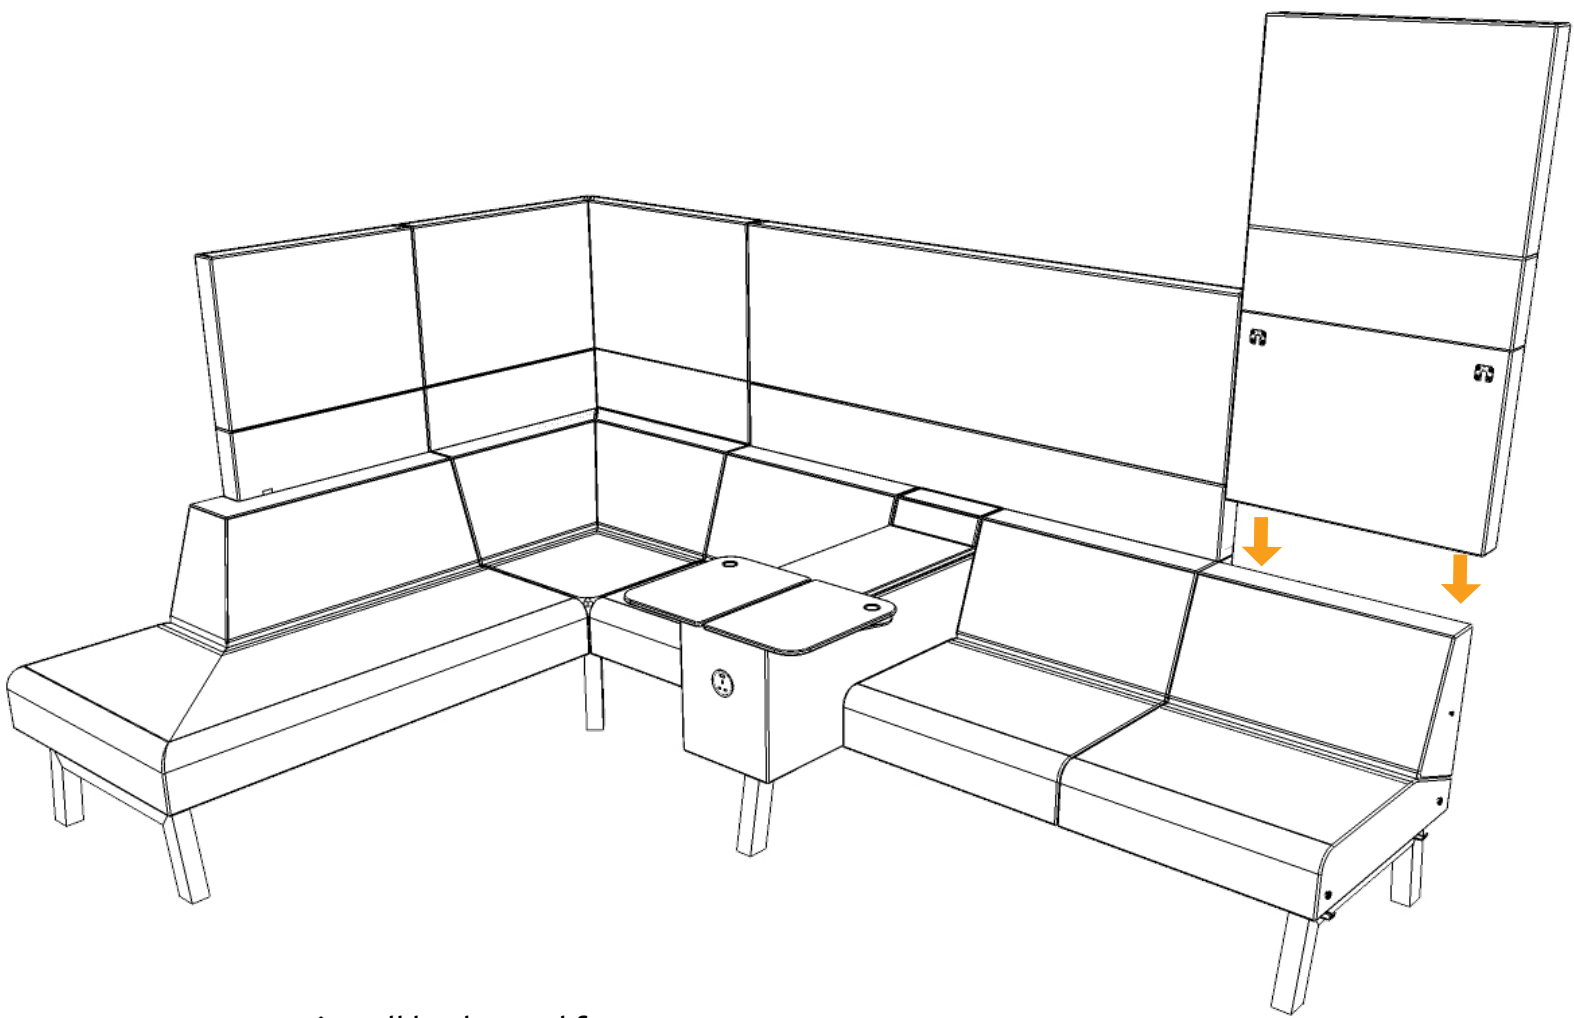

STEP 13: Repeat step 10 to install back panel for seat 6.

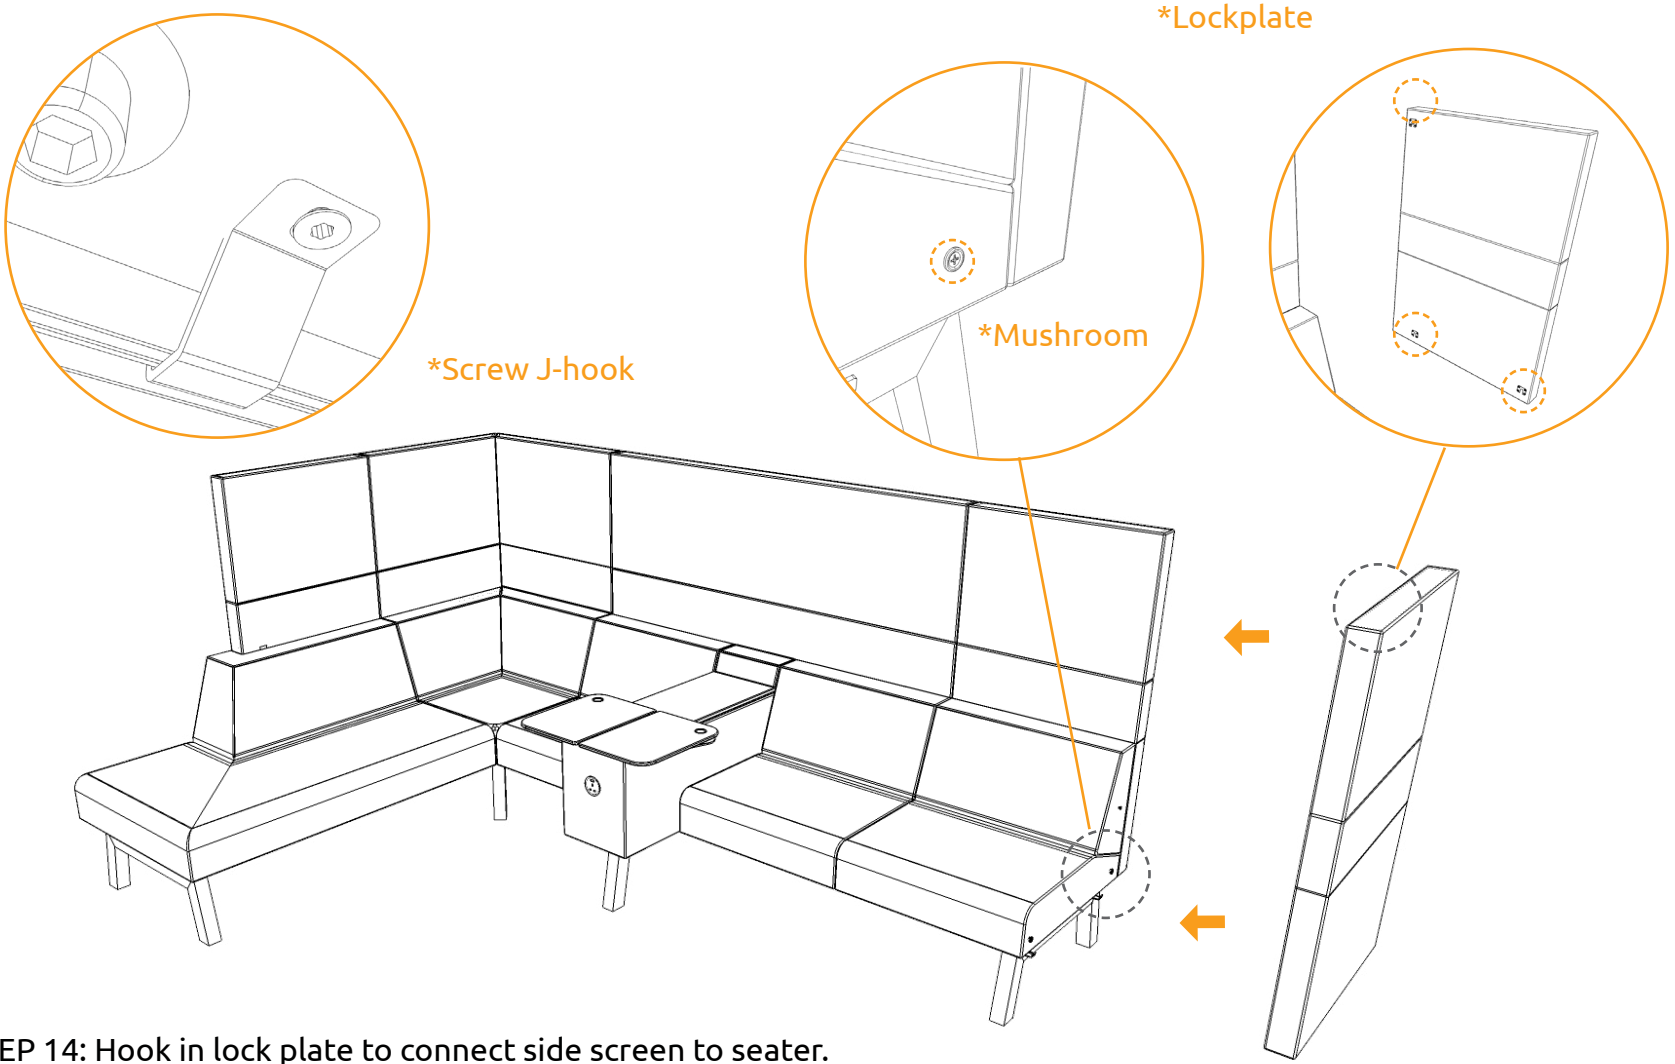

STEP 14: Hook in lock plate to connect side screen to seater.  
Finally, screw and tighten the J-hook to the panel after all panels are placed.

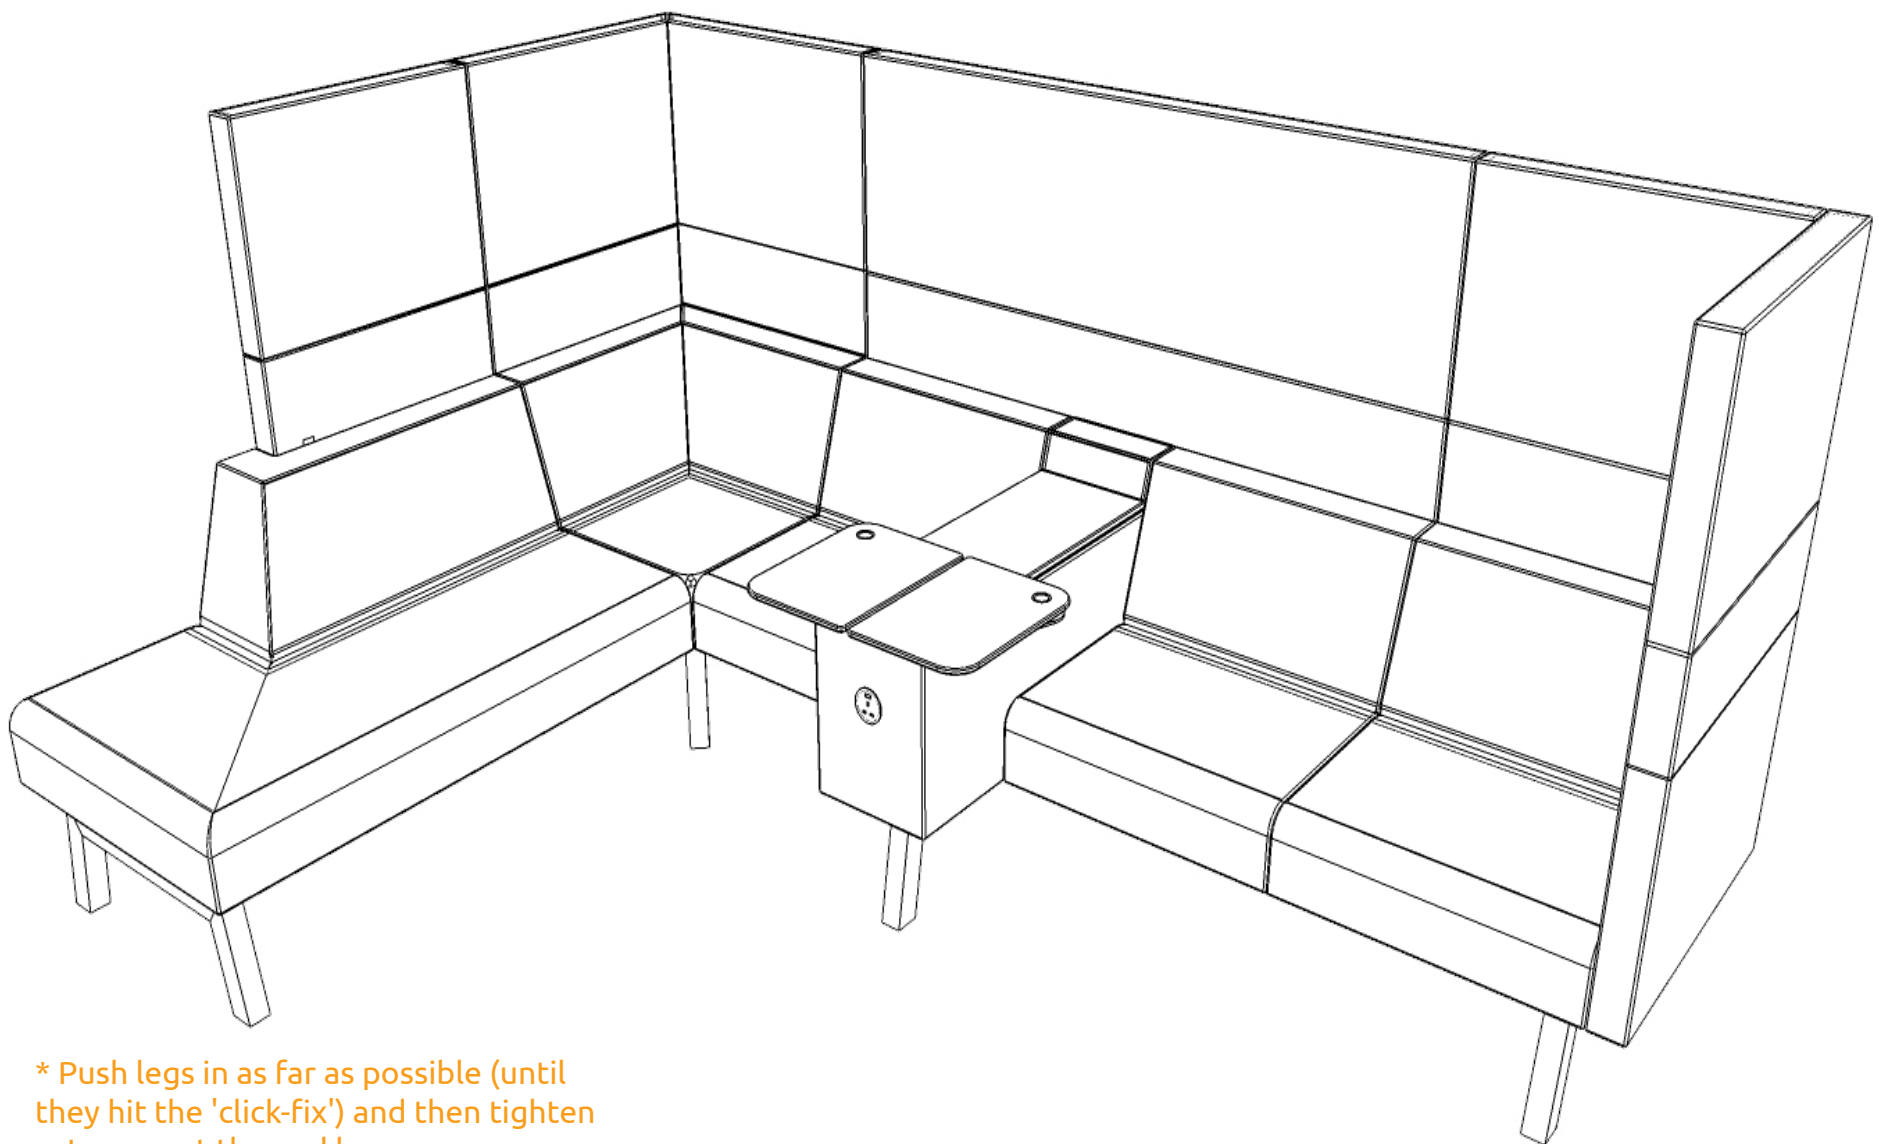



\* Push legs in as far as possible (until they hit the 'click-fix') and then tighten set screw at the end leg


\* Push legs in as far as possible (until they hit the 'click-fix') and then tighten set screw at the end leg

THE INSTALLATION FOR LAYOUT 2 IS COMPLETE.




# LAYOUT 3

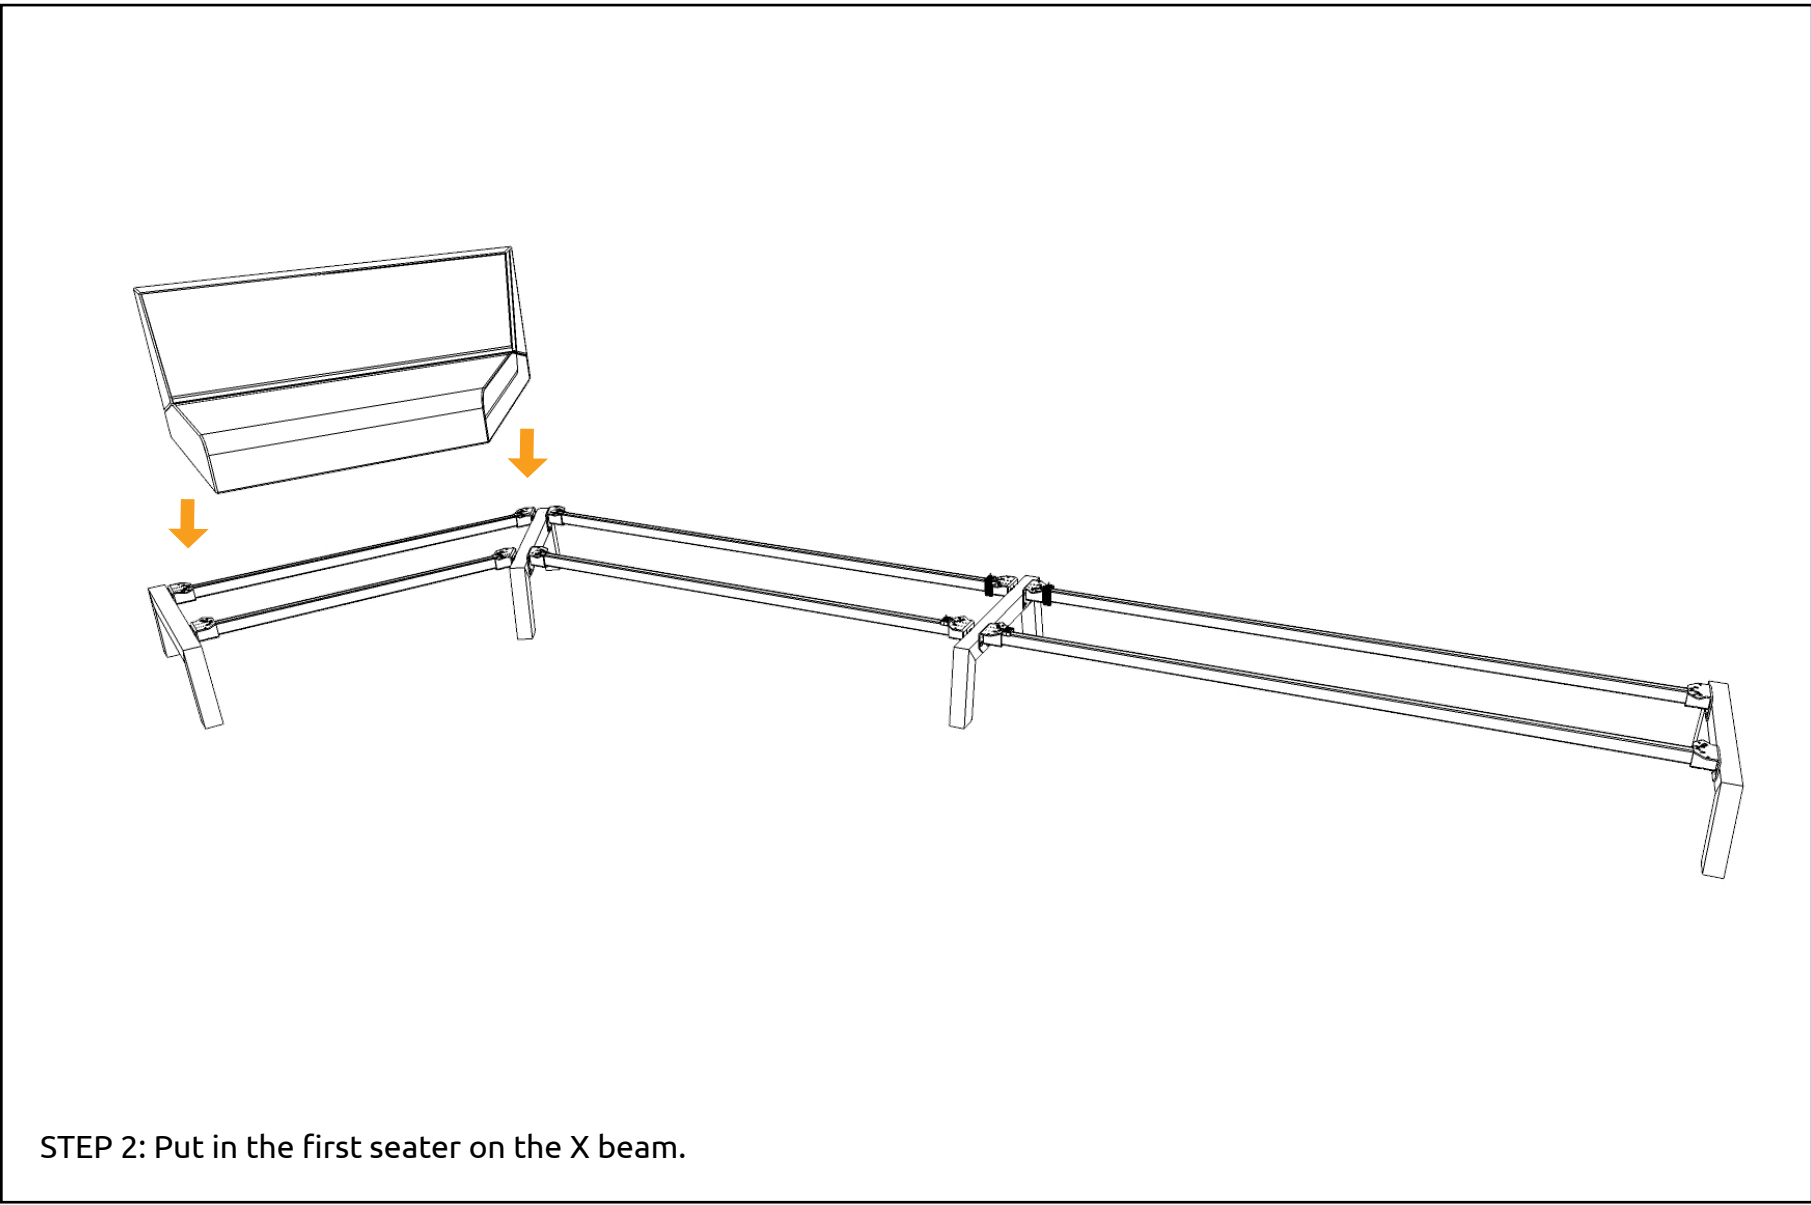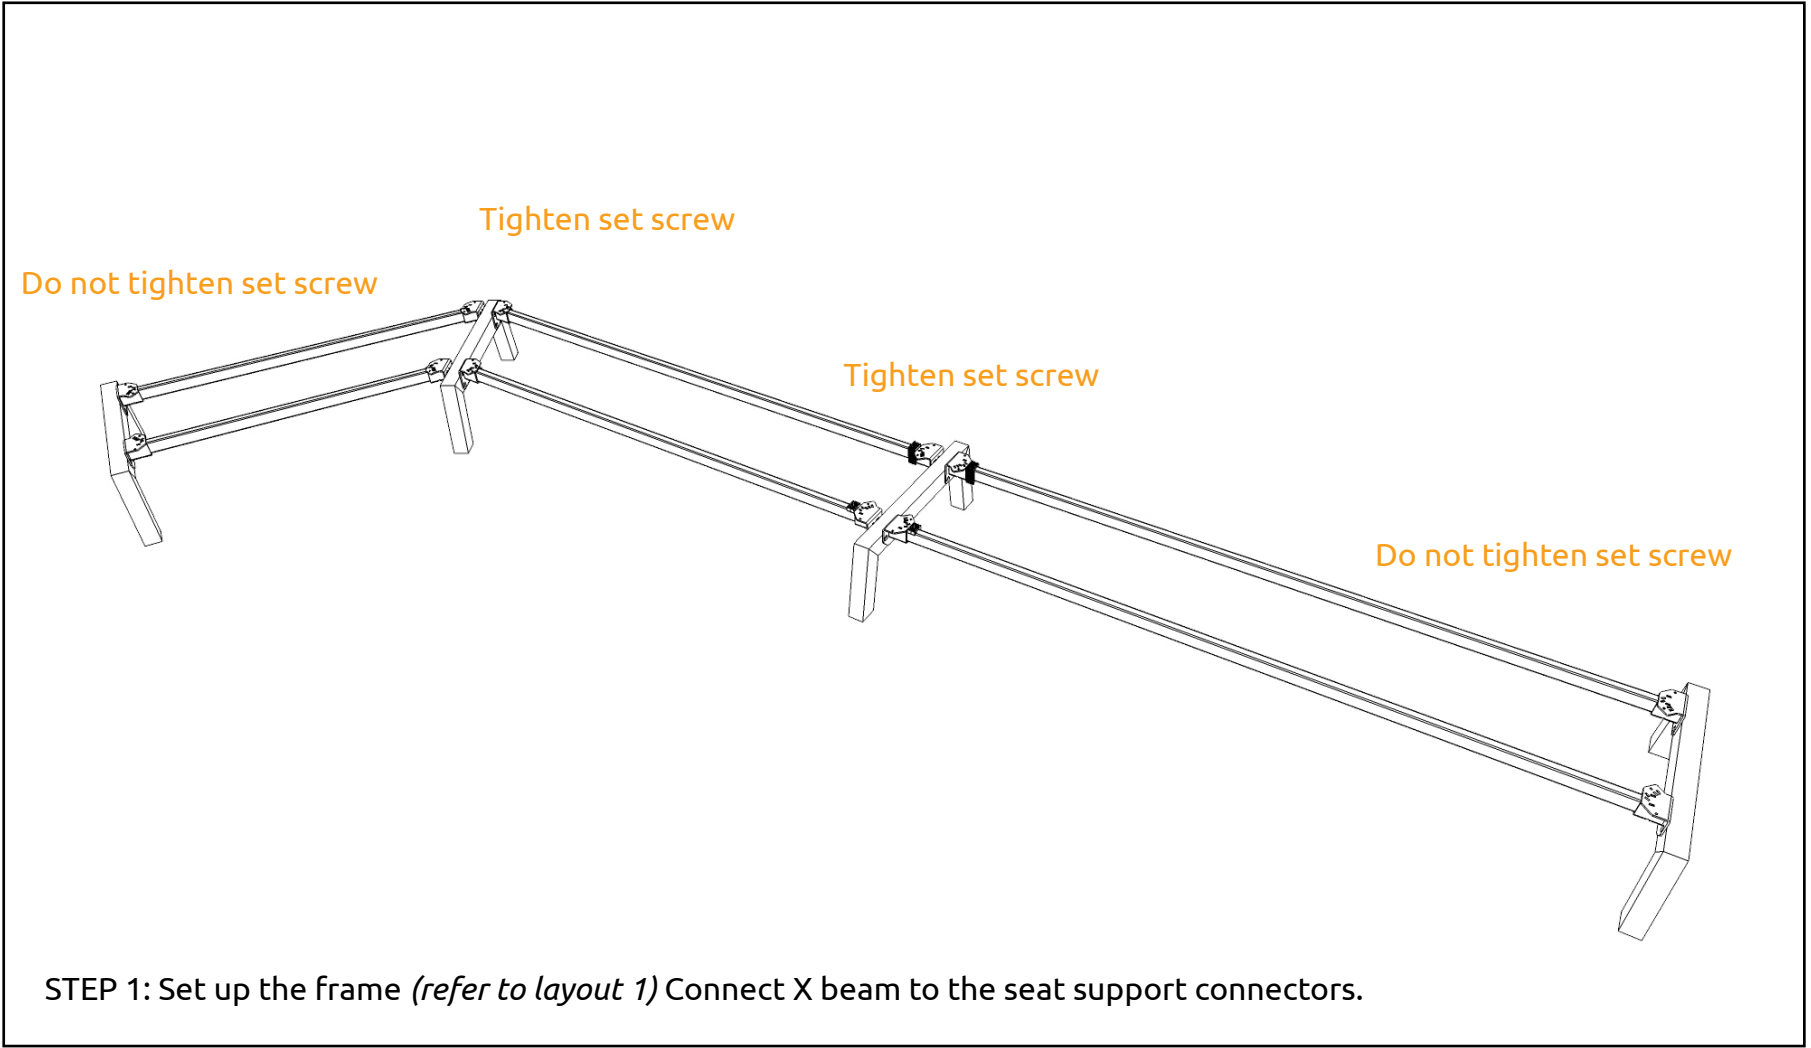


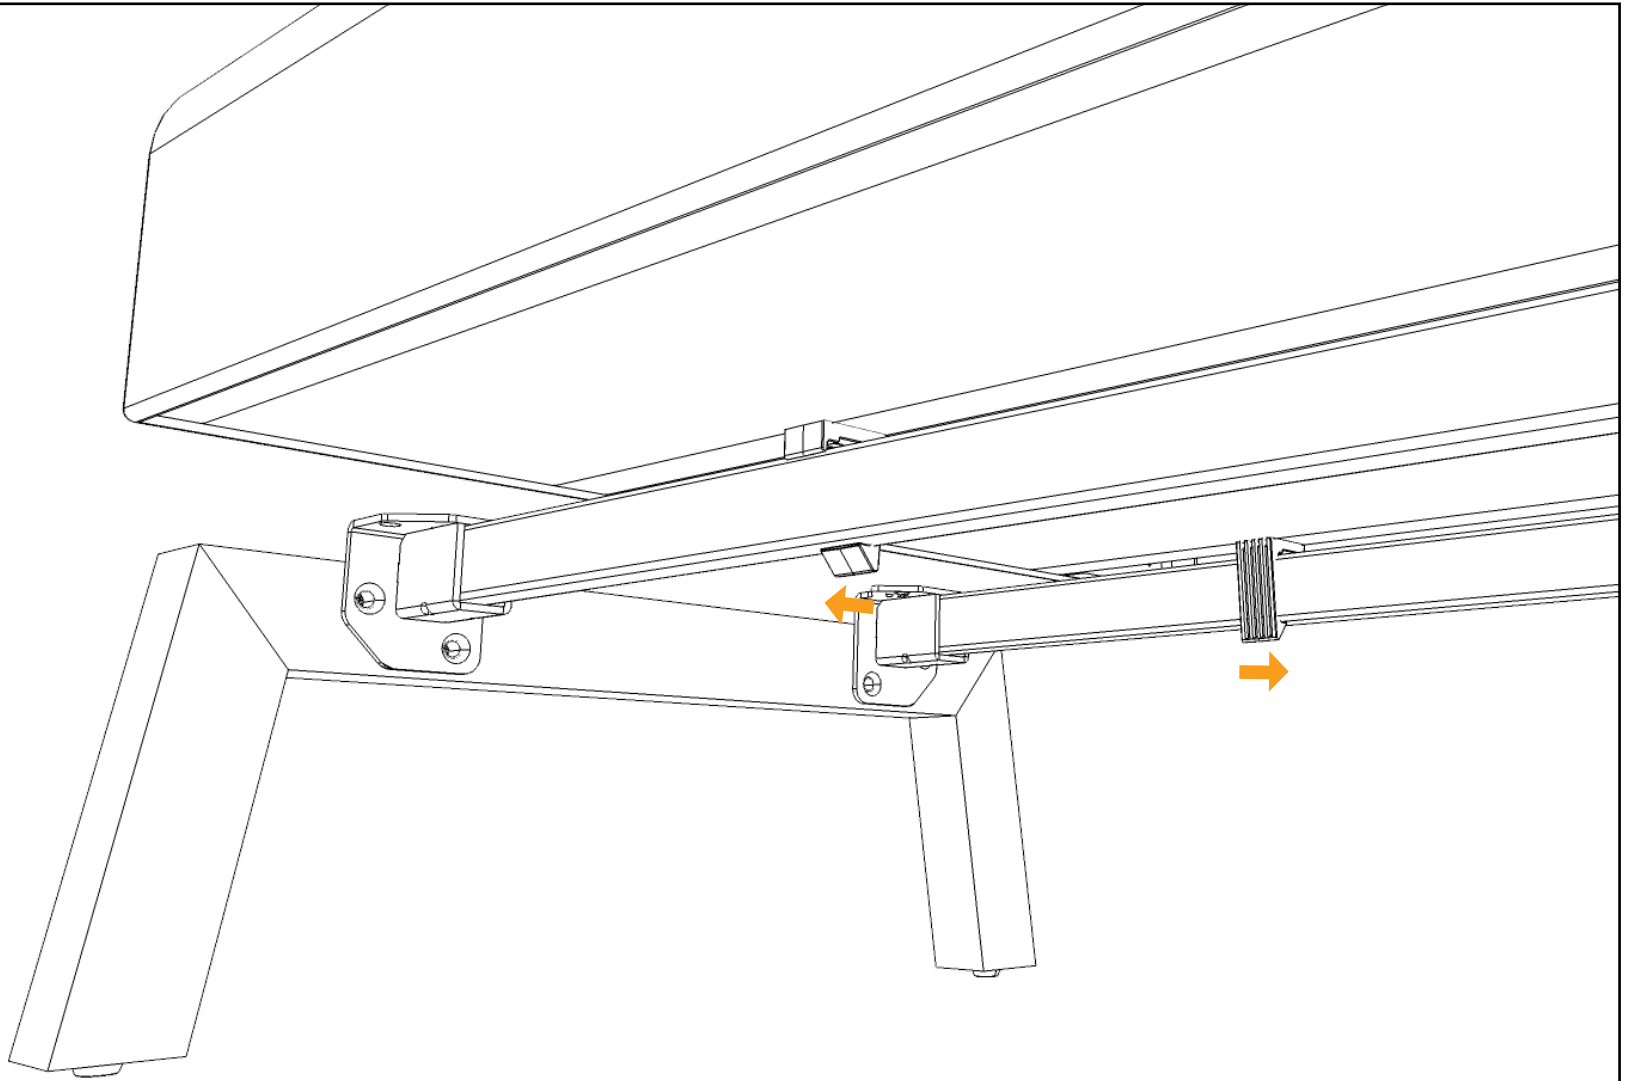


STEP 3: Snap in click fix to the X beam.

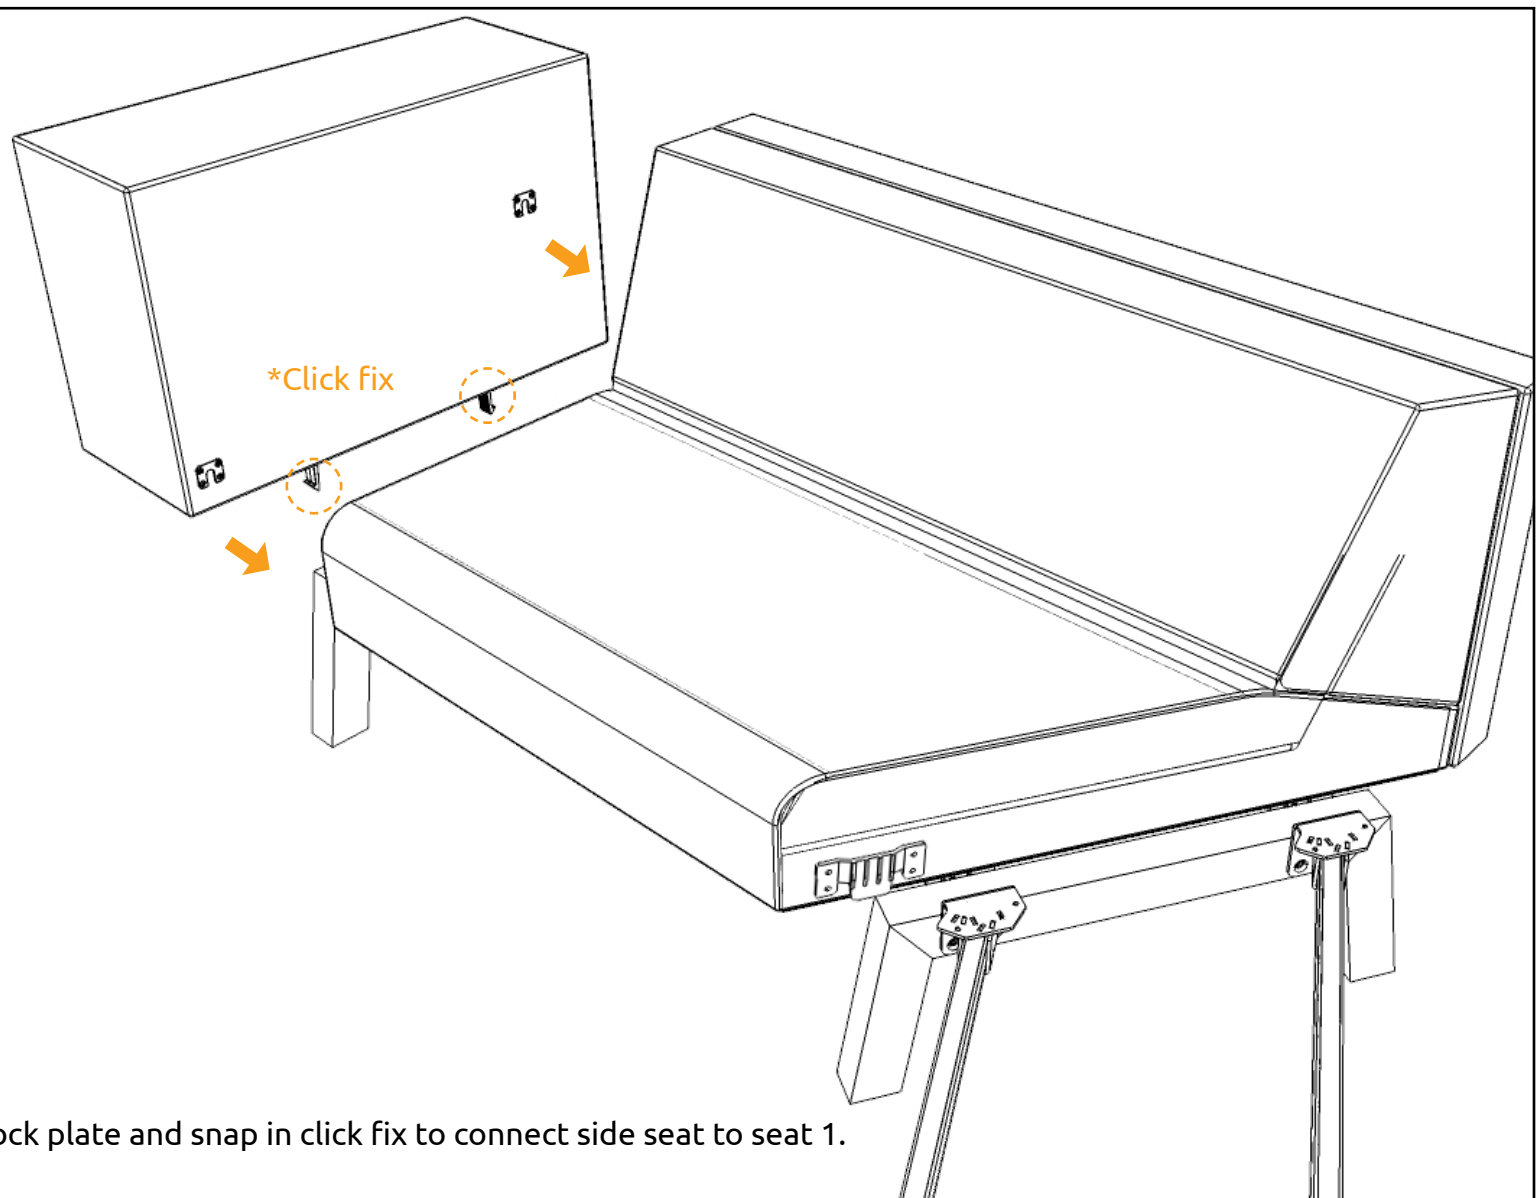



STEP 4: Hook in lock plate and snap in click fix to connect side seat to seat 1.

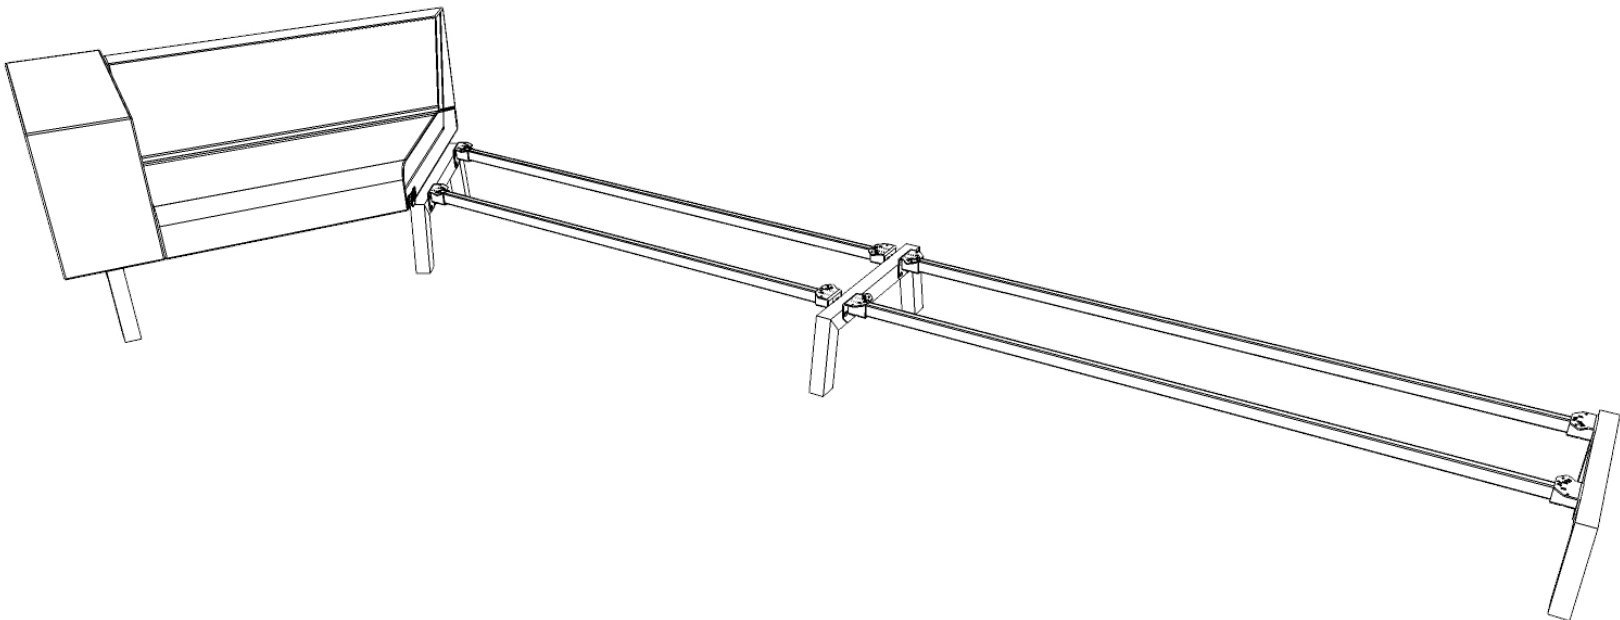


The installation for Seat 1 with side seat is done.

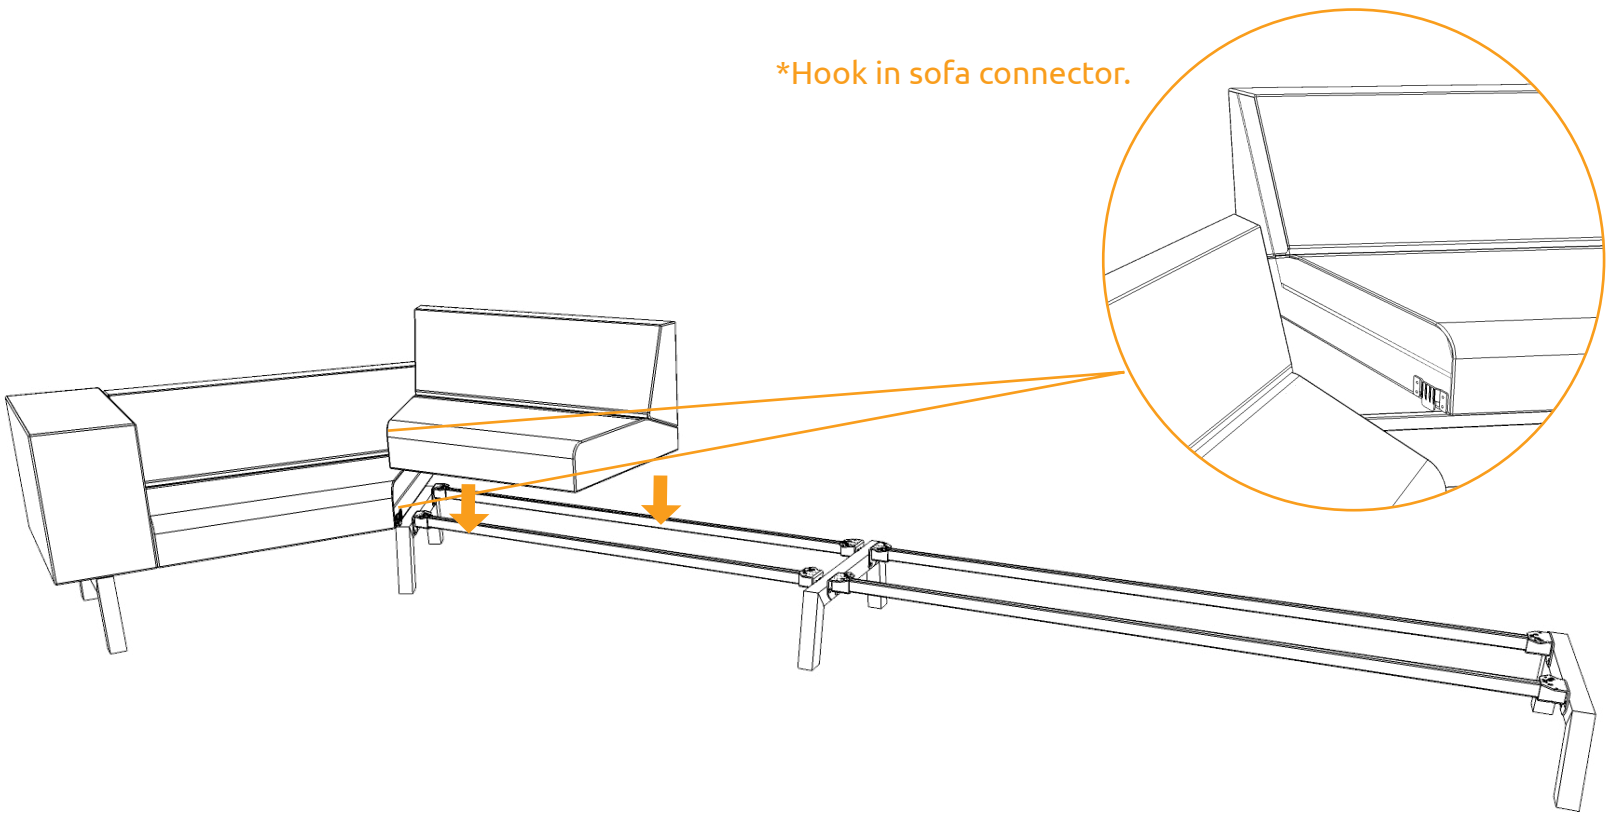


STEP 5: Repeat step 2-3 to install seat 2.

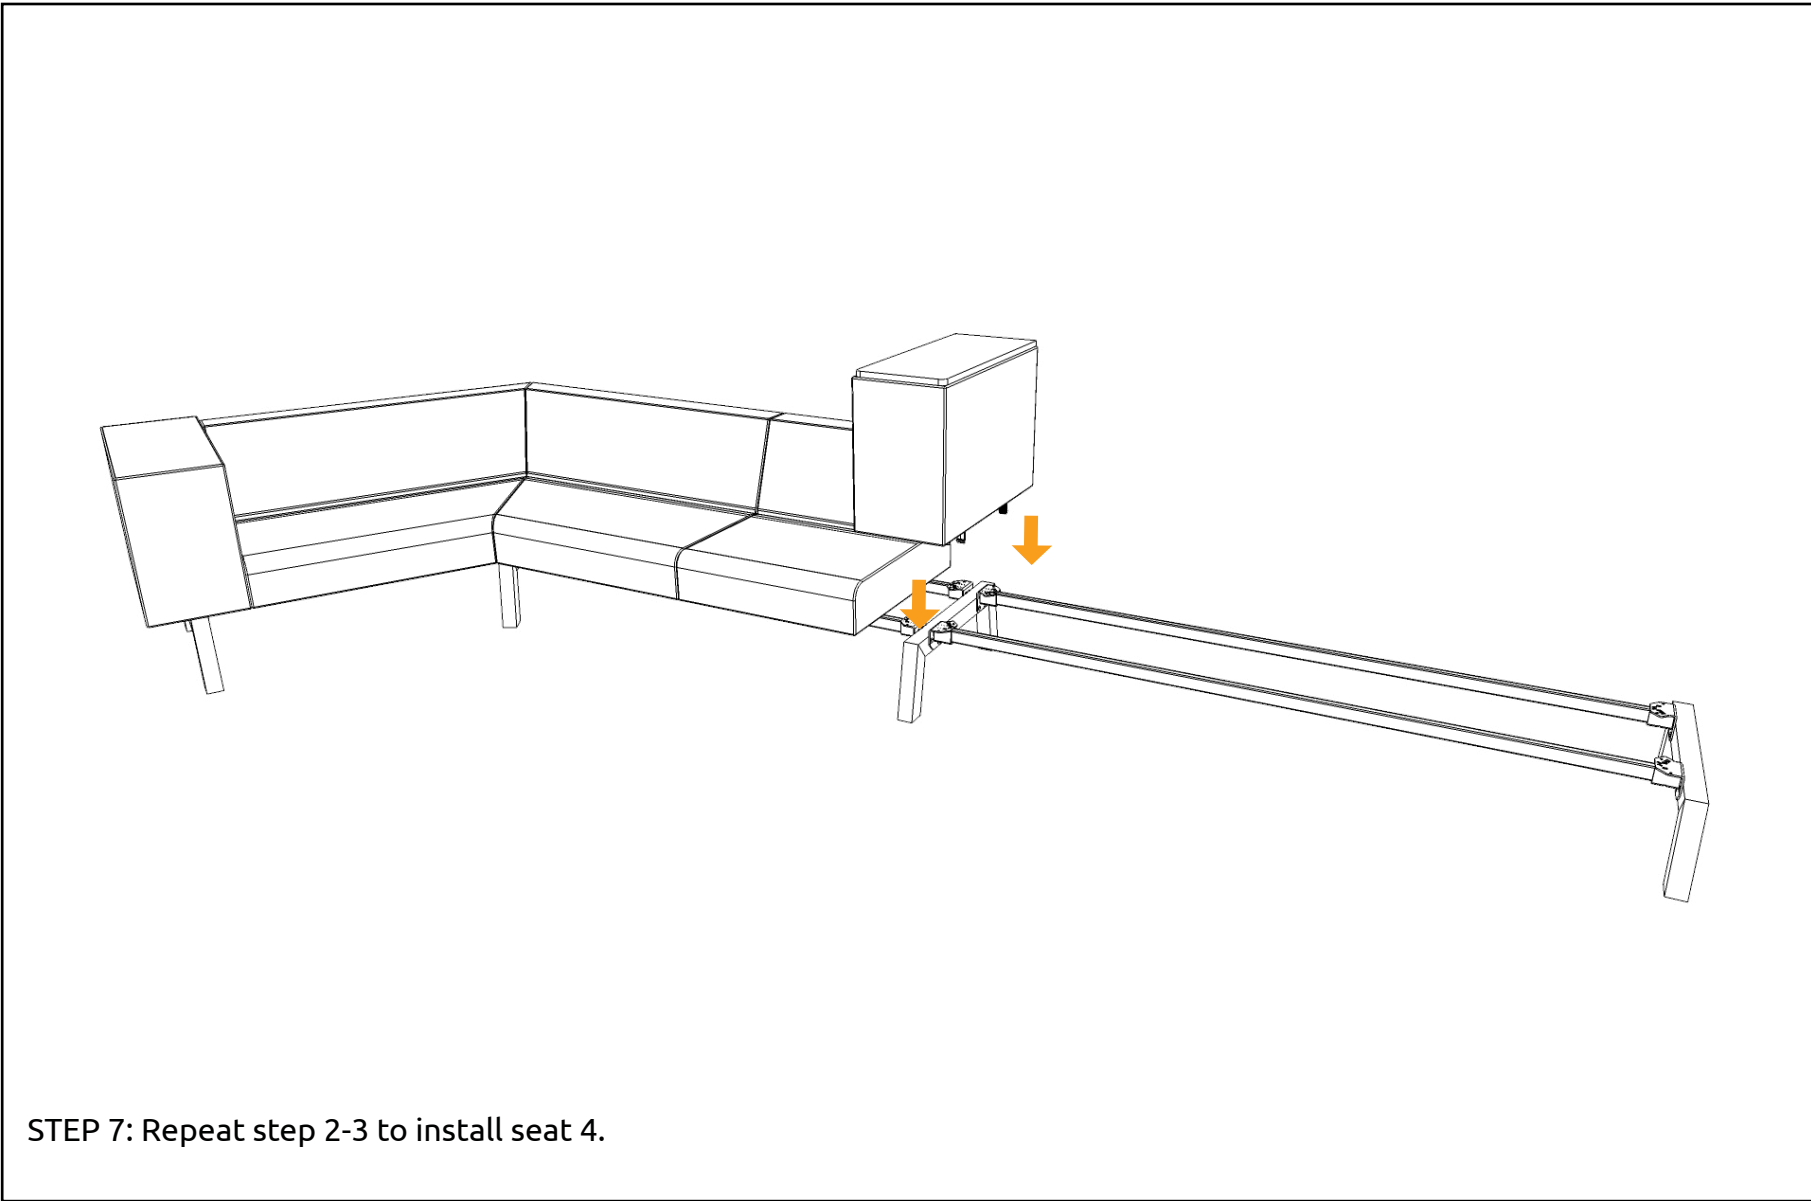
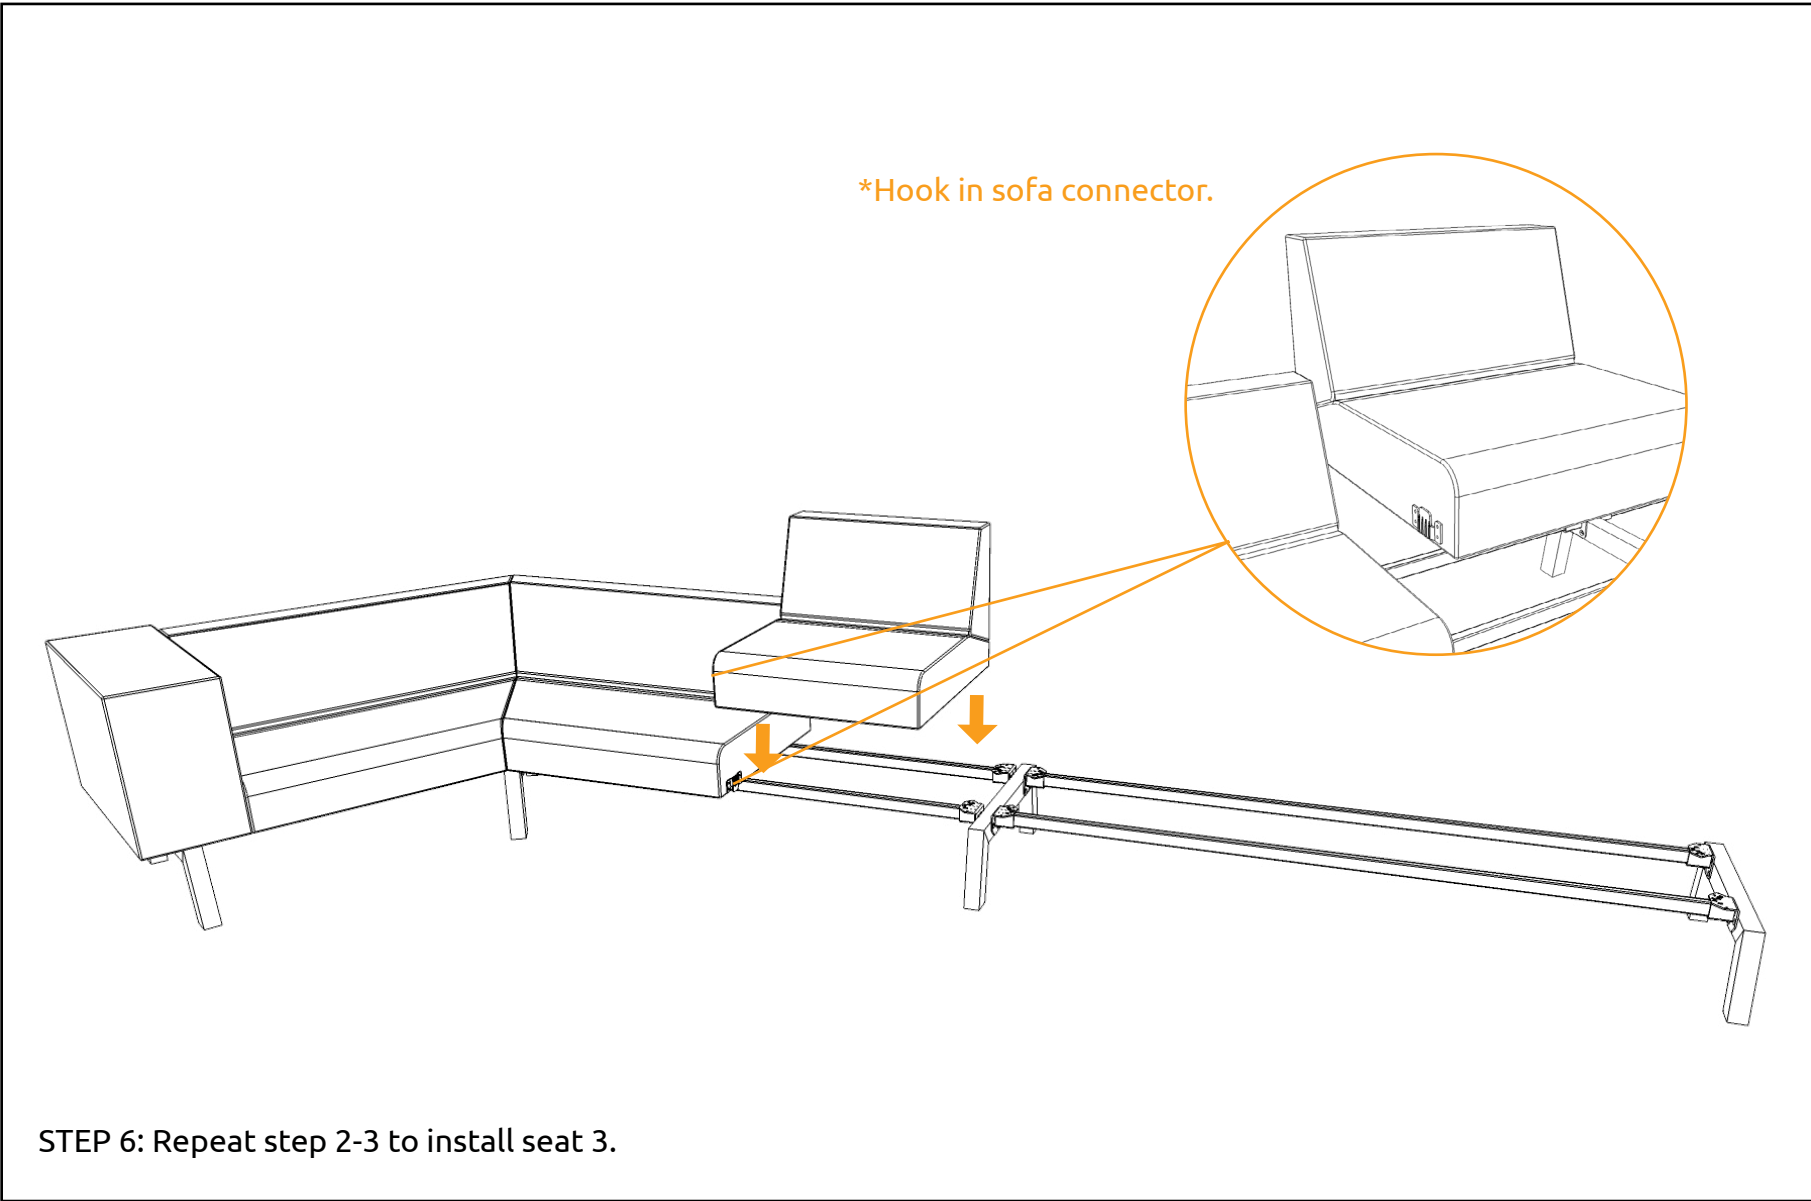


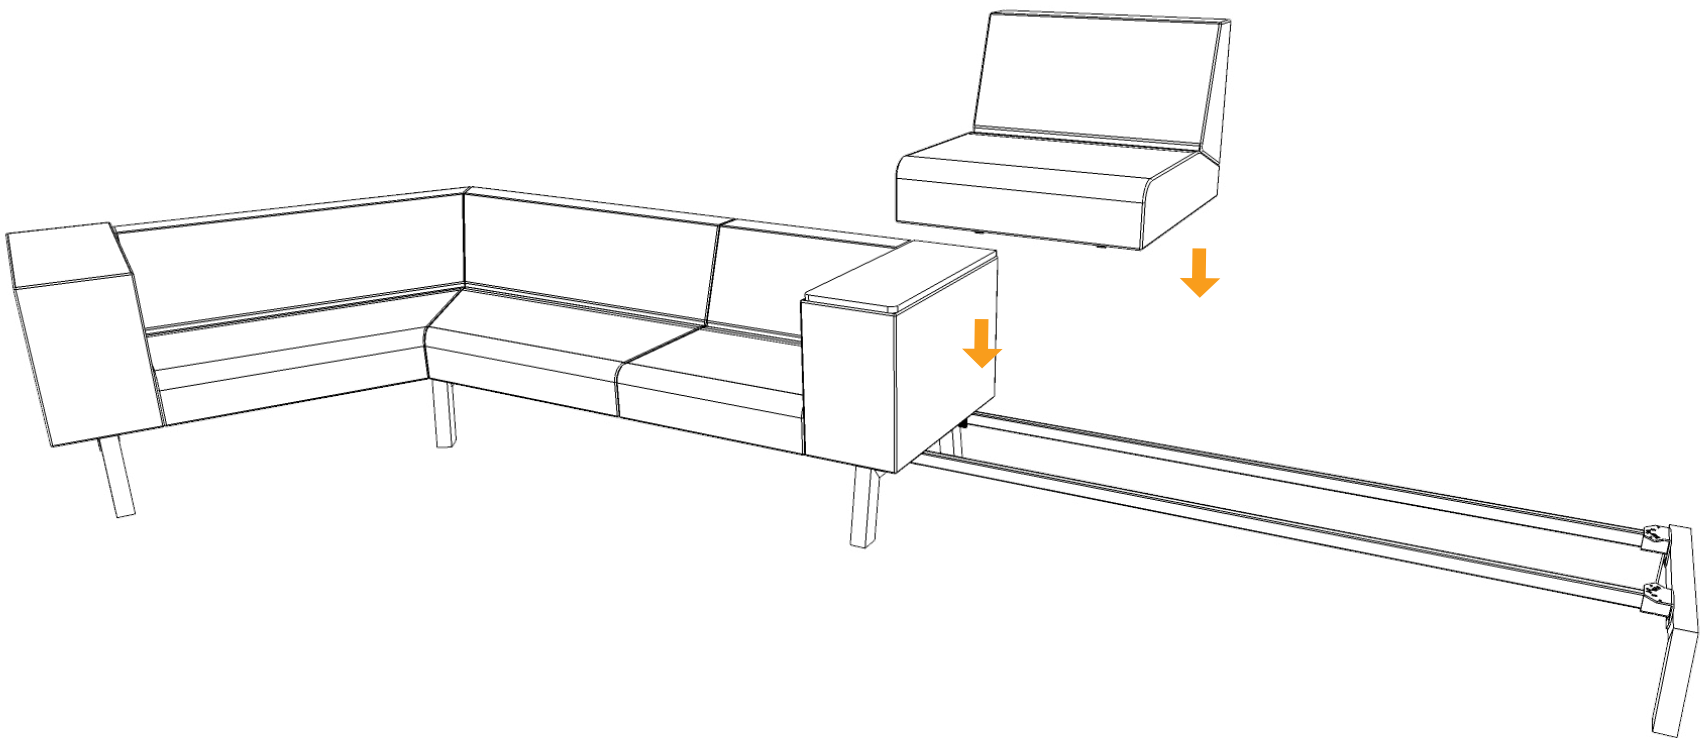


STEP 8: Repeat step 2-3 to install seat 5.

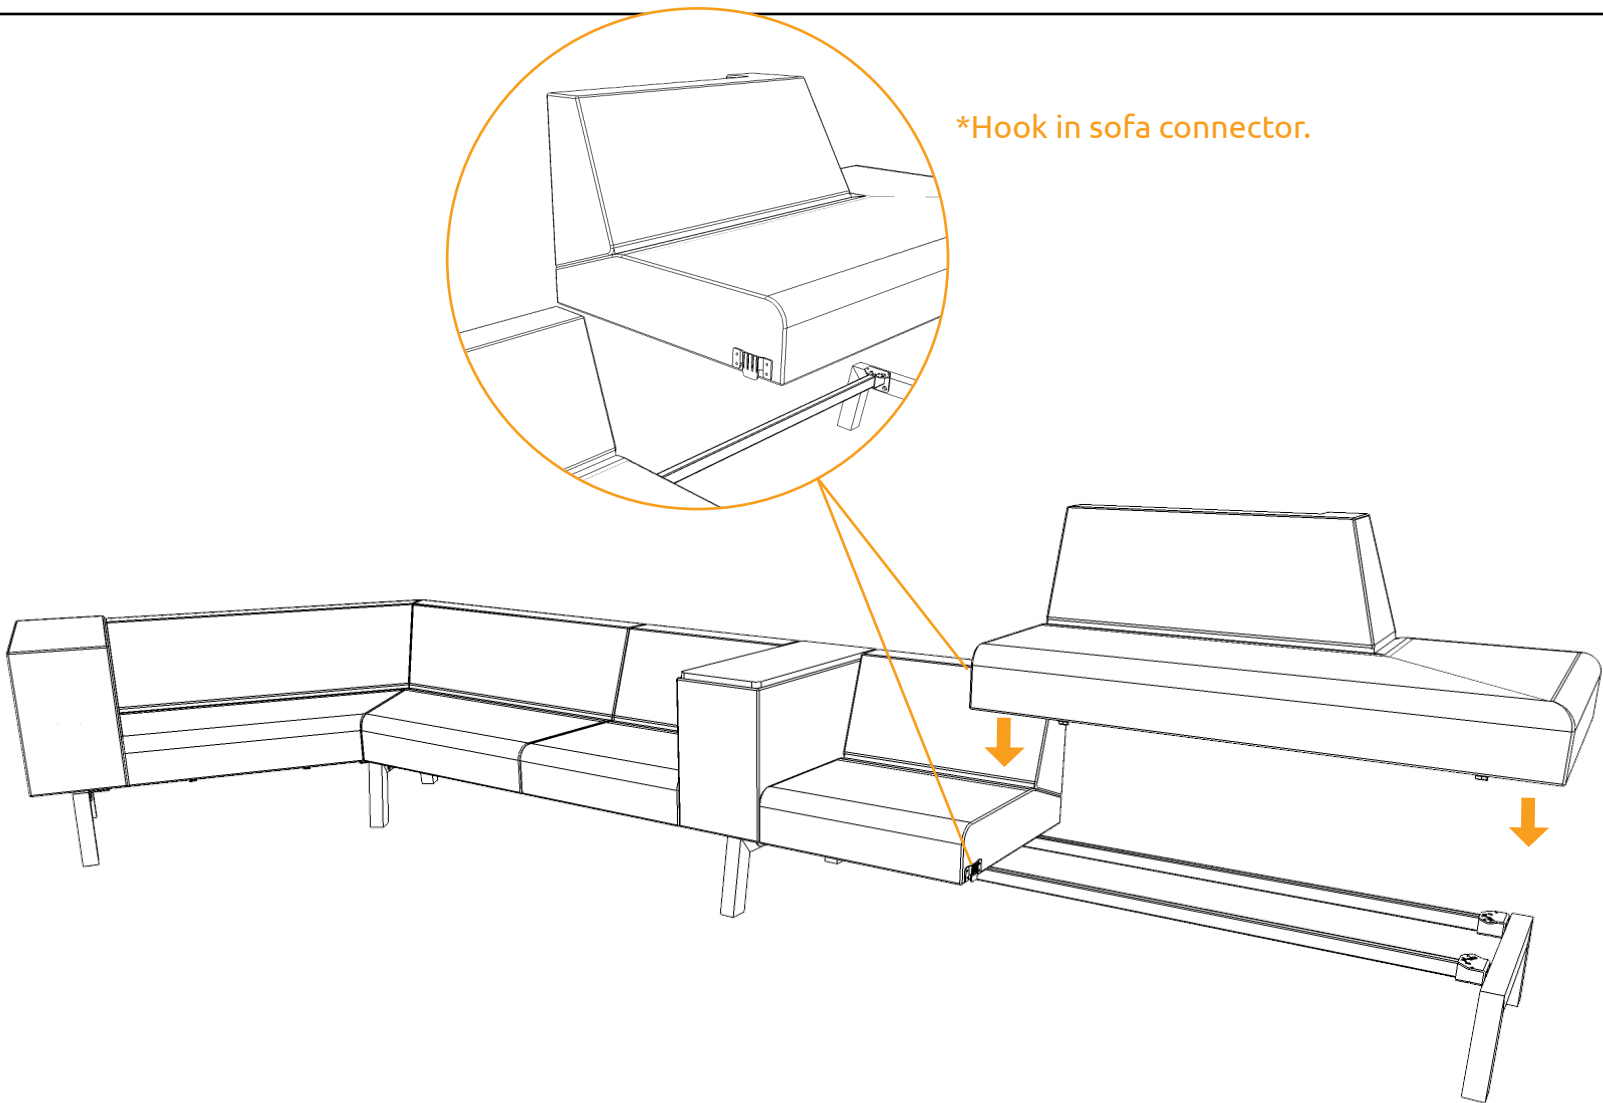


STEP 9: Repeat step 2-3 to install seat 6.

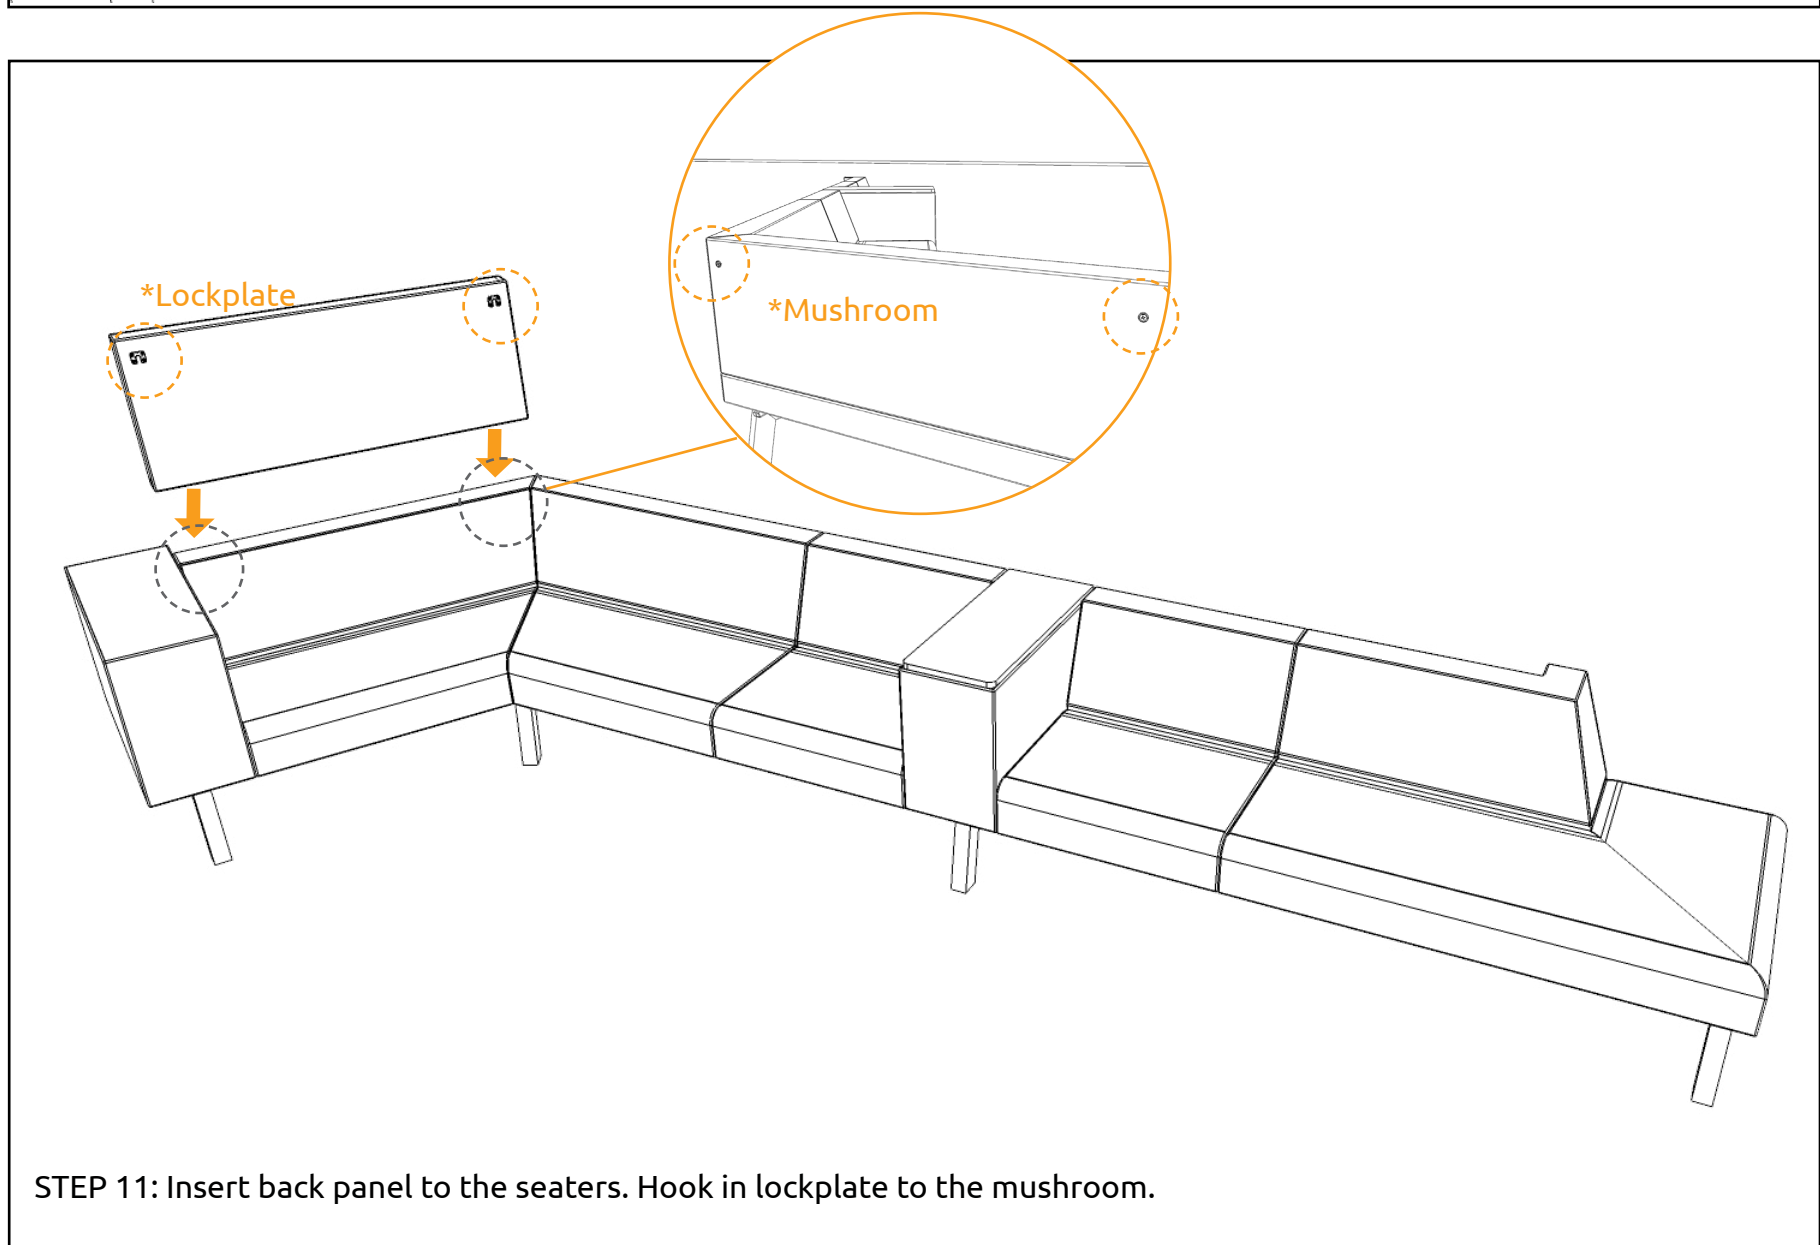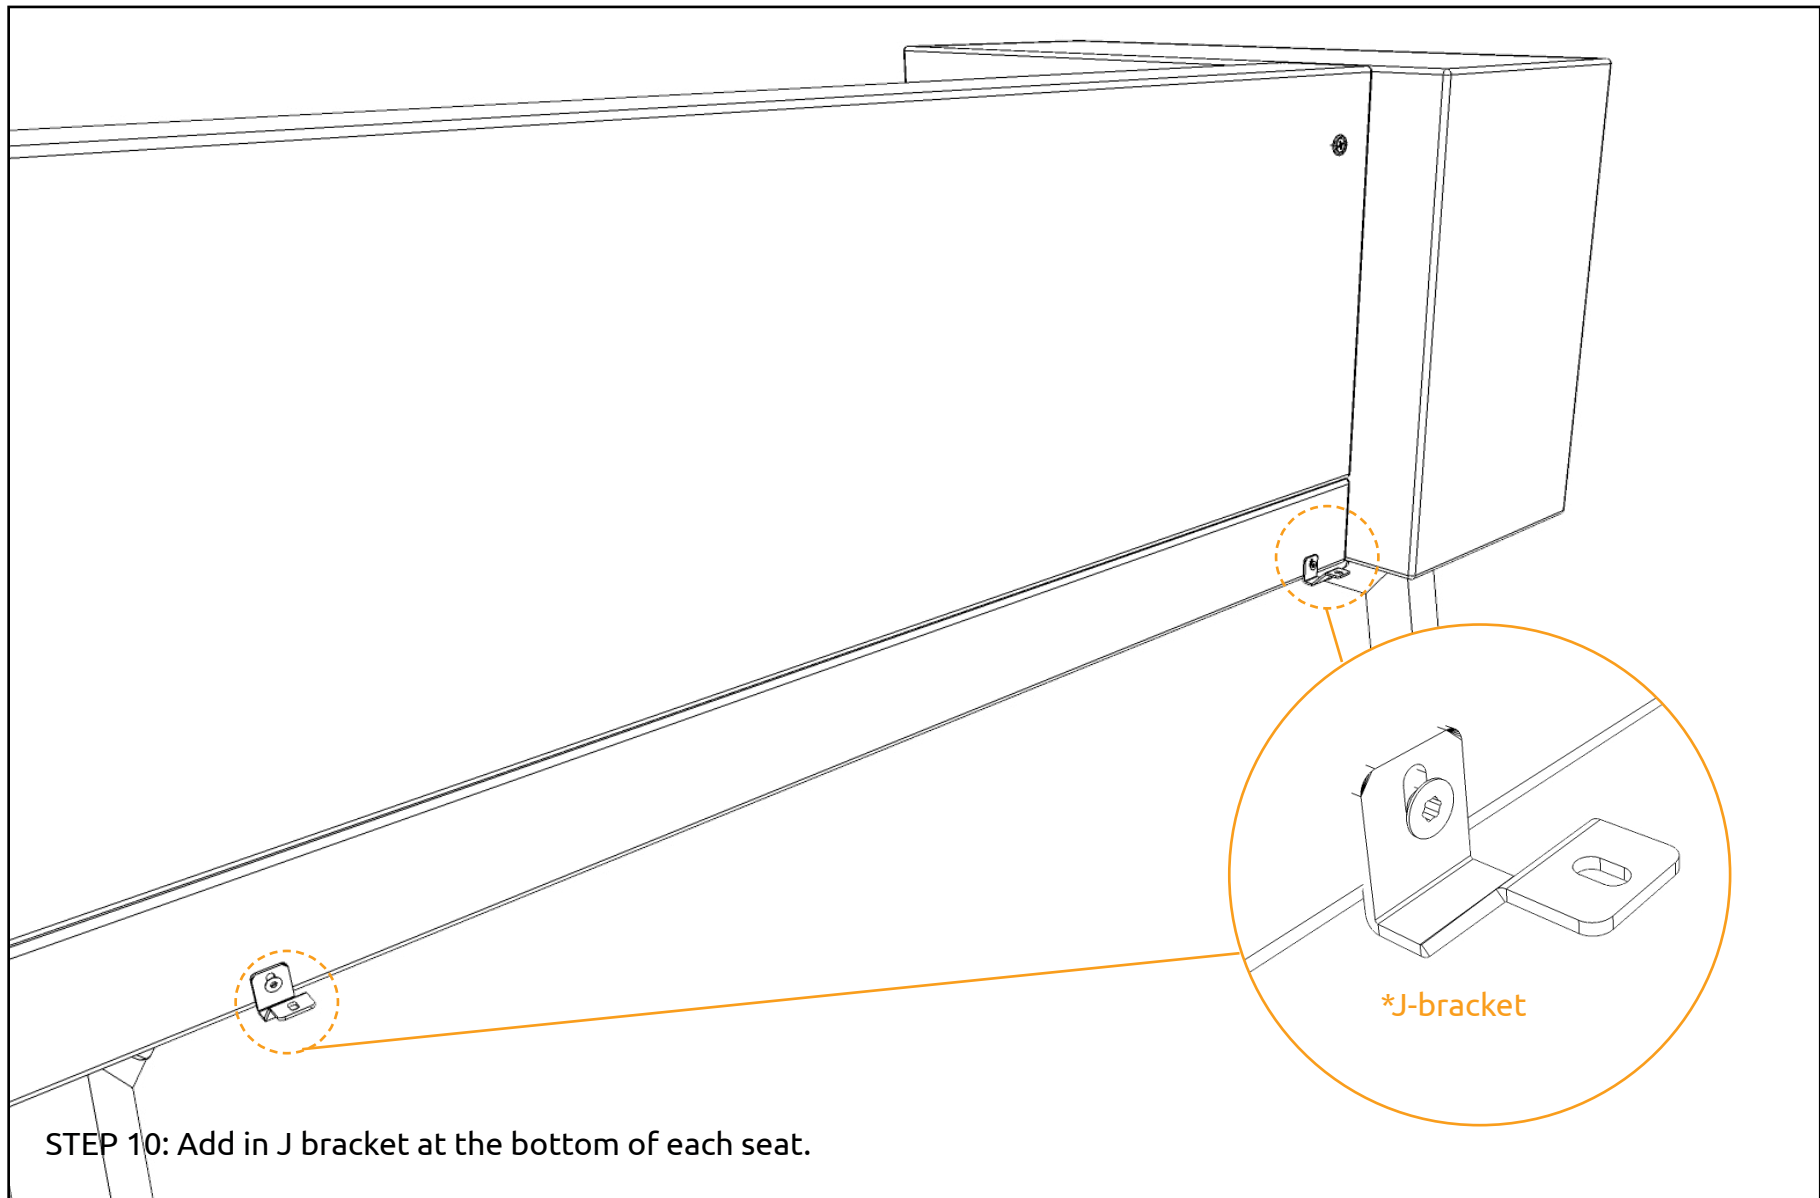

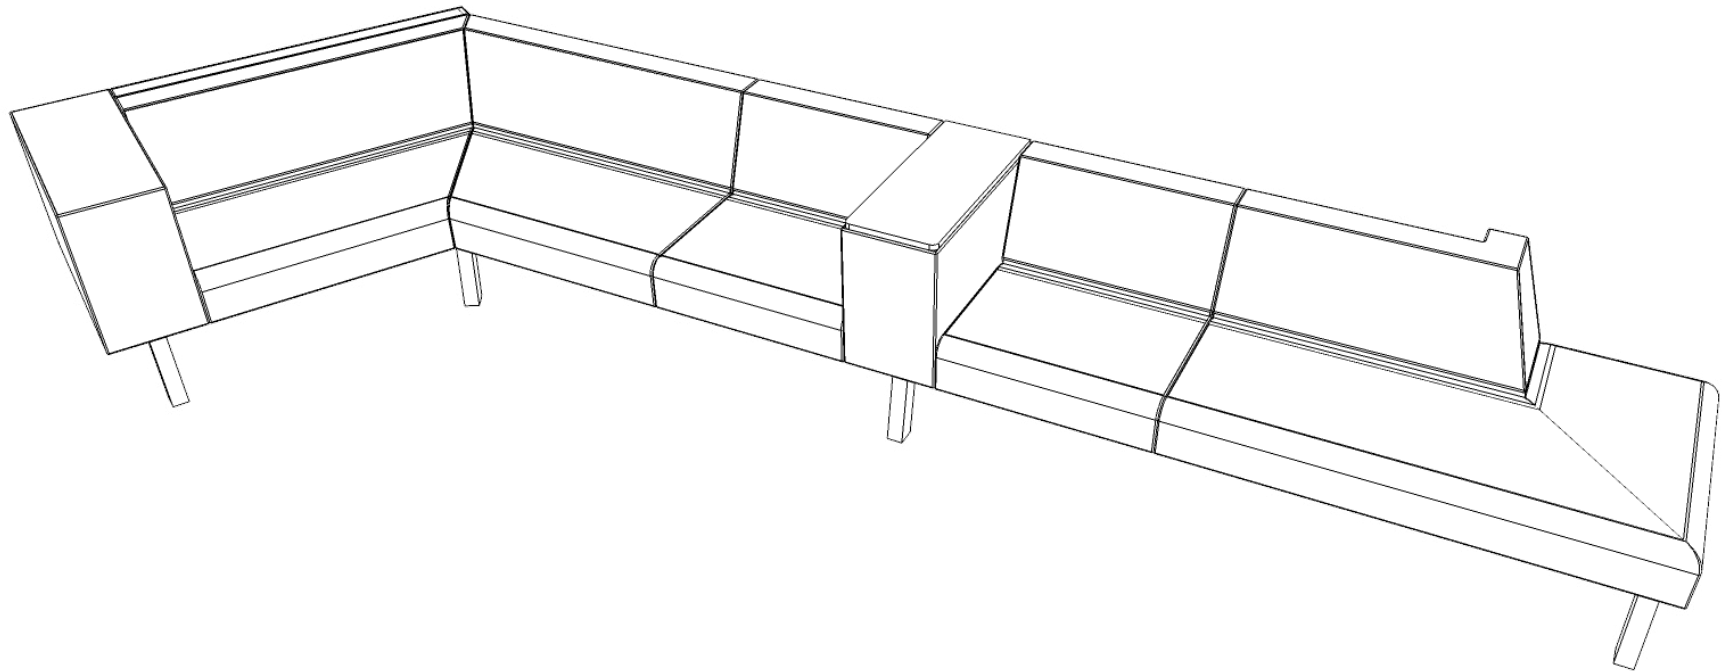


The installation for the back panel on seat 1 is done.

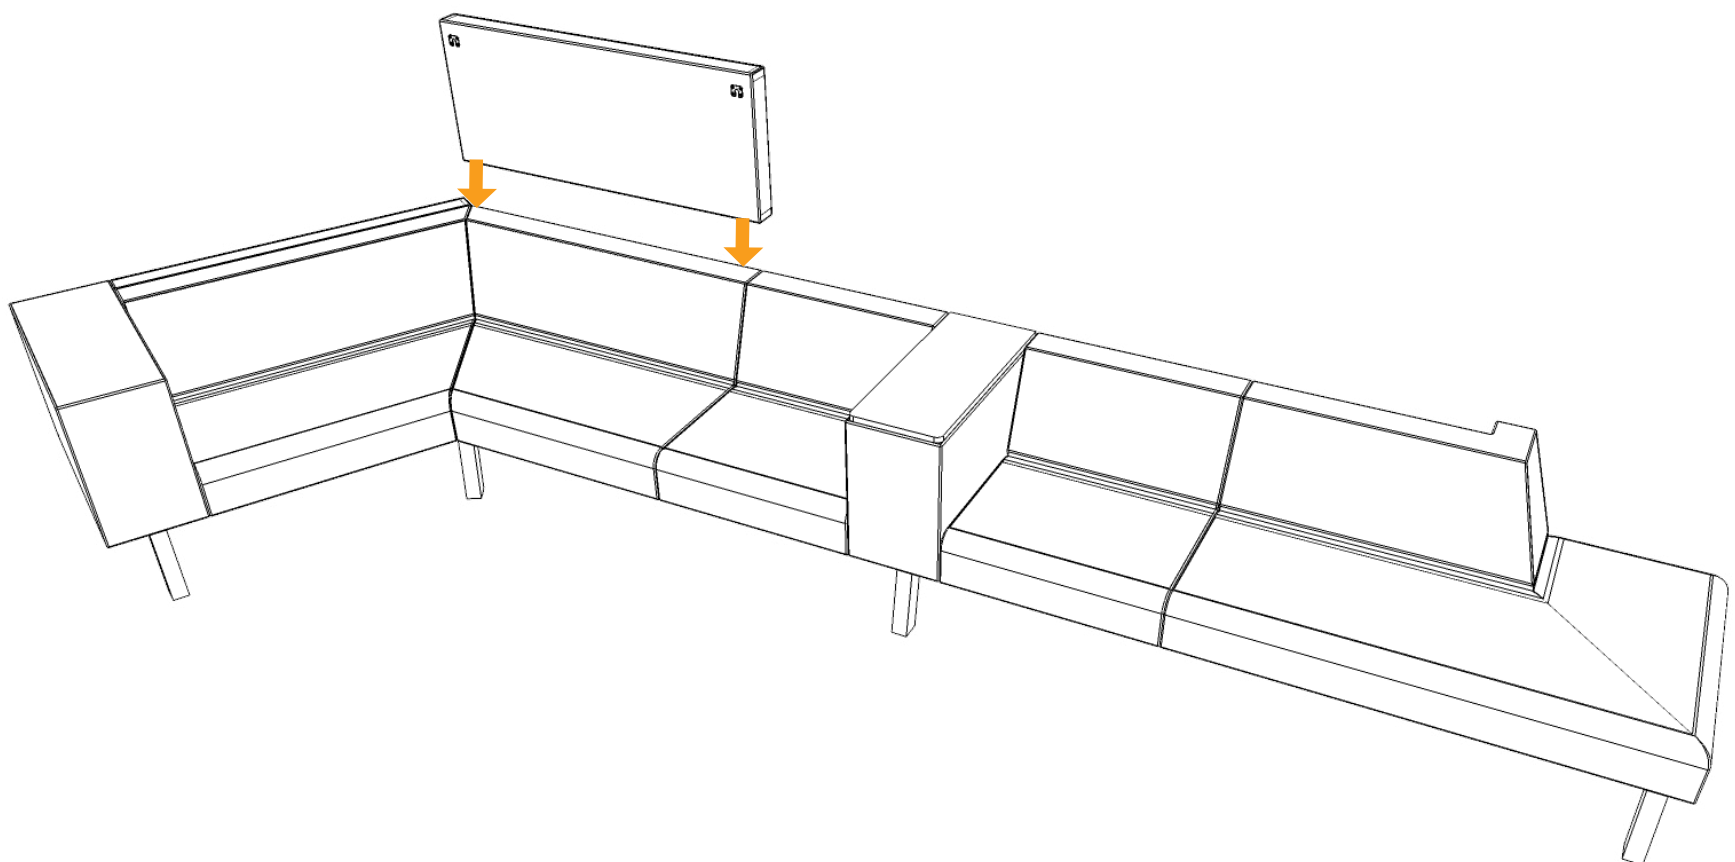


STEP 12: Repeat step 11 to install back panel for seat 2.



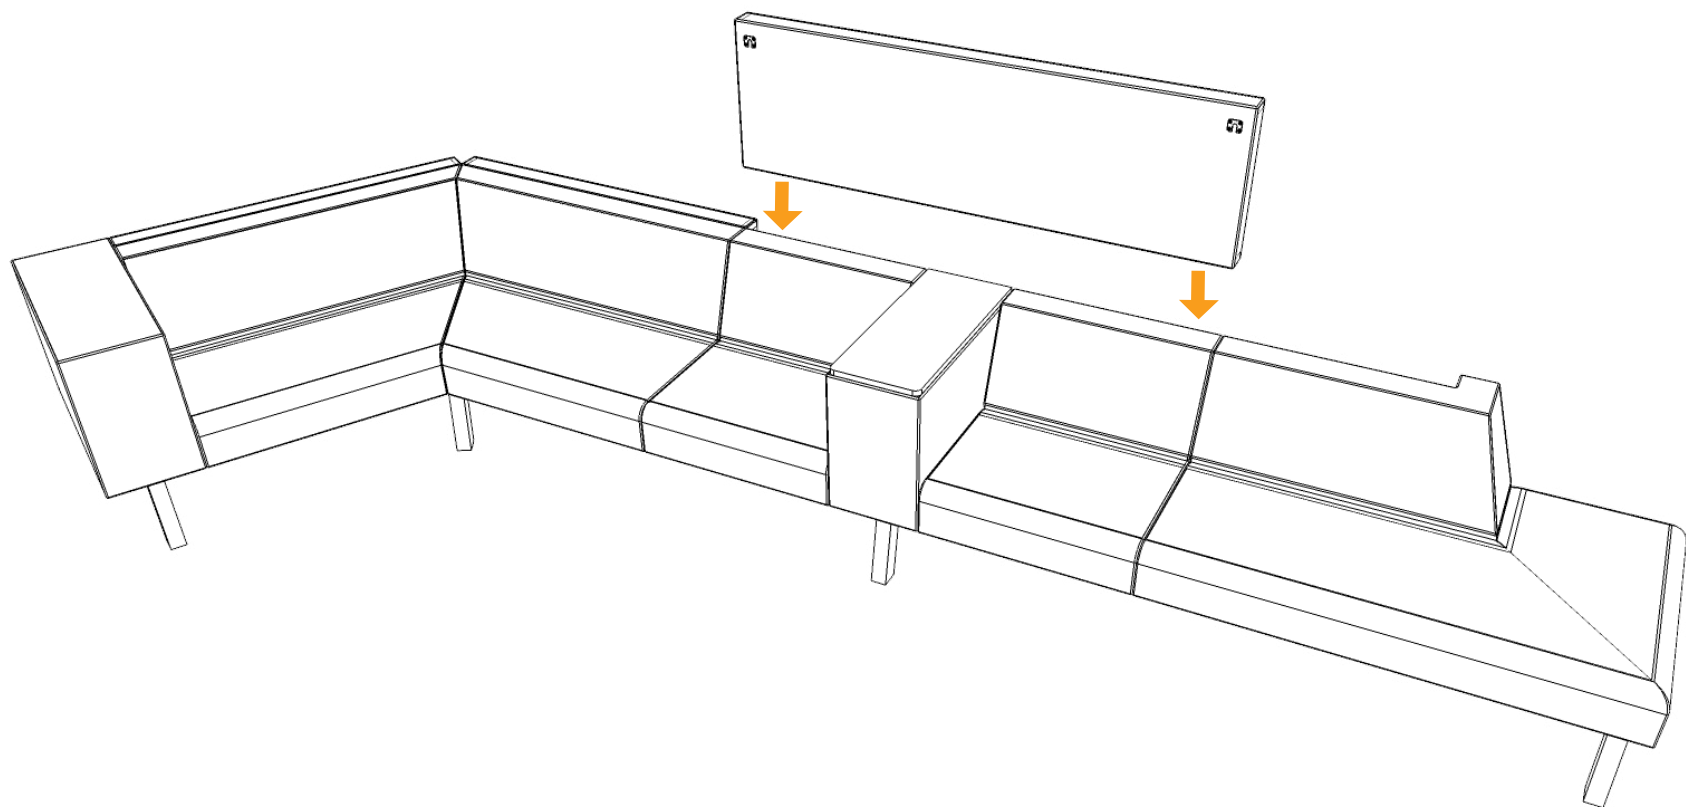


STEP 12: Repeat step 11 to install back panel for seat 3-5.


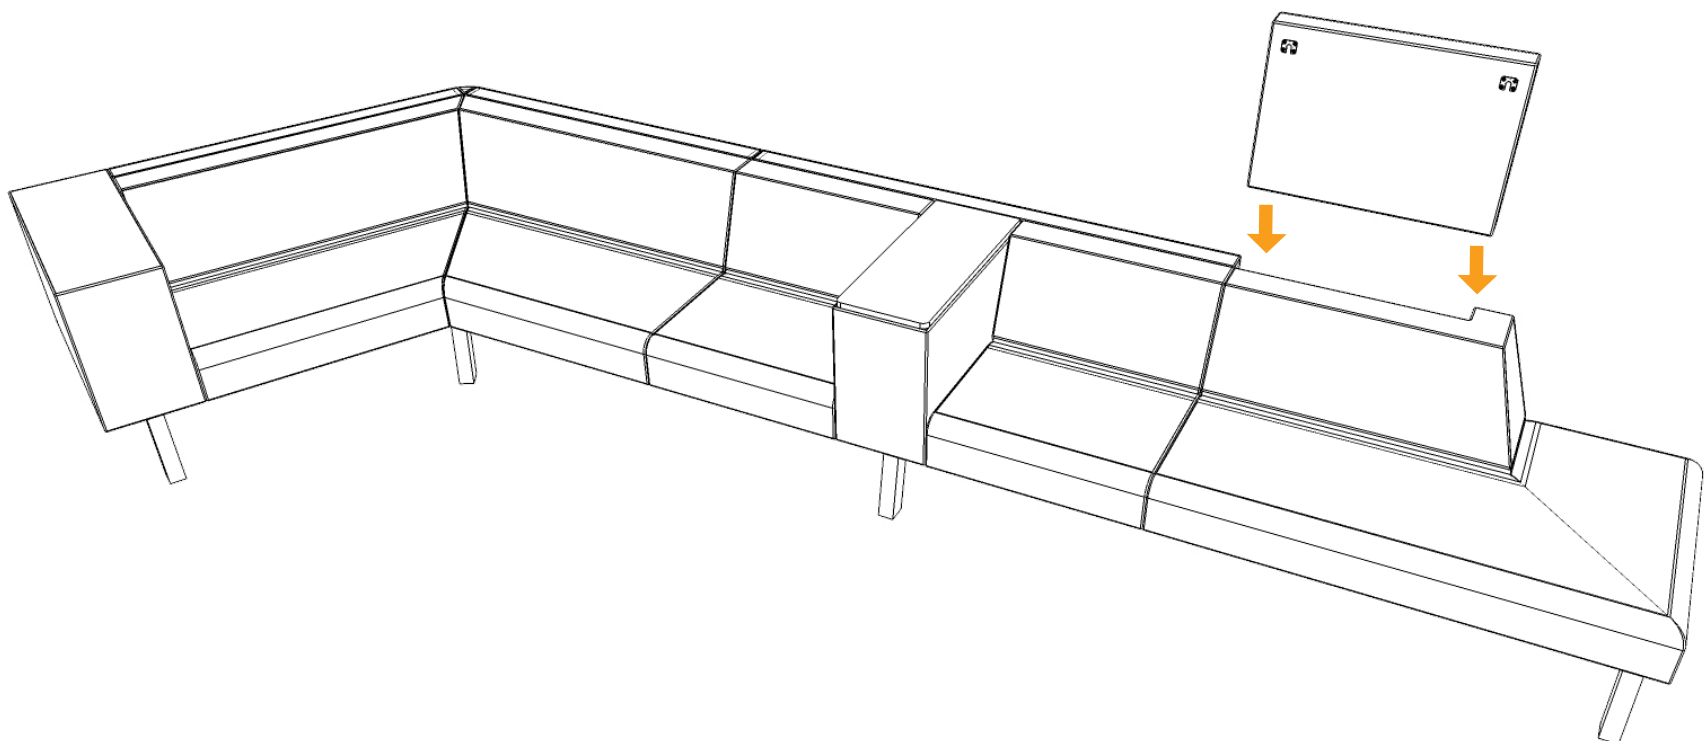


STEP 13: Repeat step 11 to install back panel for seat 6.




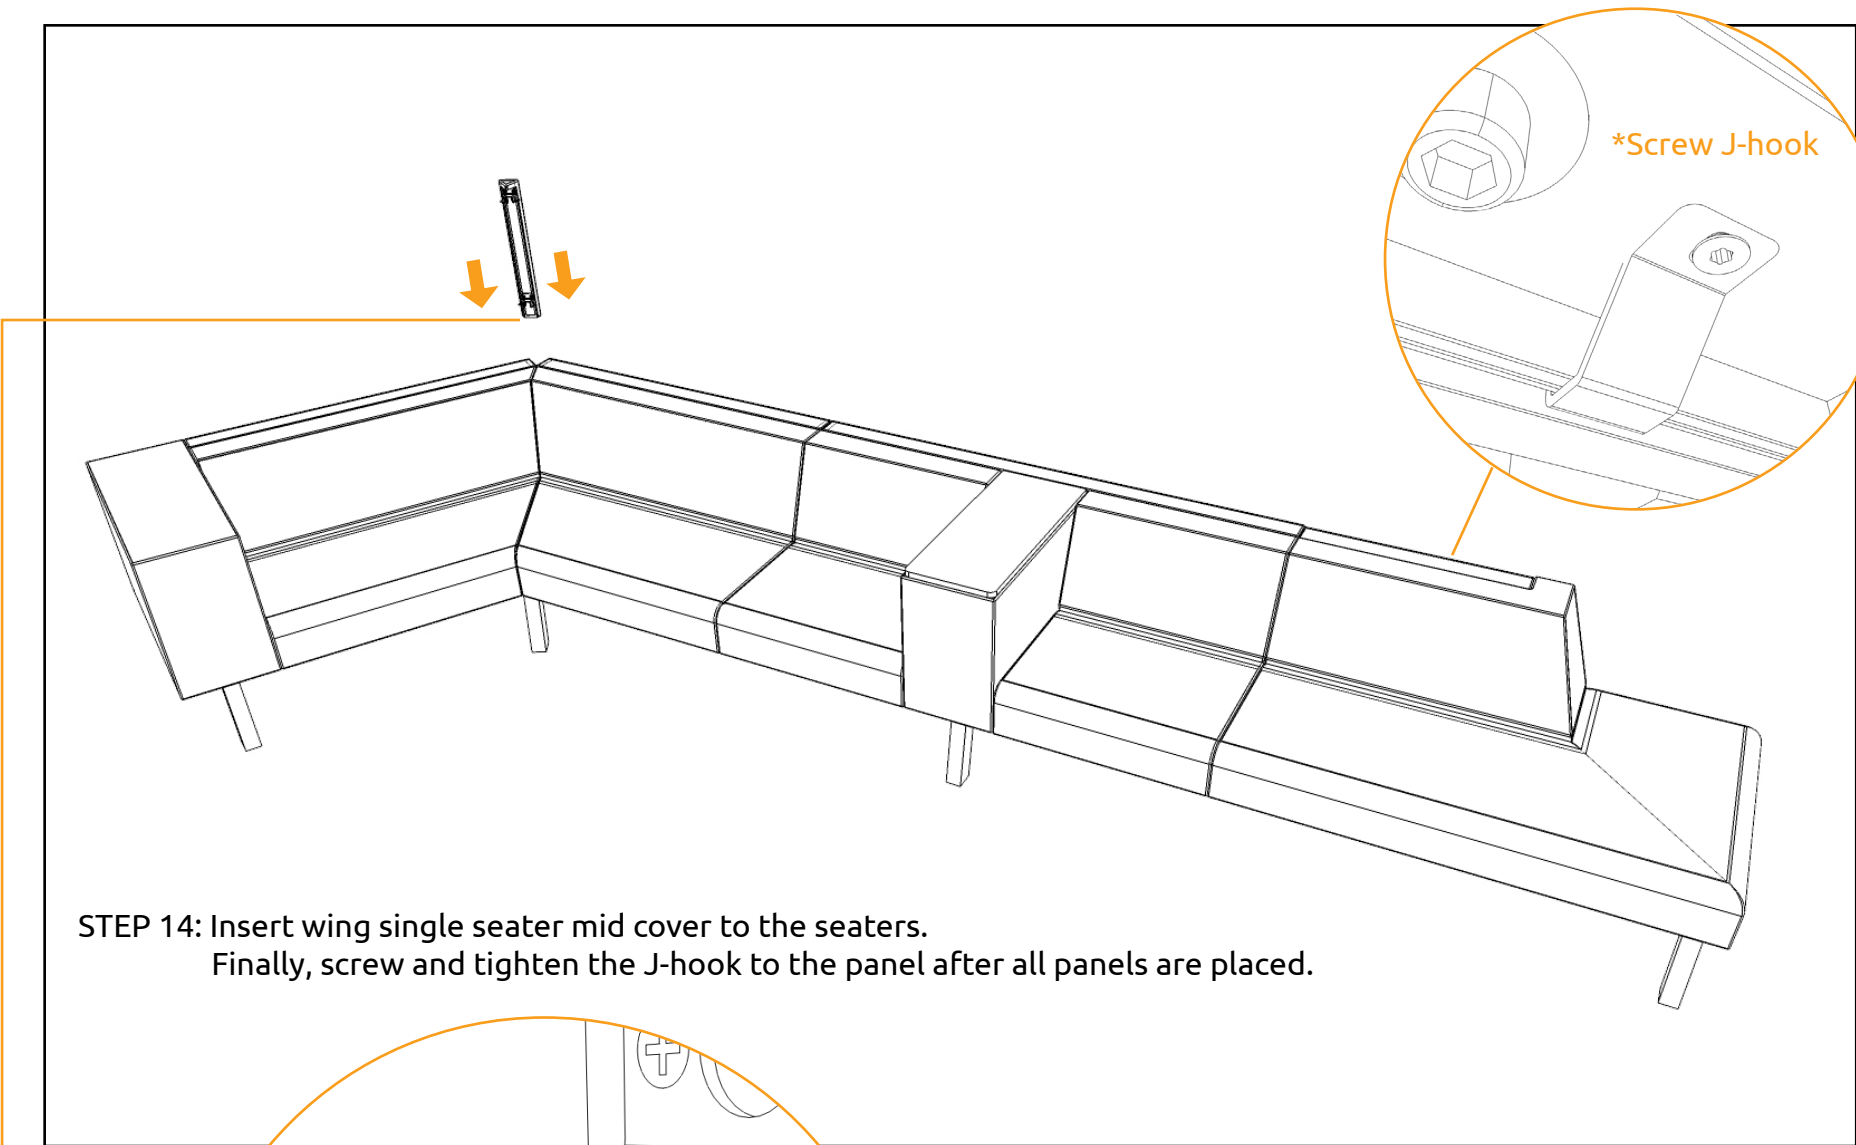


\*Wing single seater mid cover attach to the mushroom from the top.

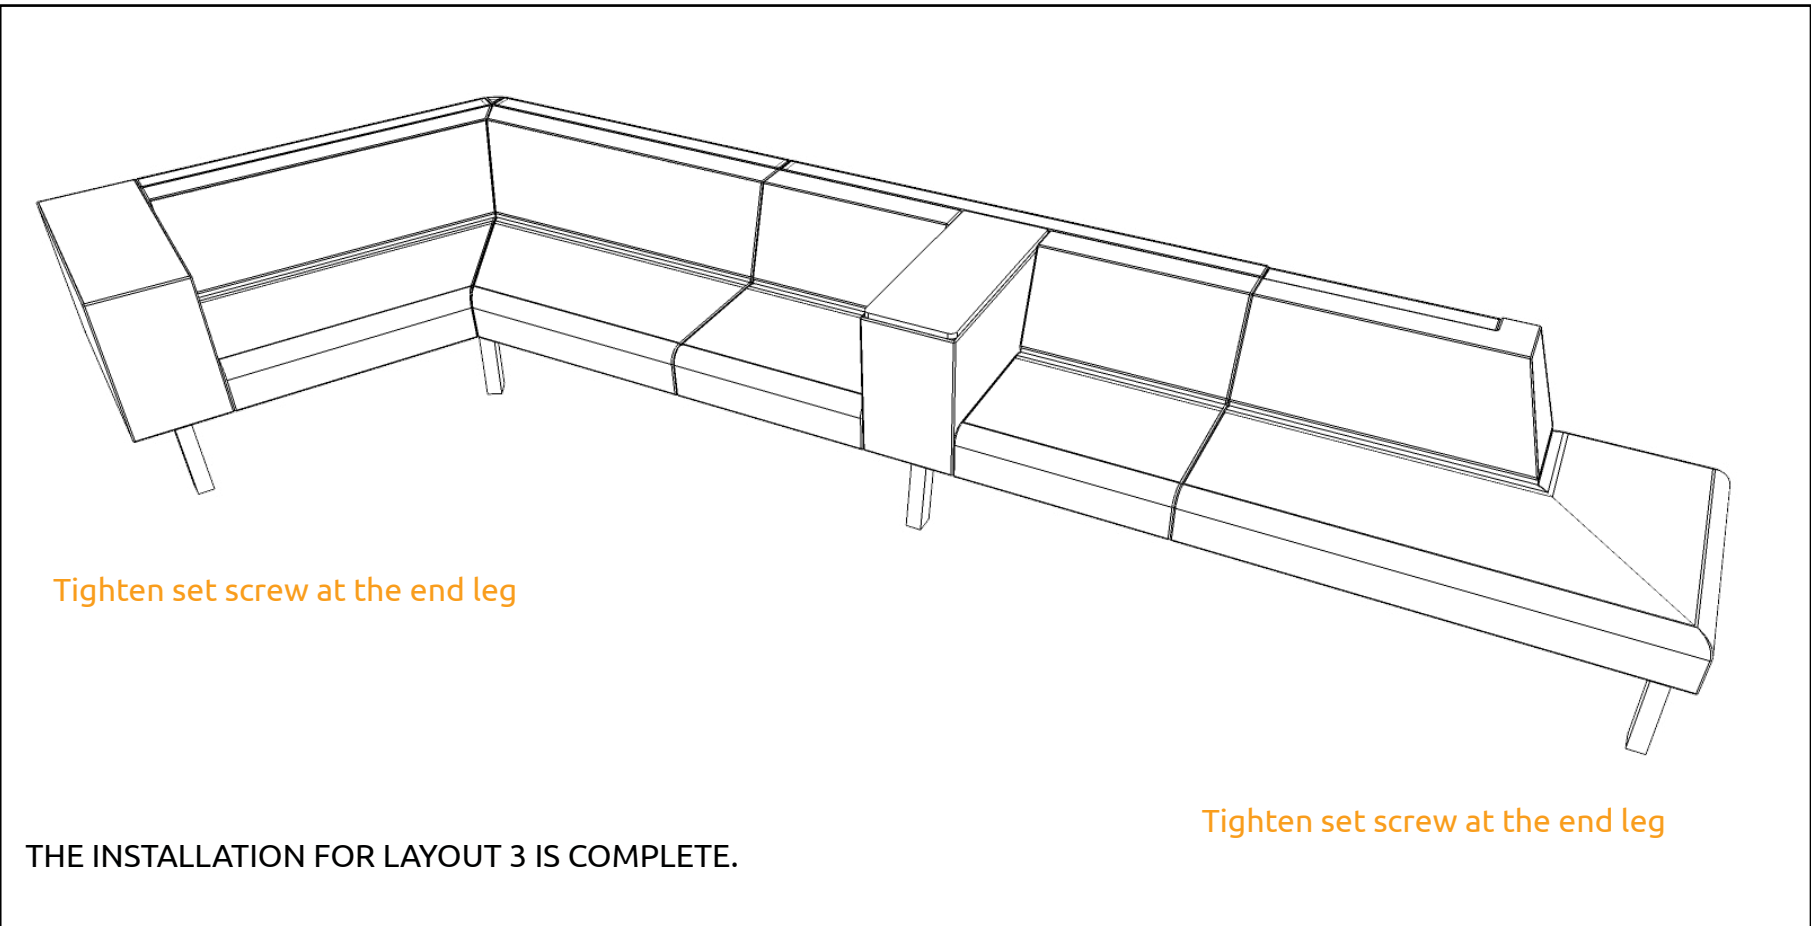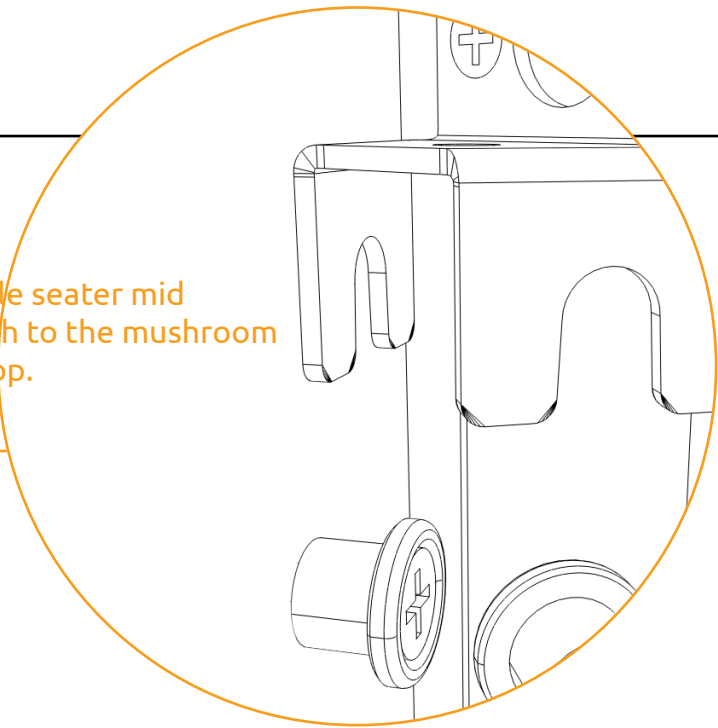



# LAYOUT 4


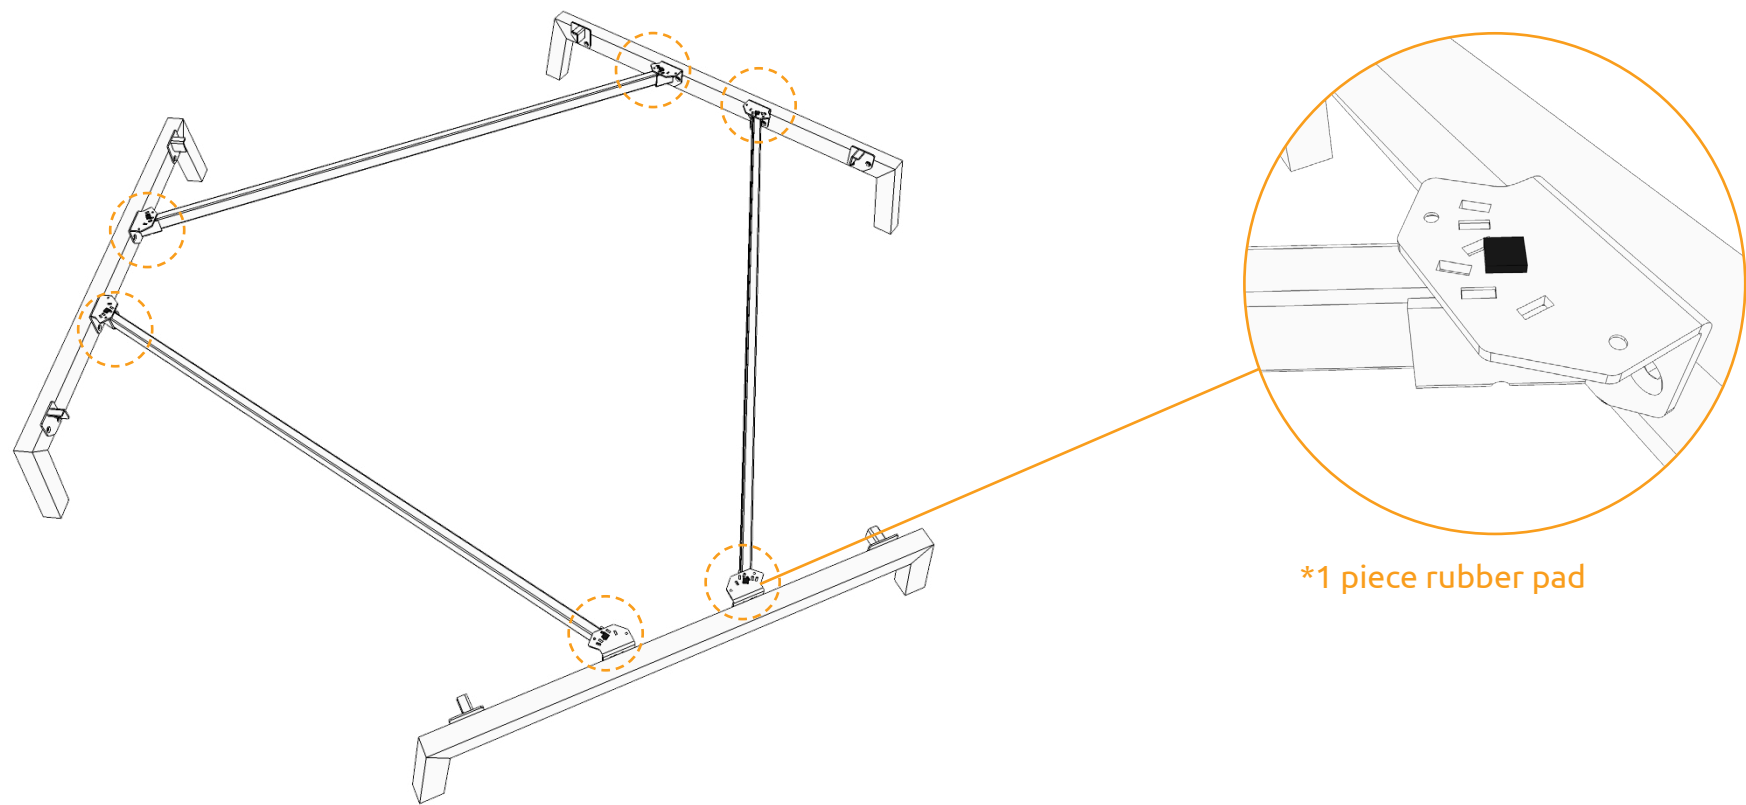



STEP 1: Set up the frame (*refer to layout 1*) Connect X beam to the seat support connectors. Add in 5mm rubber pad on each seat support to fill up gap in between.

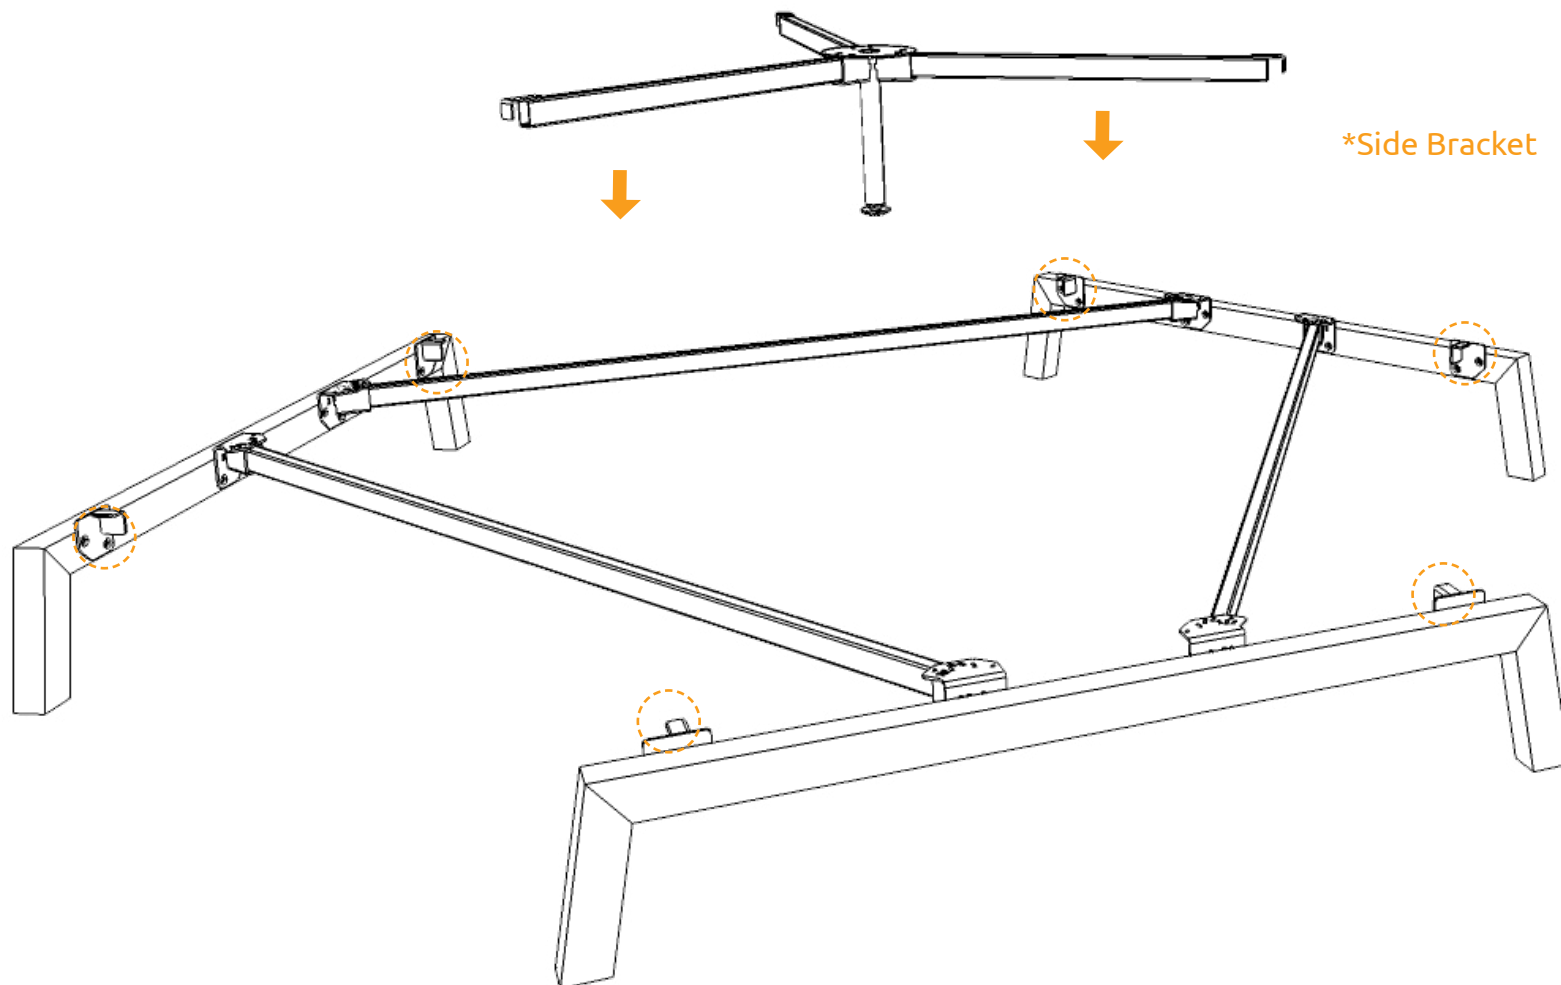


STEP 2: Add in middle post and side brackets.

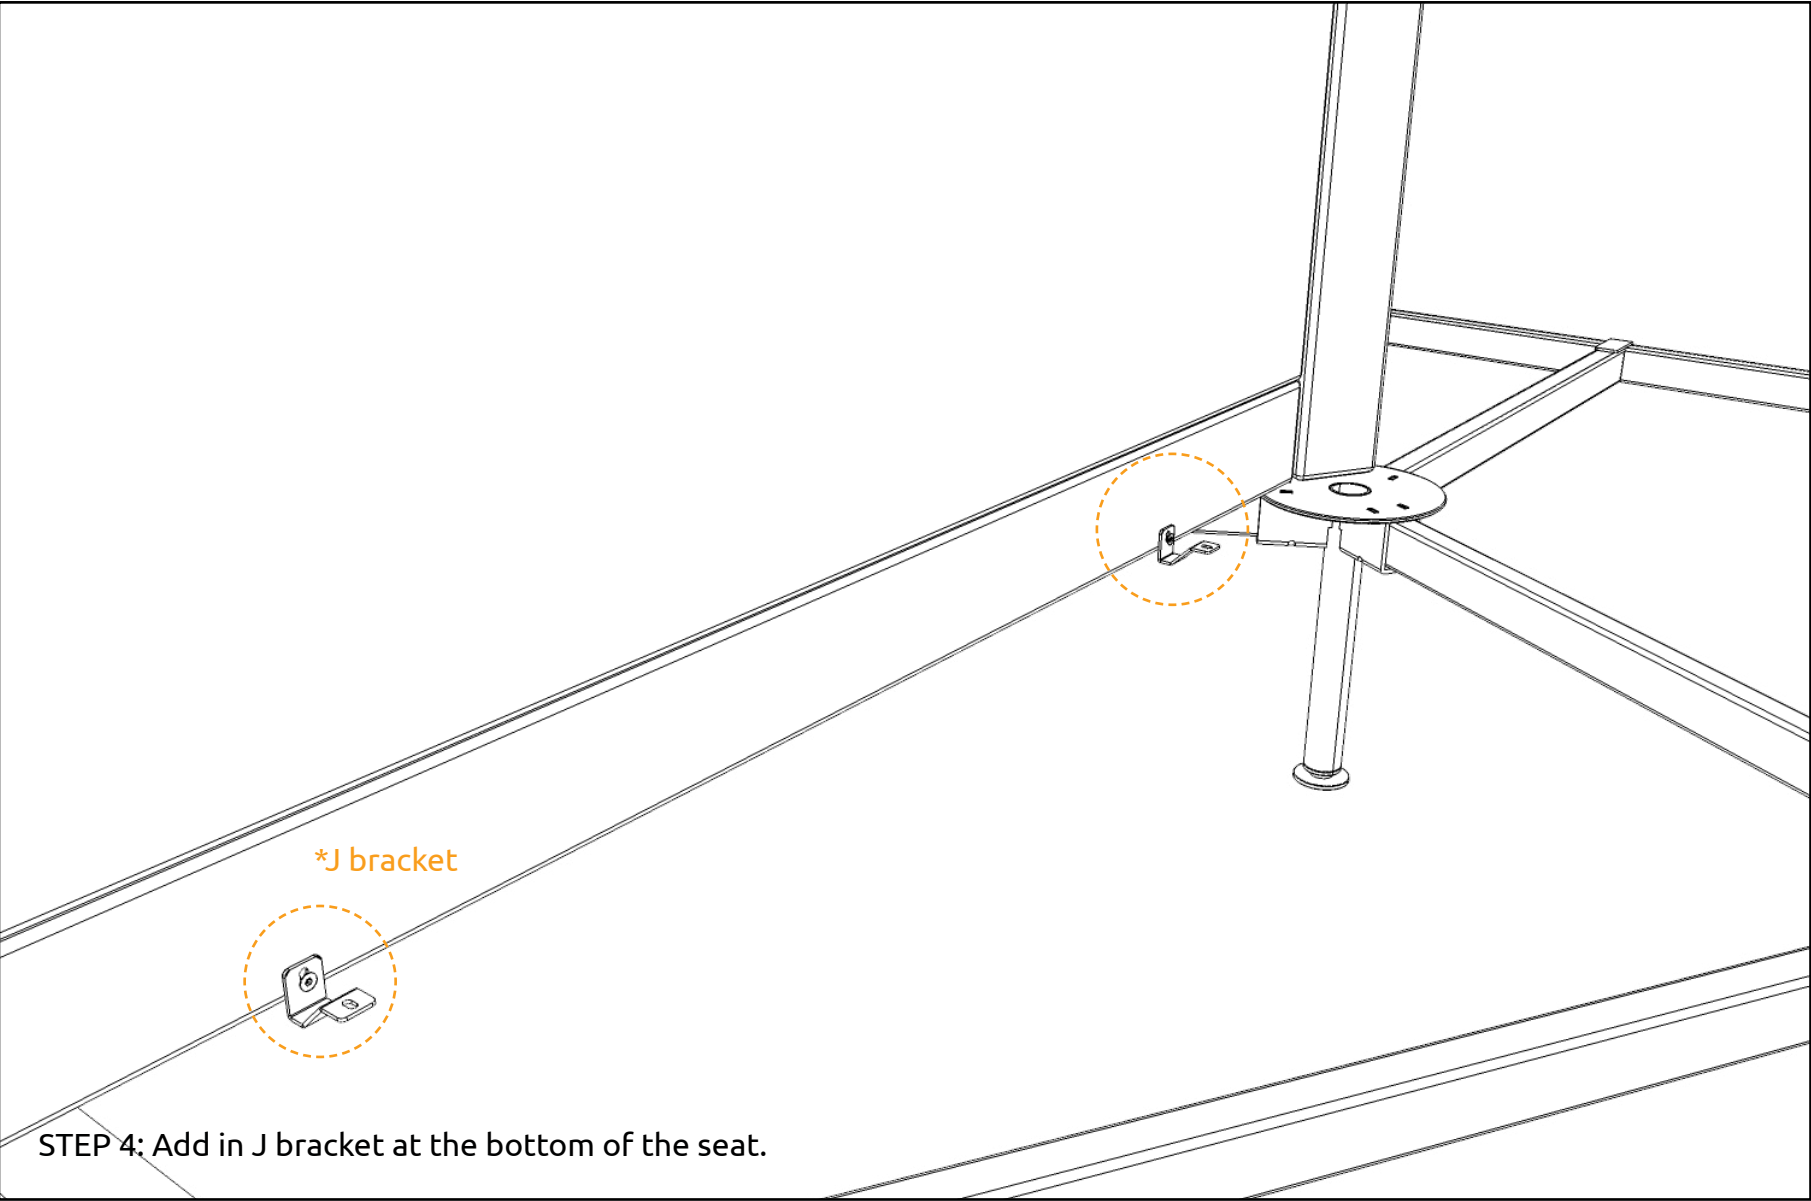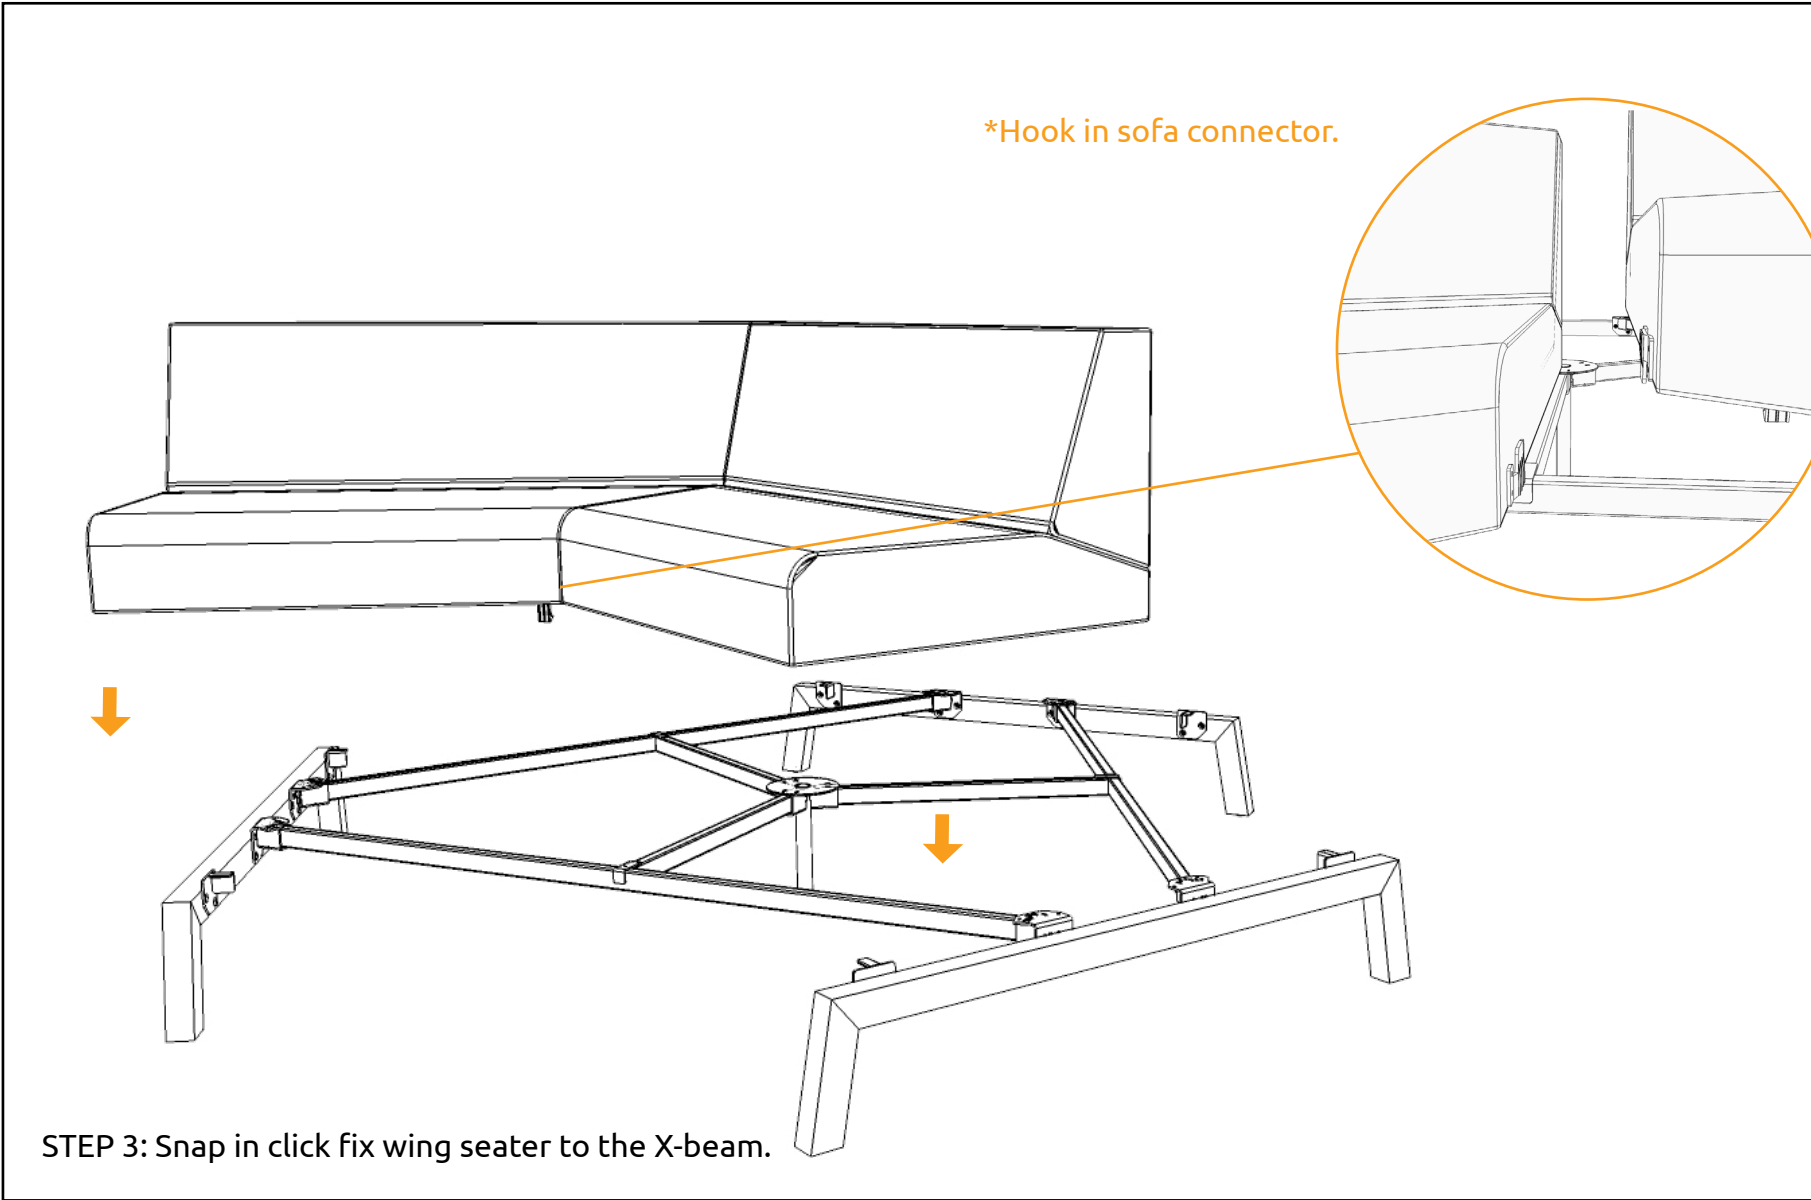

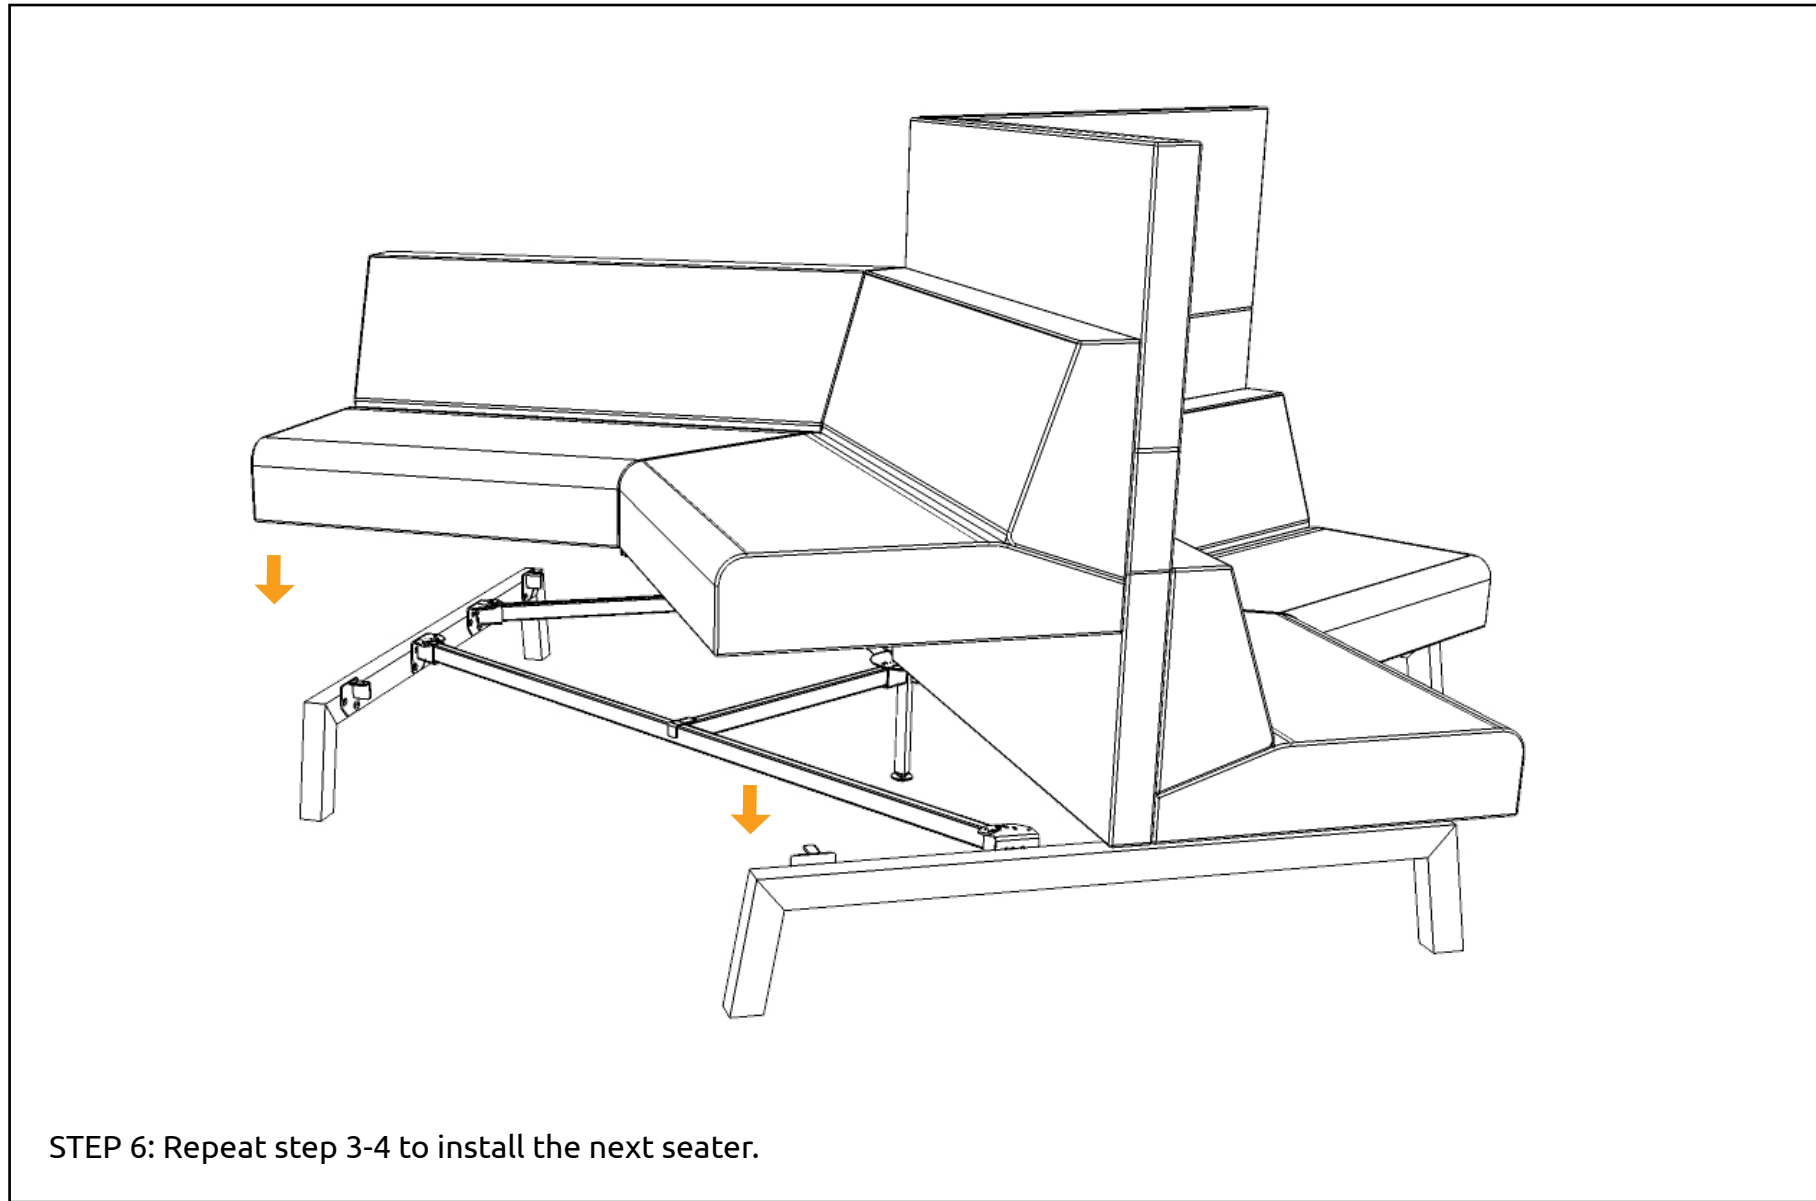
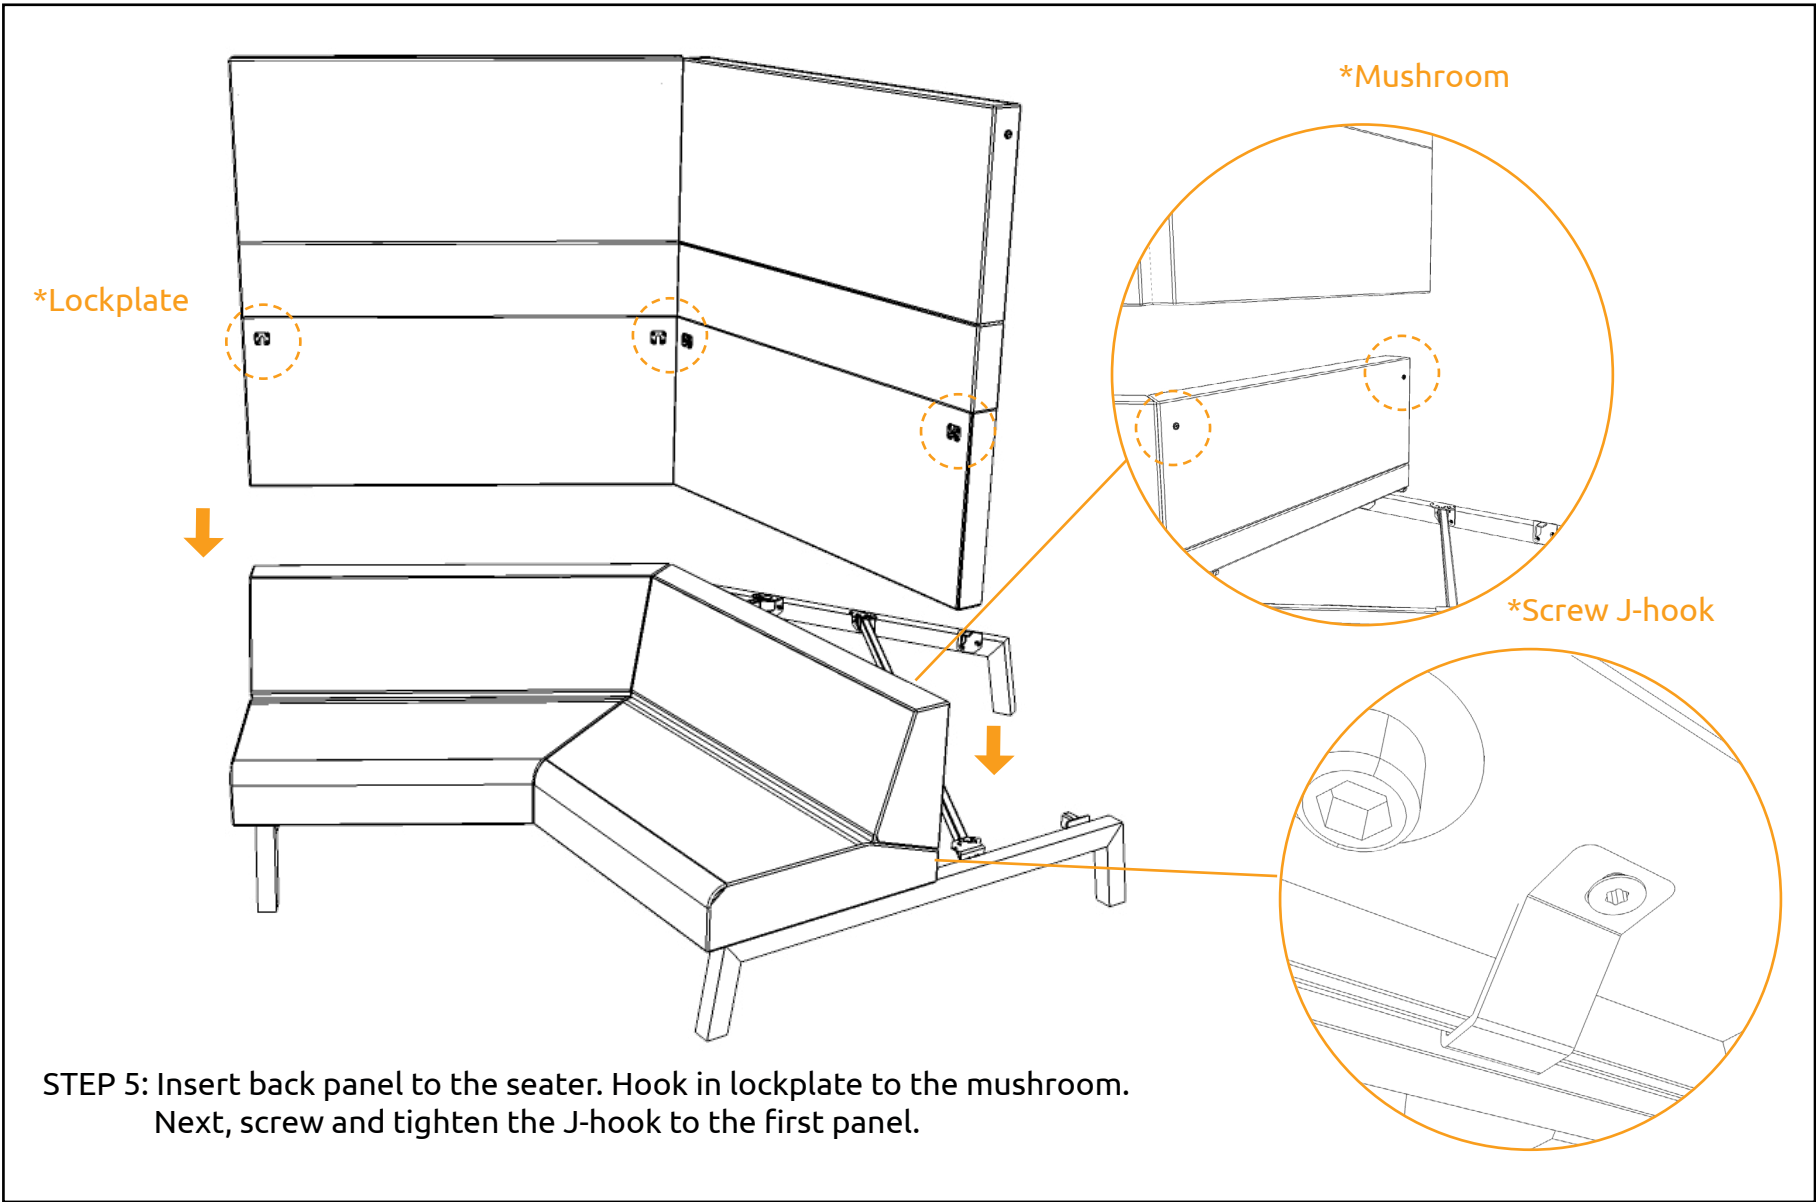


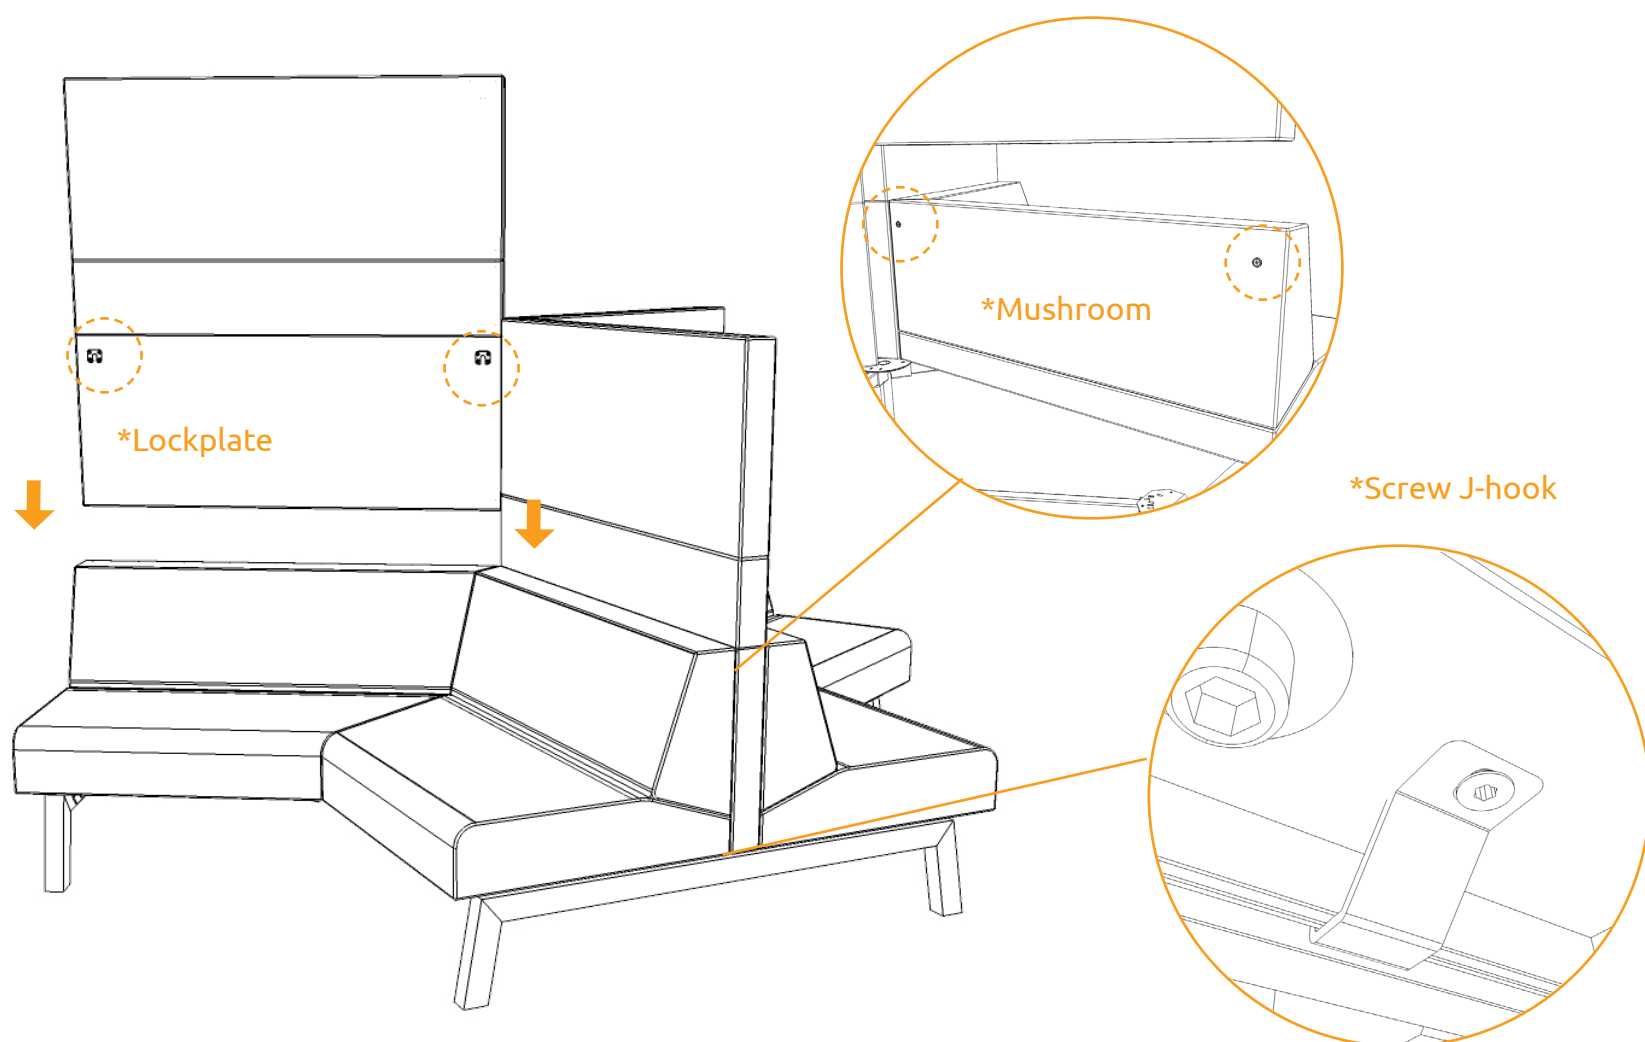

STEP 7: Insert the last back panel to the seater. Hook in lockplate to the mushroom.  
Next, screw and tighten the J-hook to the last panel.

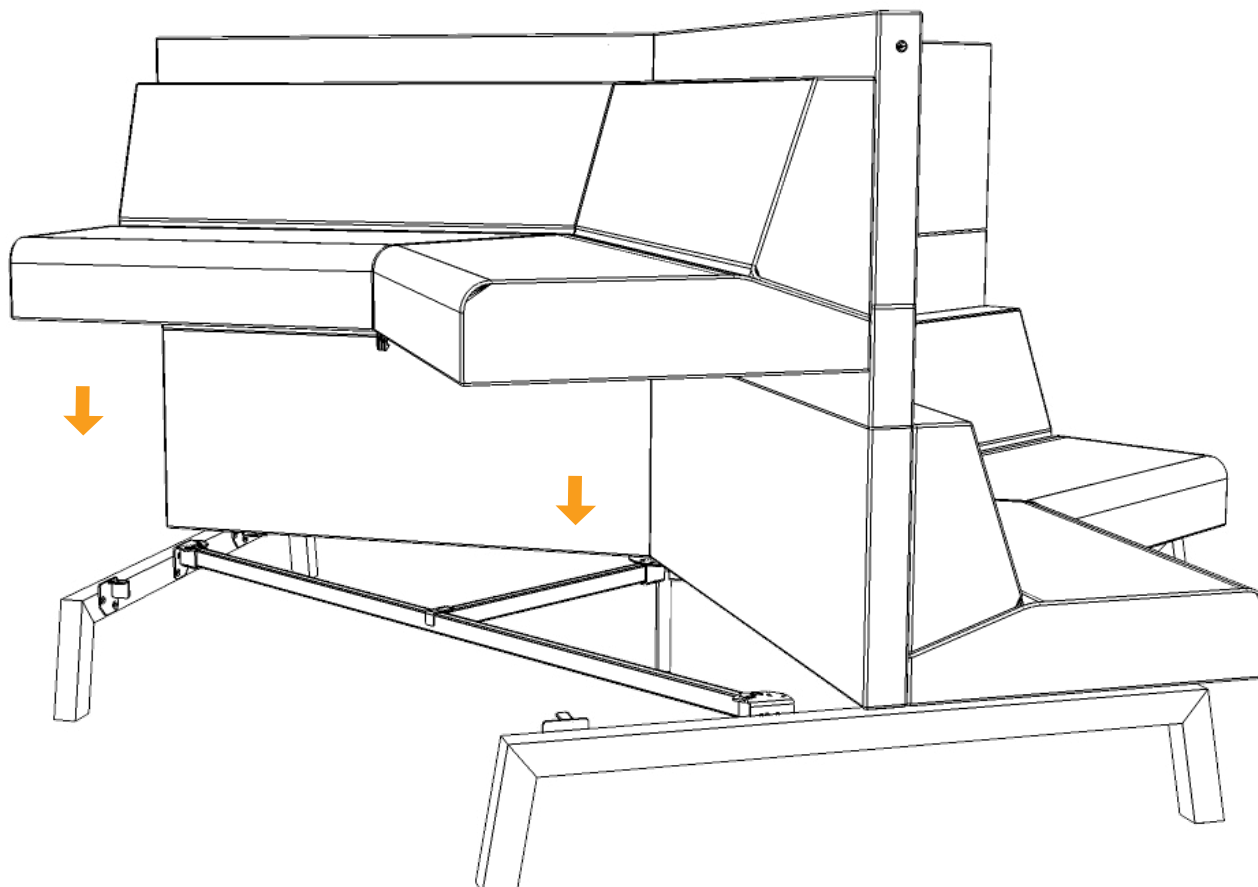


STEP 8: Repeat step 3-4 to install the last seater.

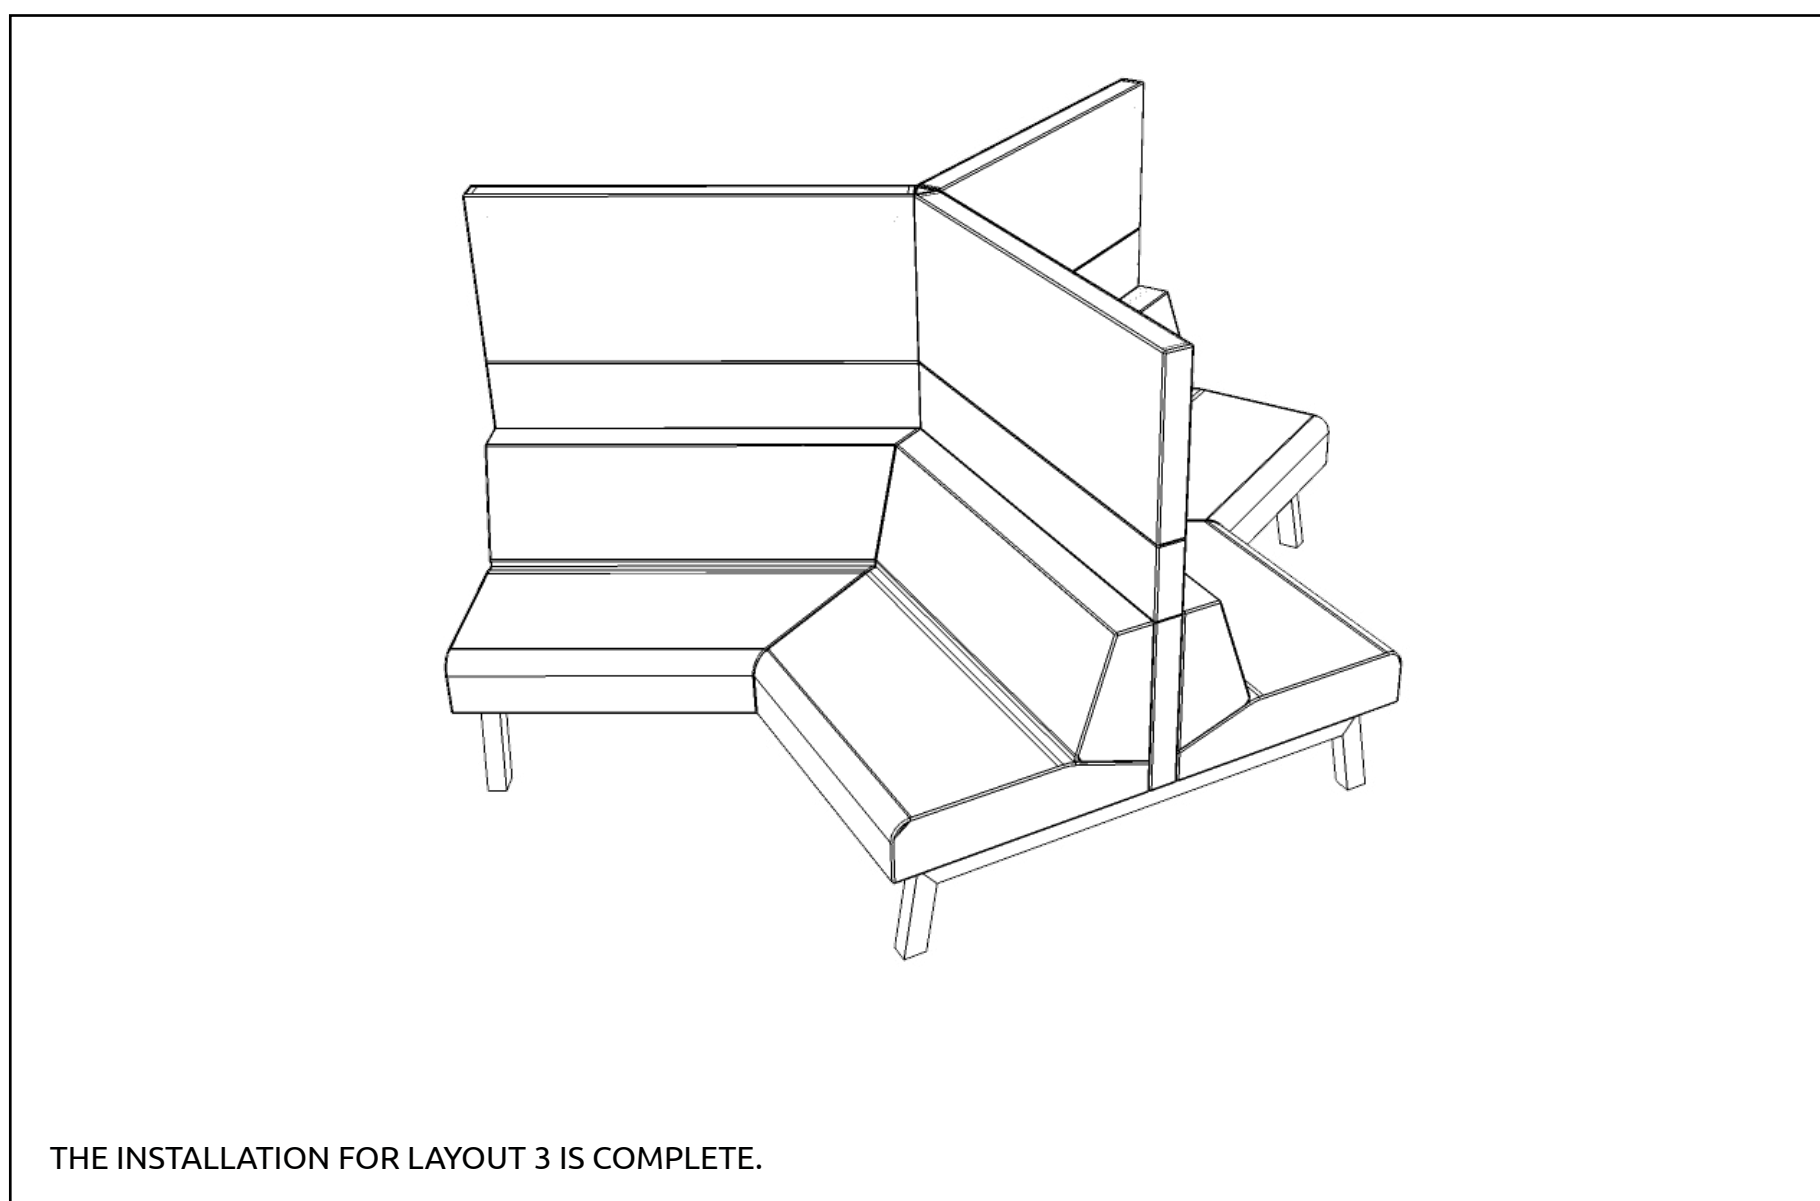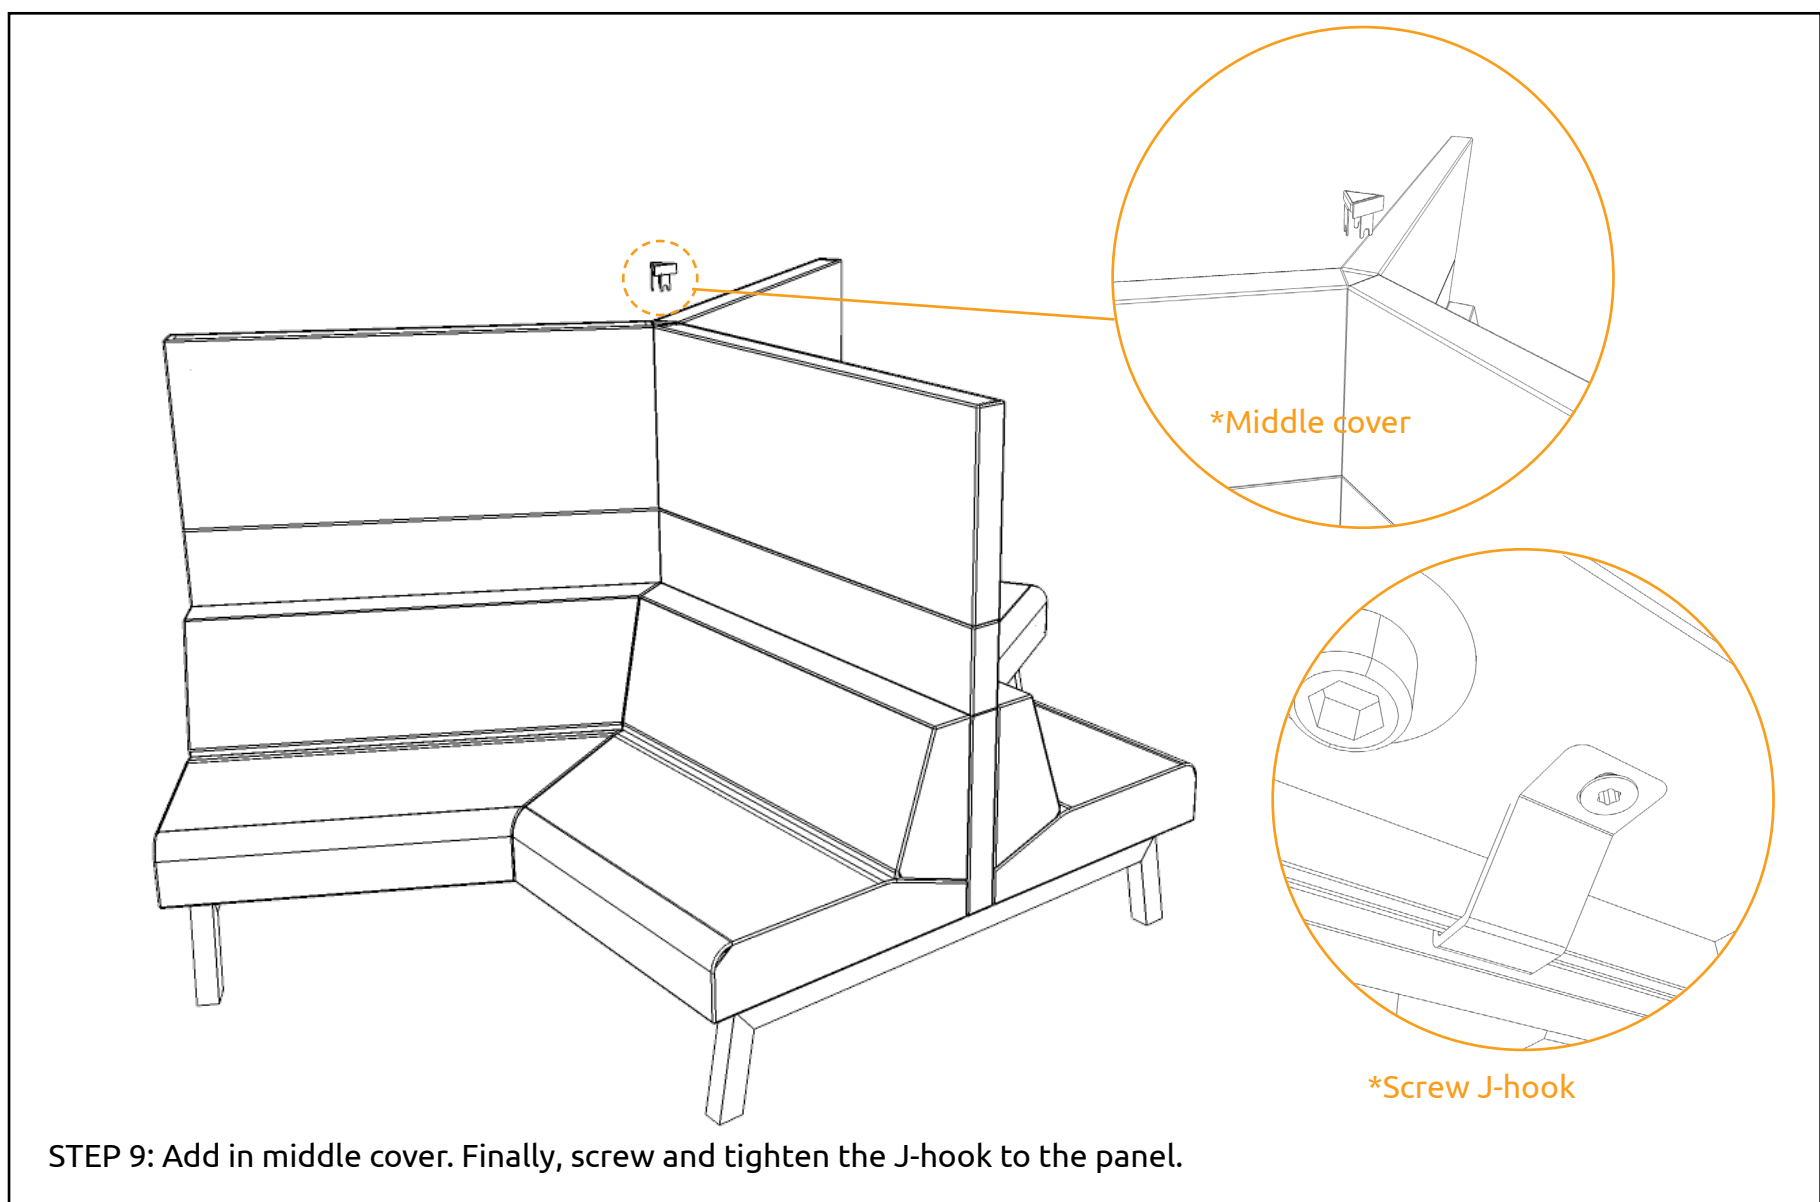





# LAYOUT 5

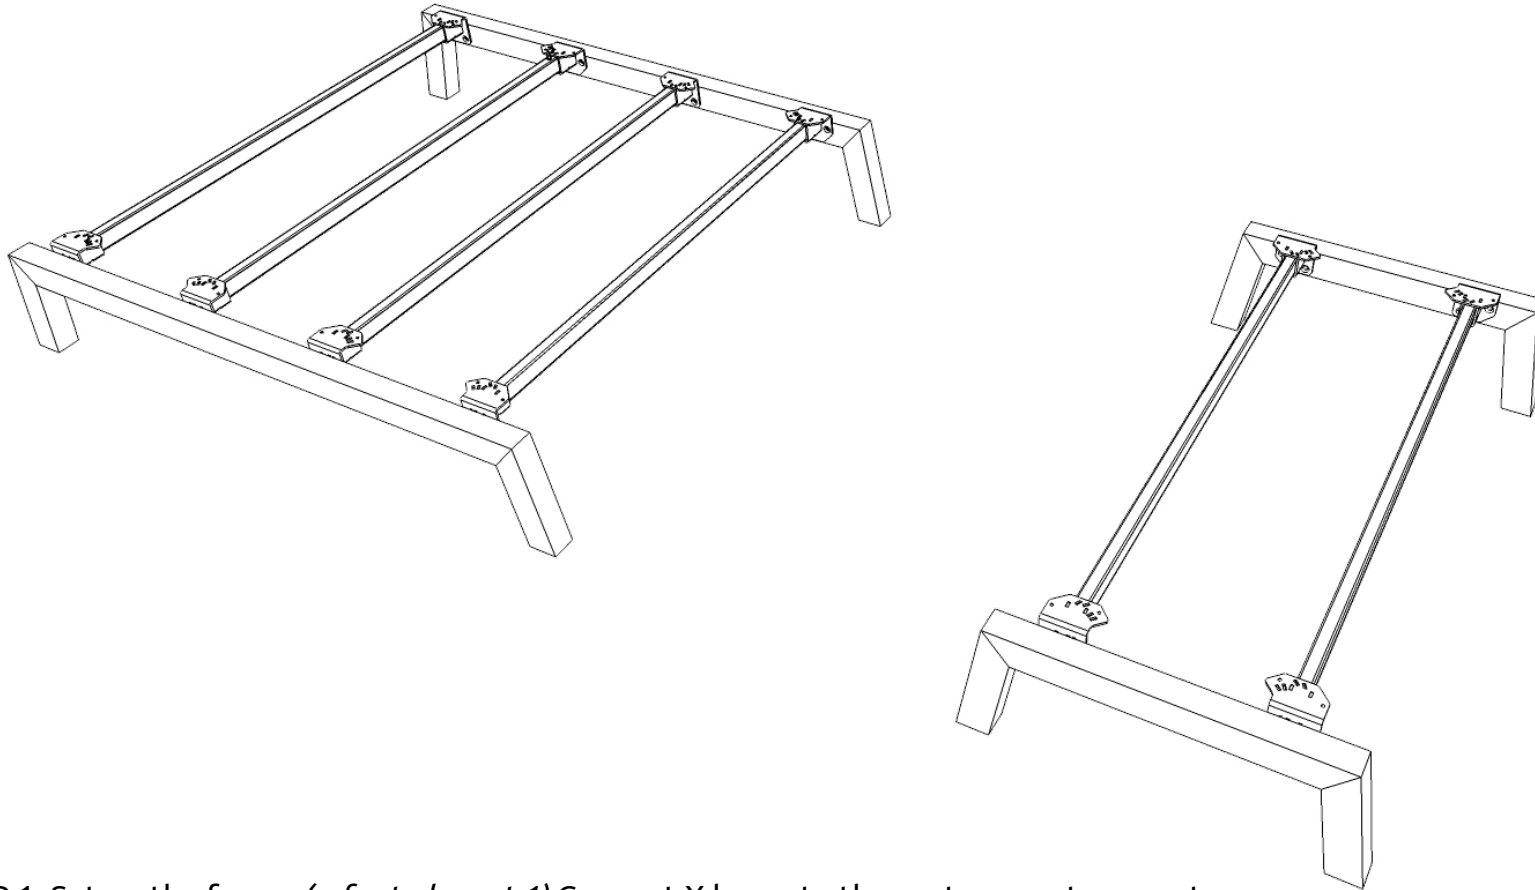


STEP 1: Set up the frame (*refer to layout 1*) Connect X beam to the seat support connectors.

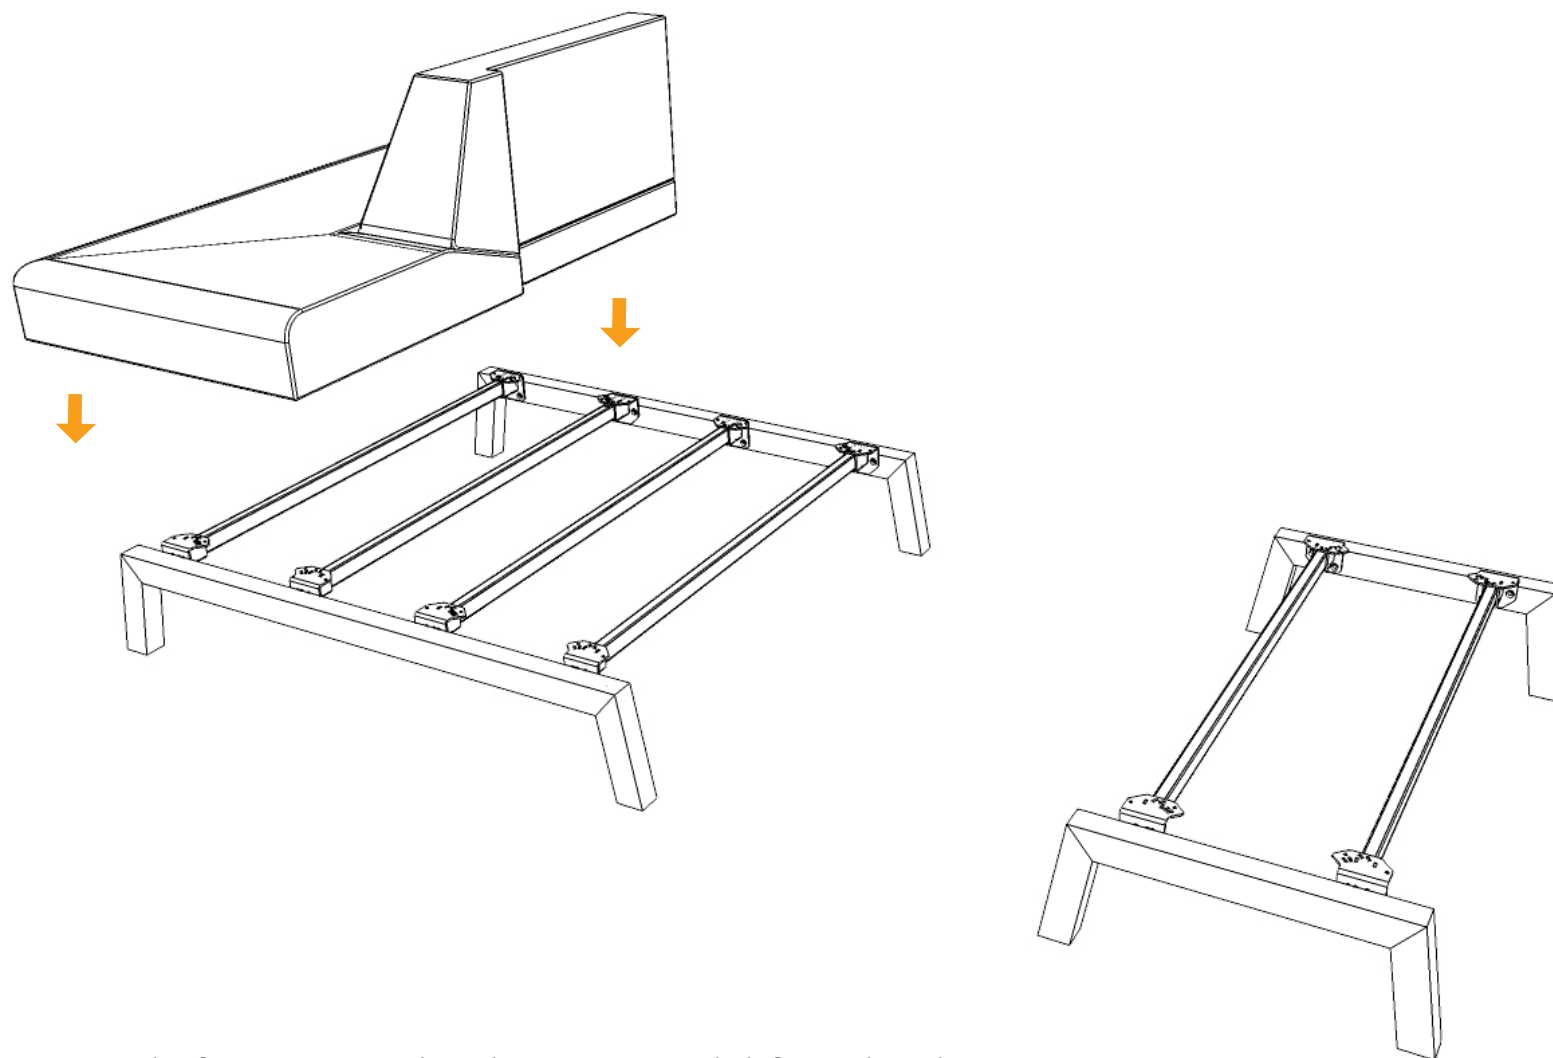

STEP 2: Put in the first seater on the X beam. Snap in click fix to the X beam.


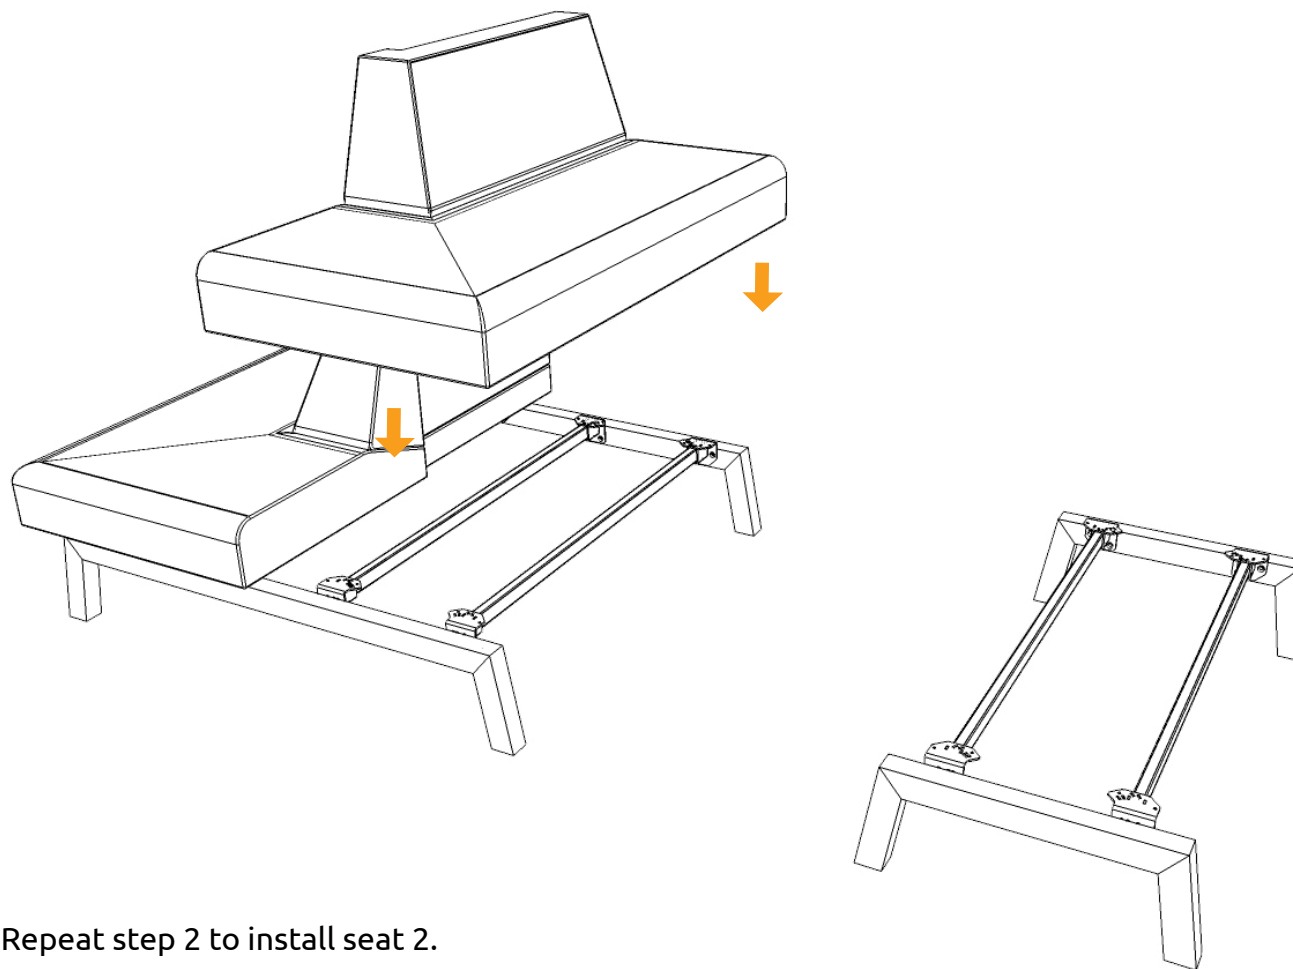




STEP 3: Repeat step 2 to install seat 2.

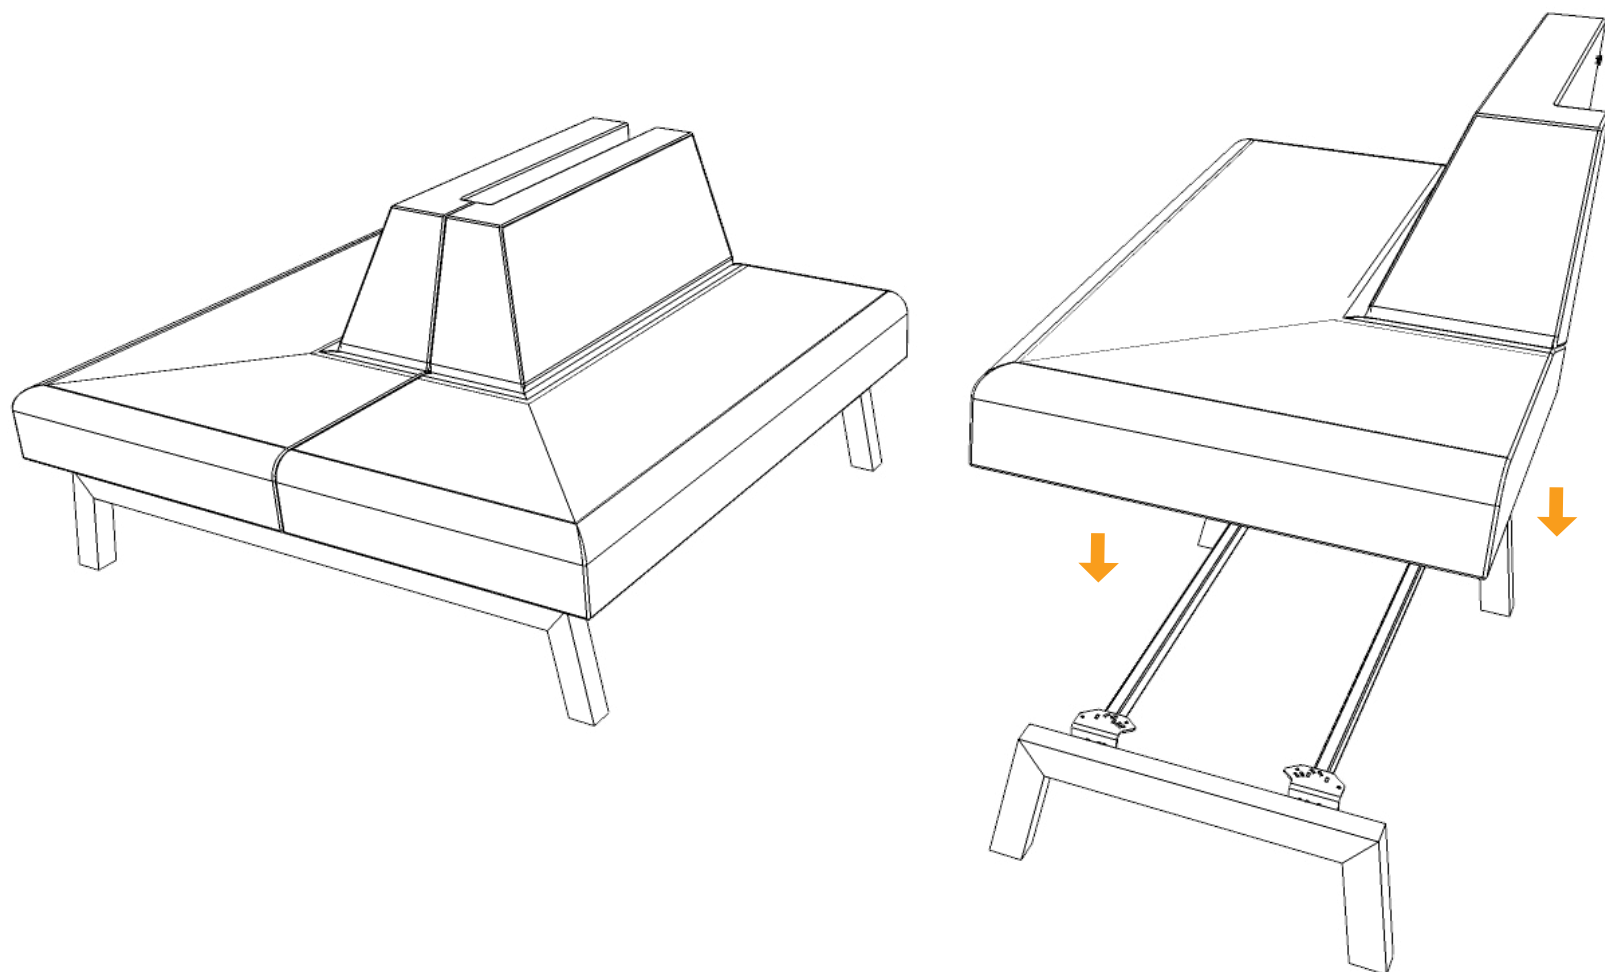


STEP 4: Repeat step 2 to install seat 3.




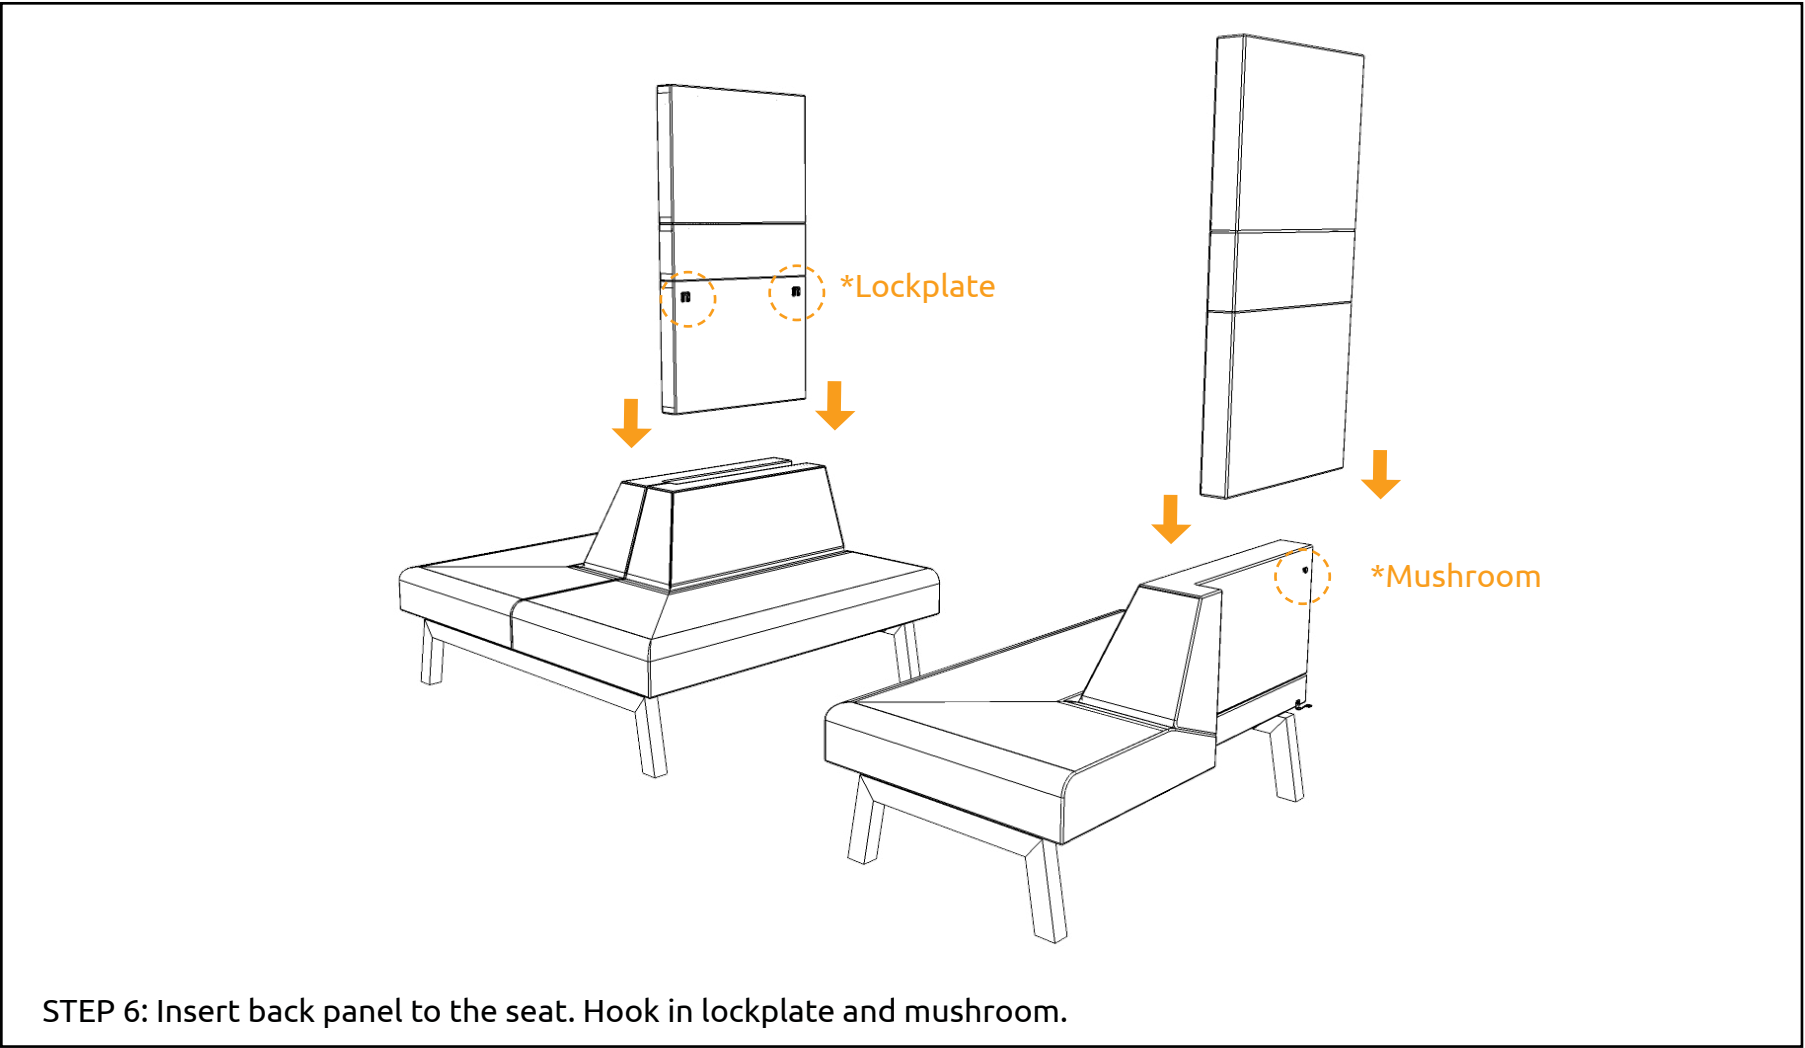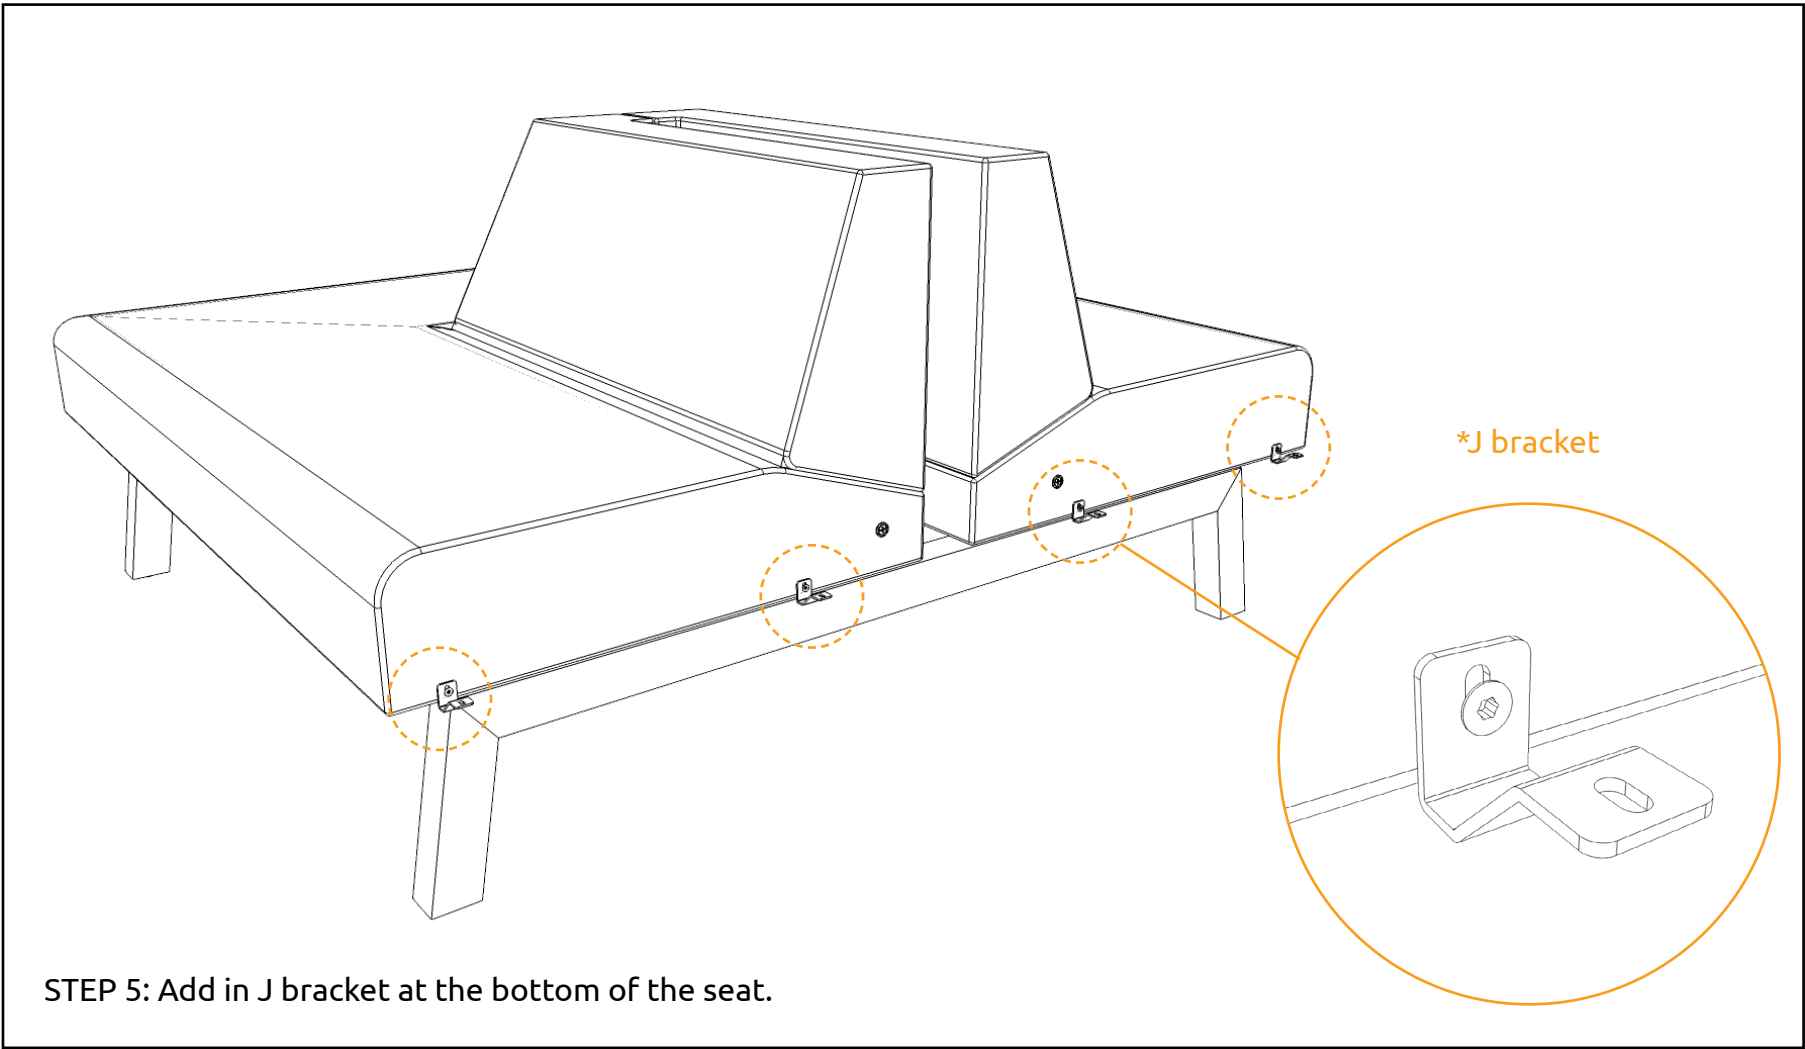

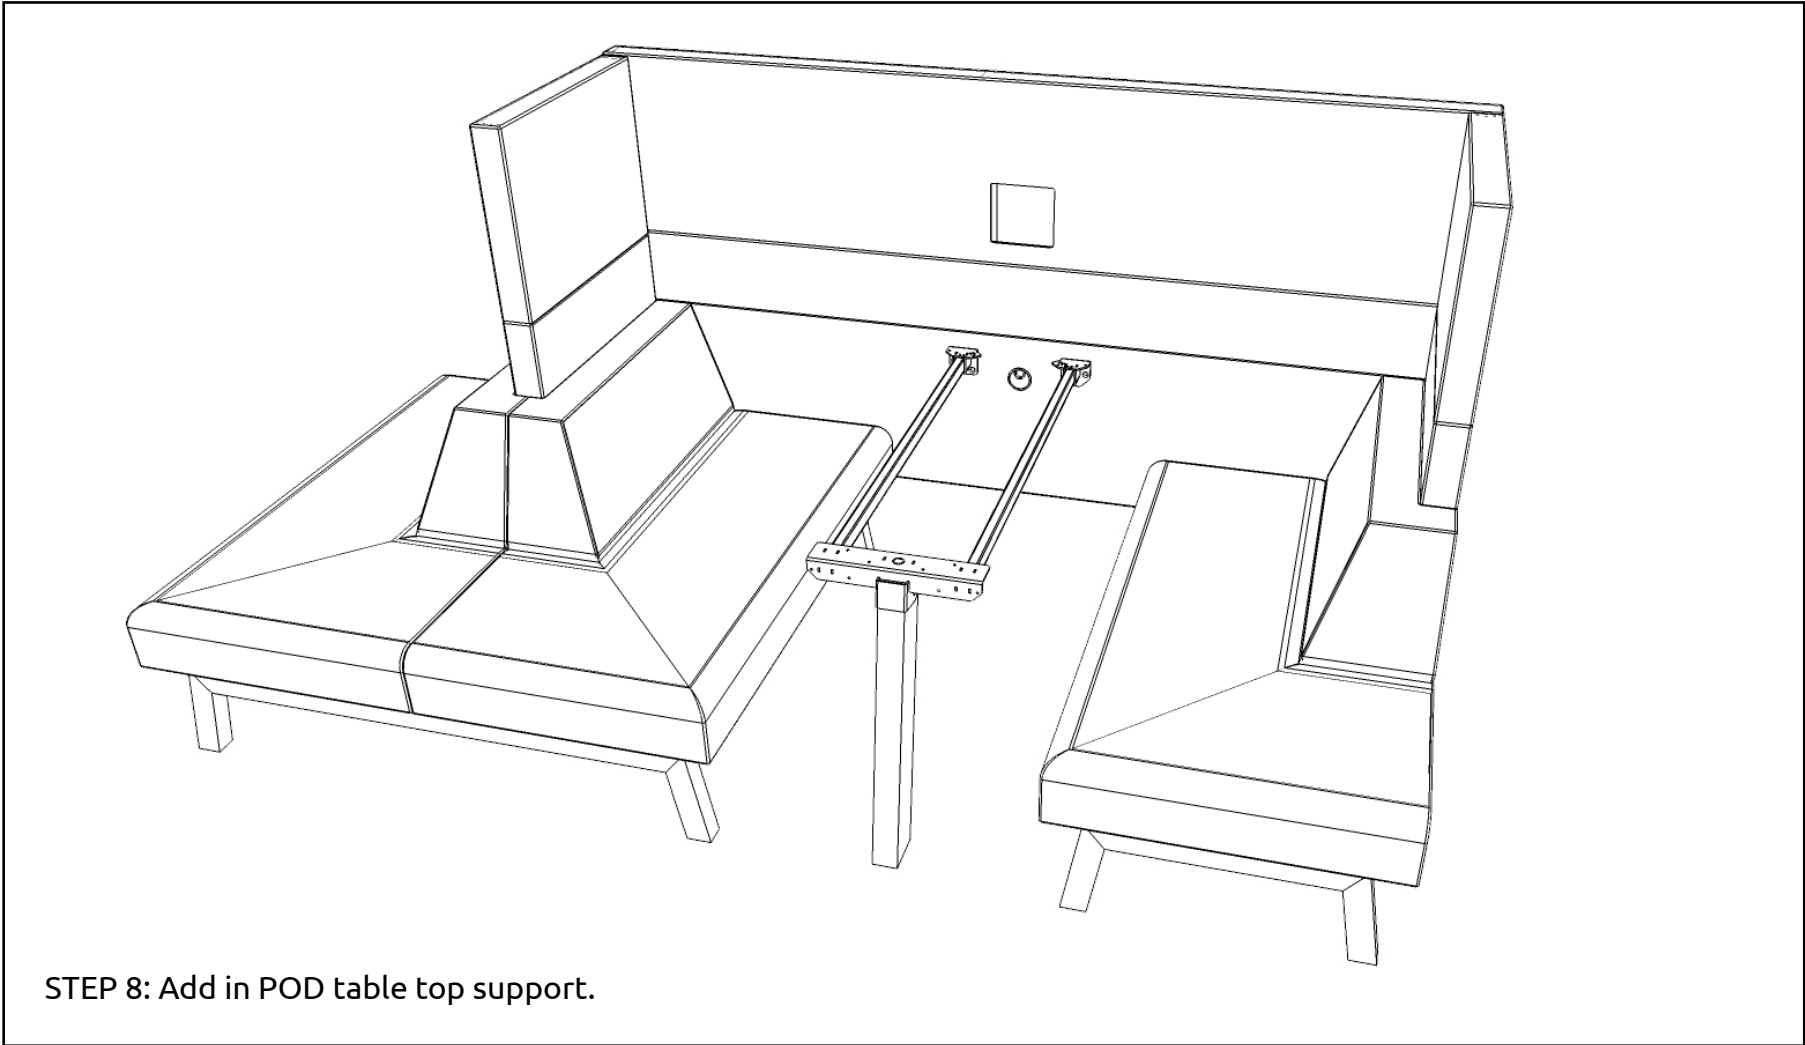
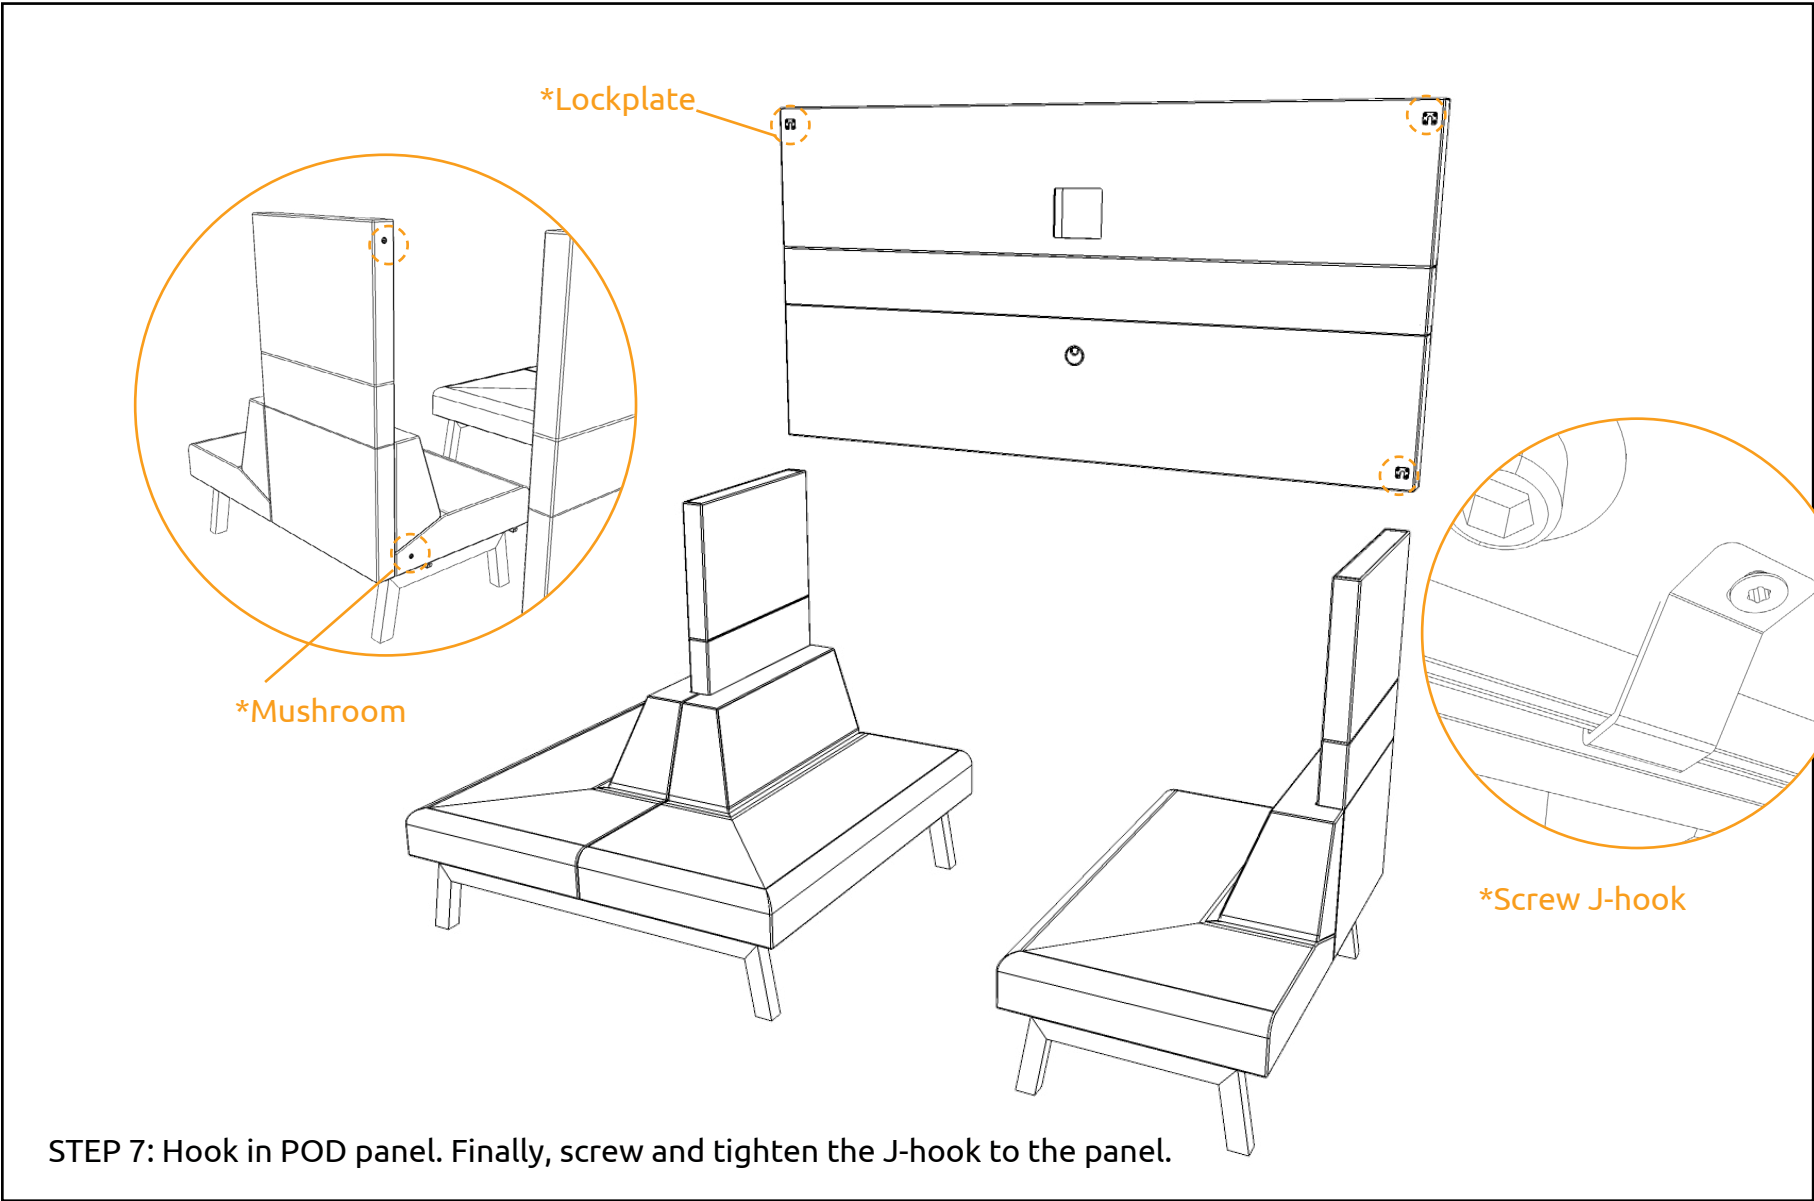


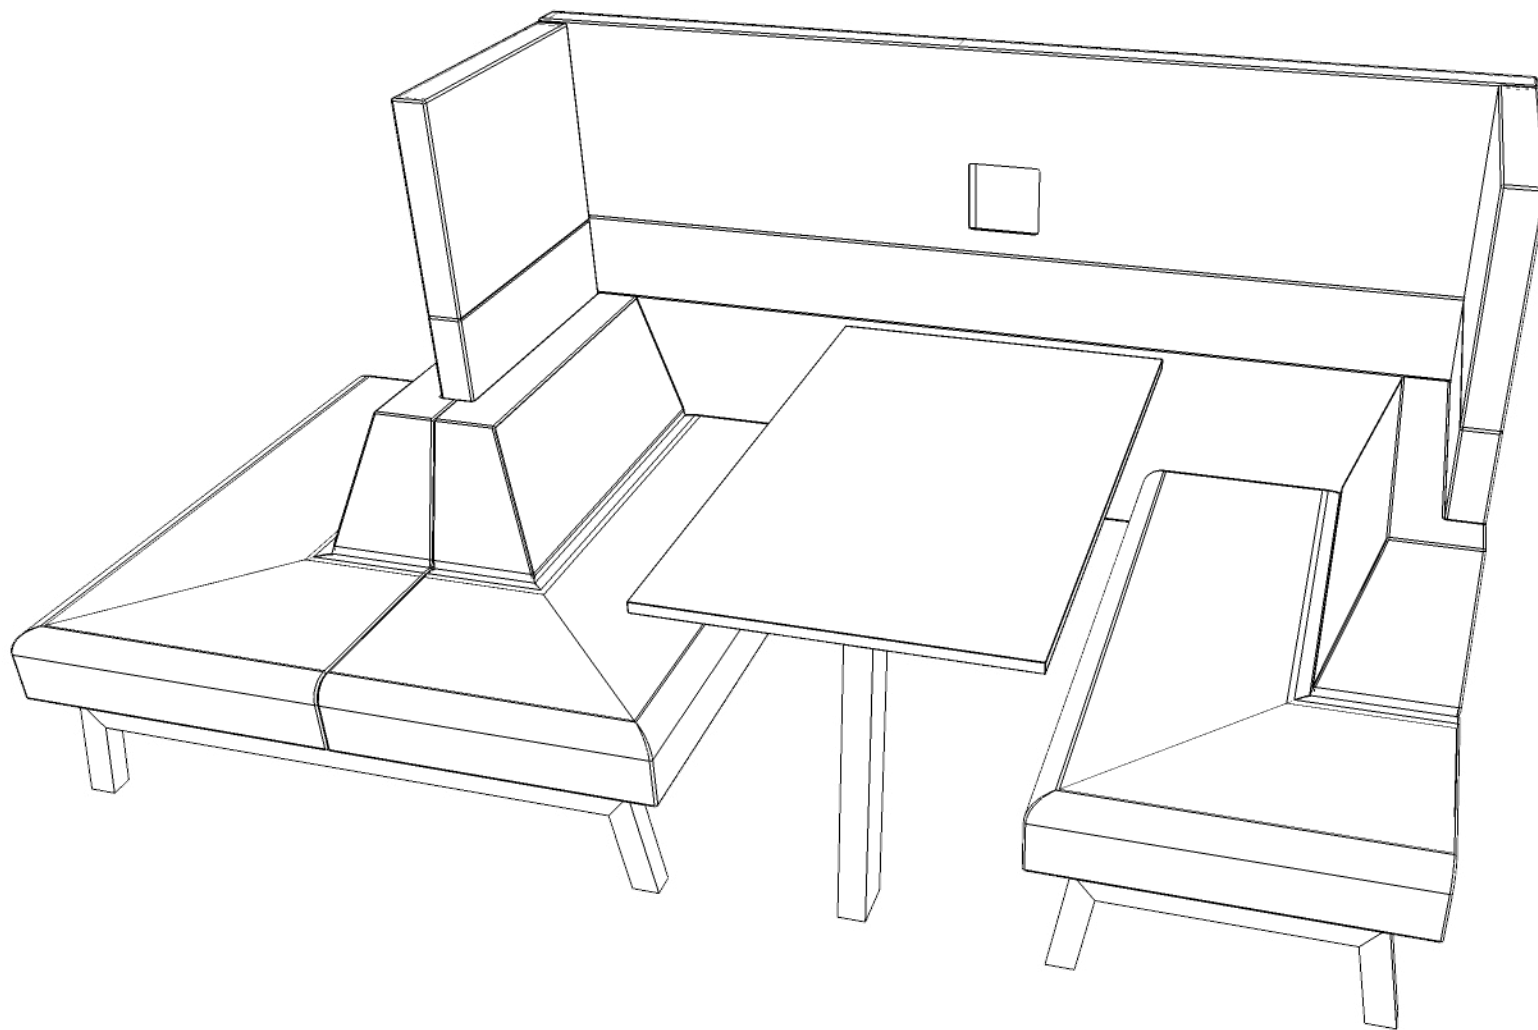


STEP 9: Install the POD table.

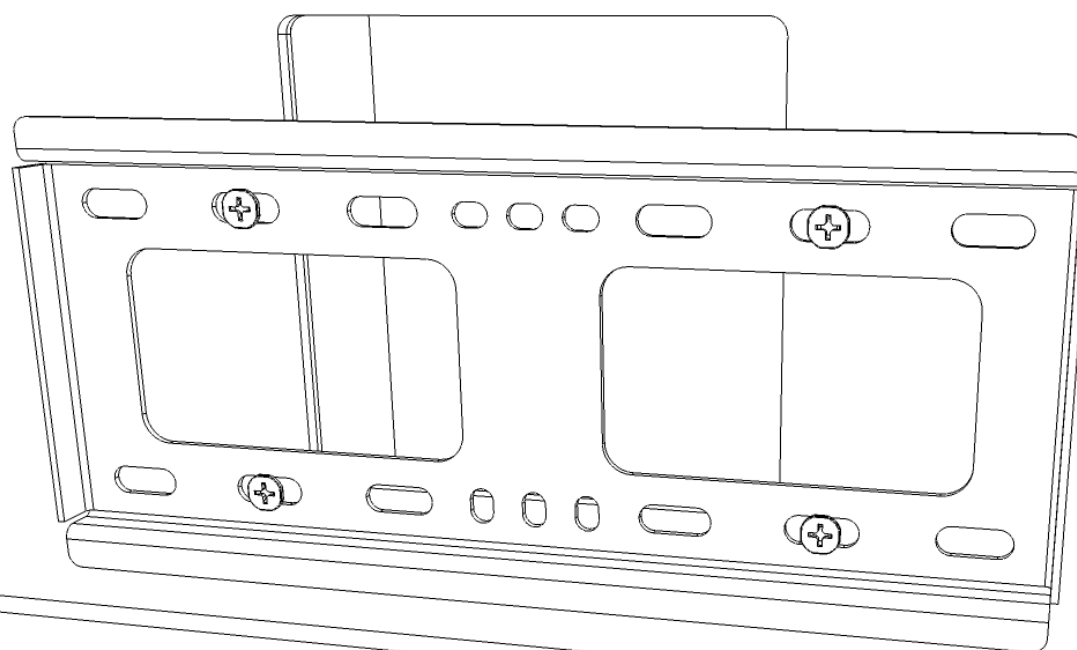


STEP 10: Open hole for monitor bracket.

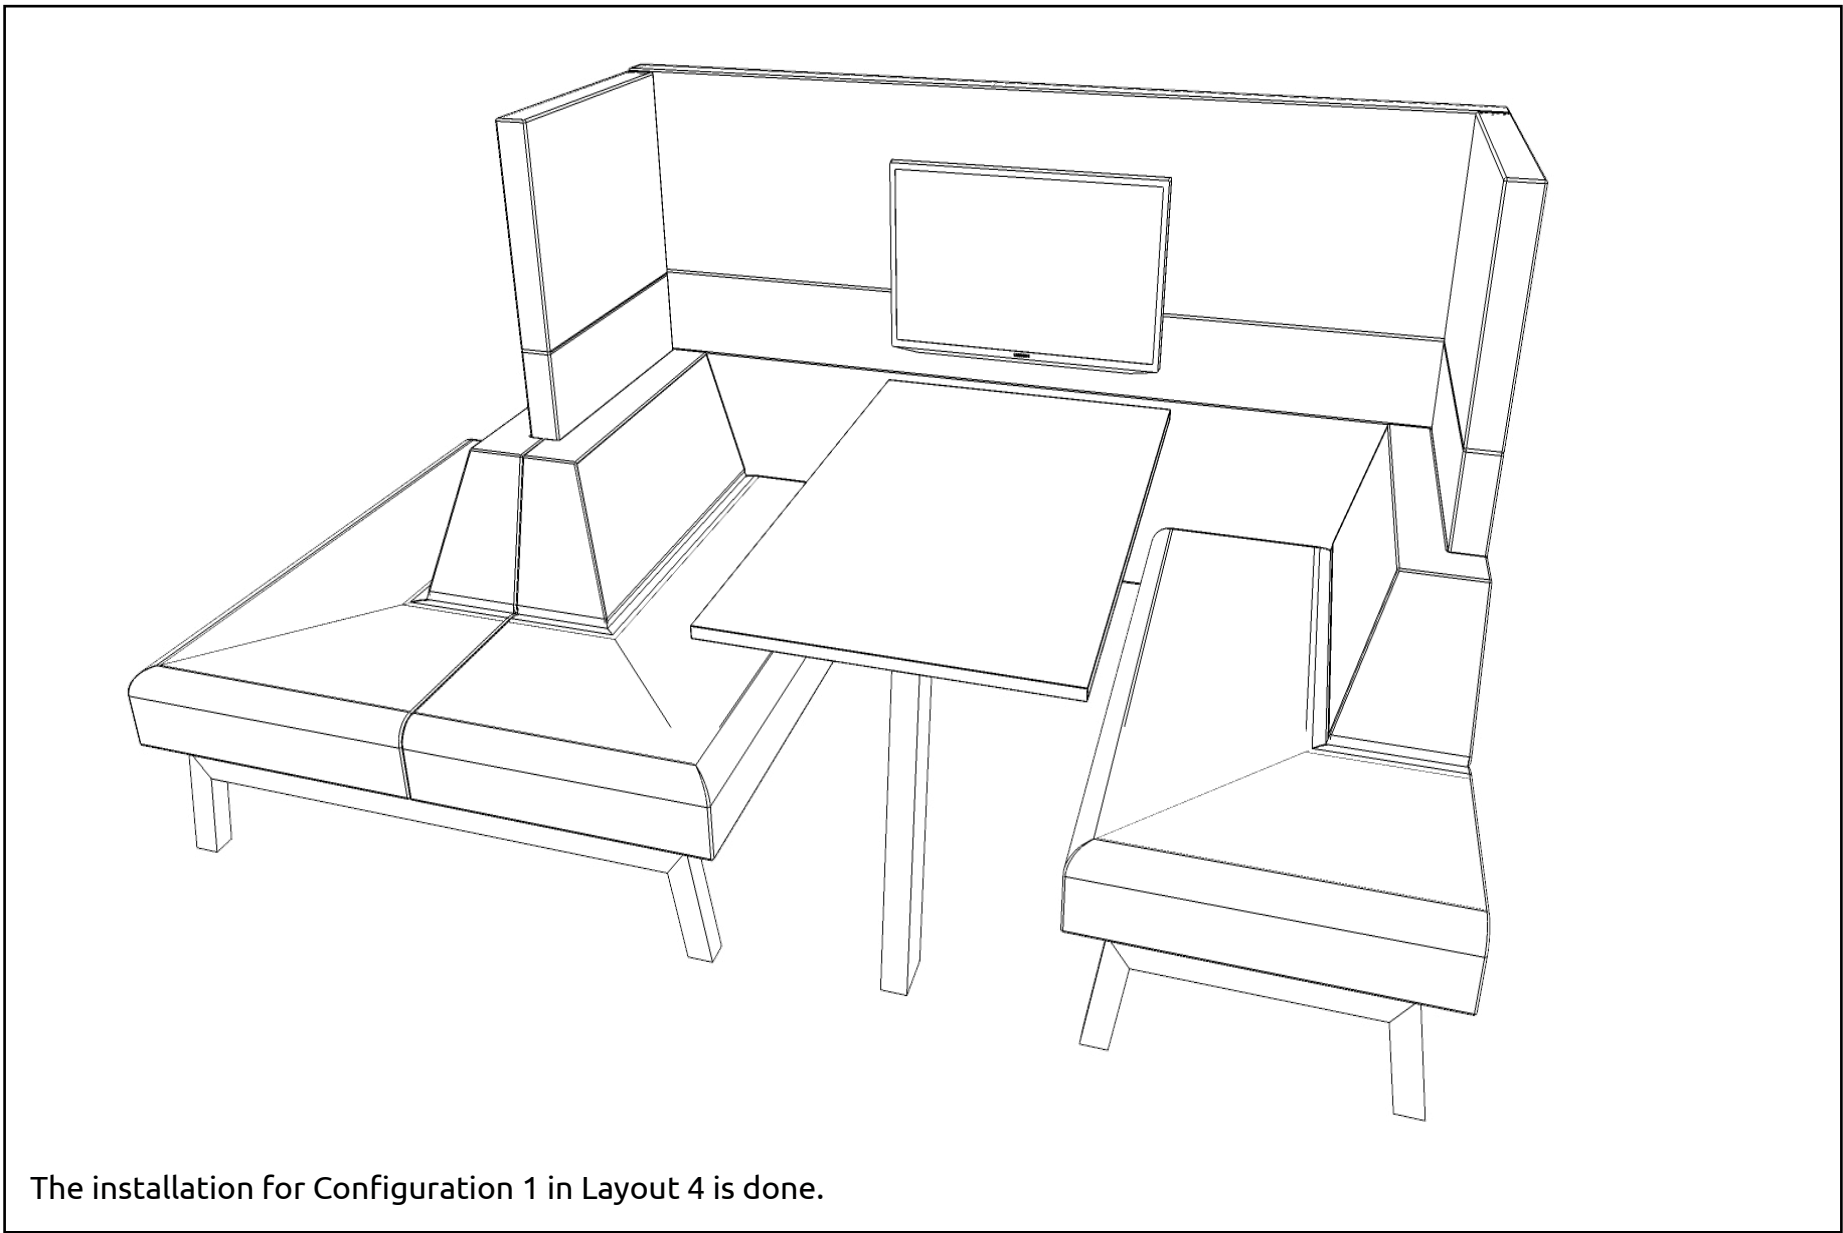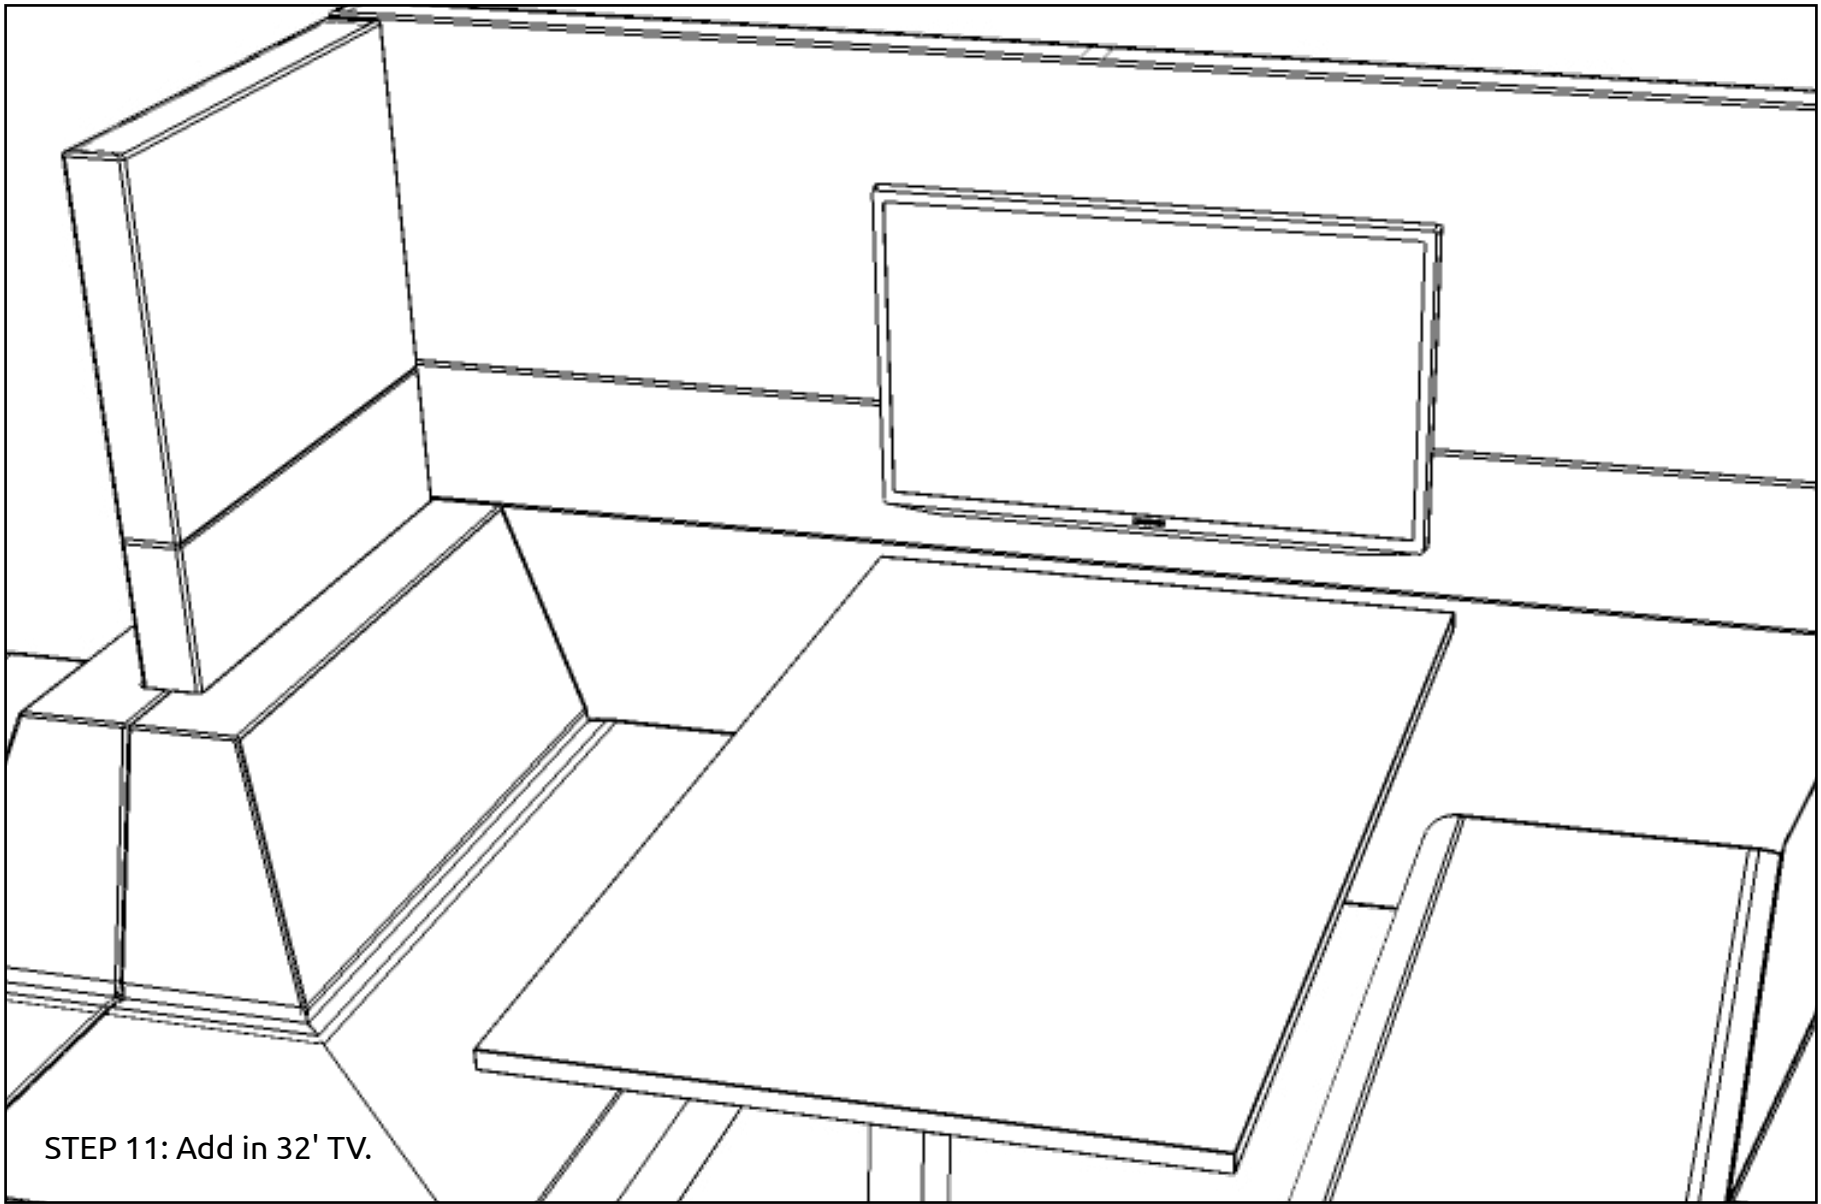


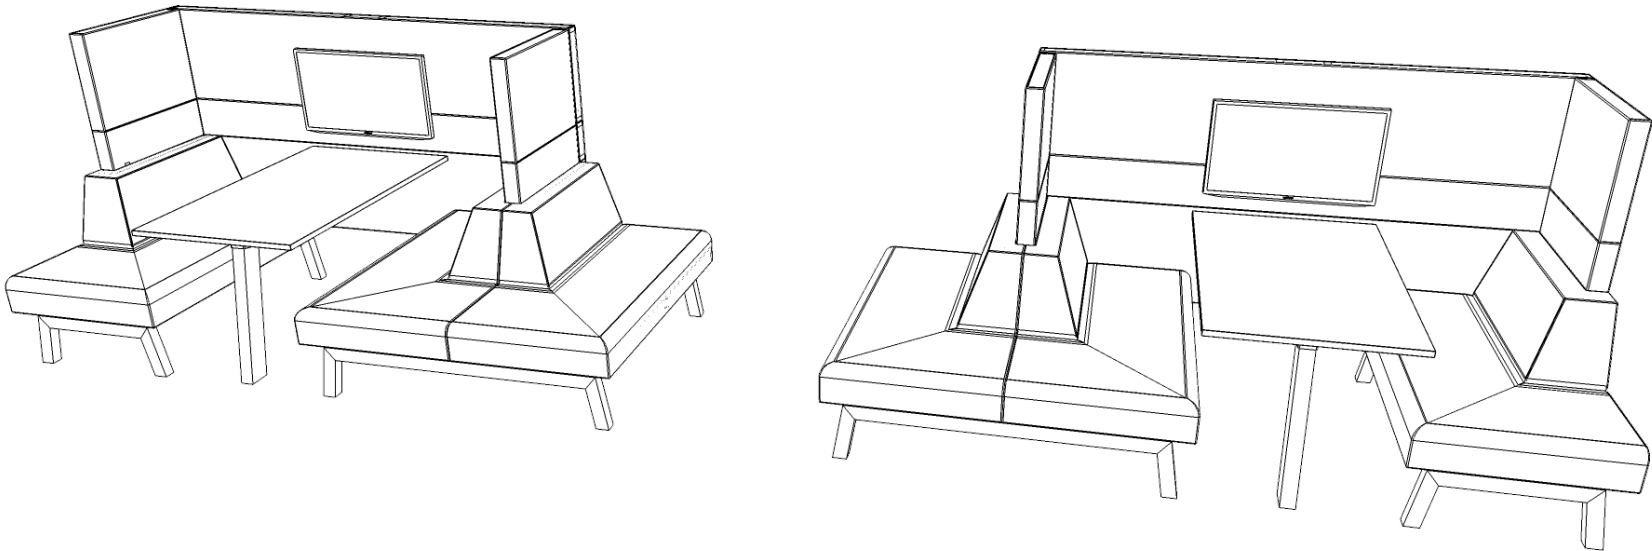


STEP 12: Repeat step 1- 10 to duplicate Configuration 1. Place it side by side.

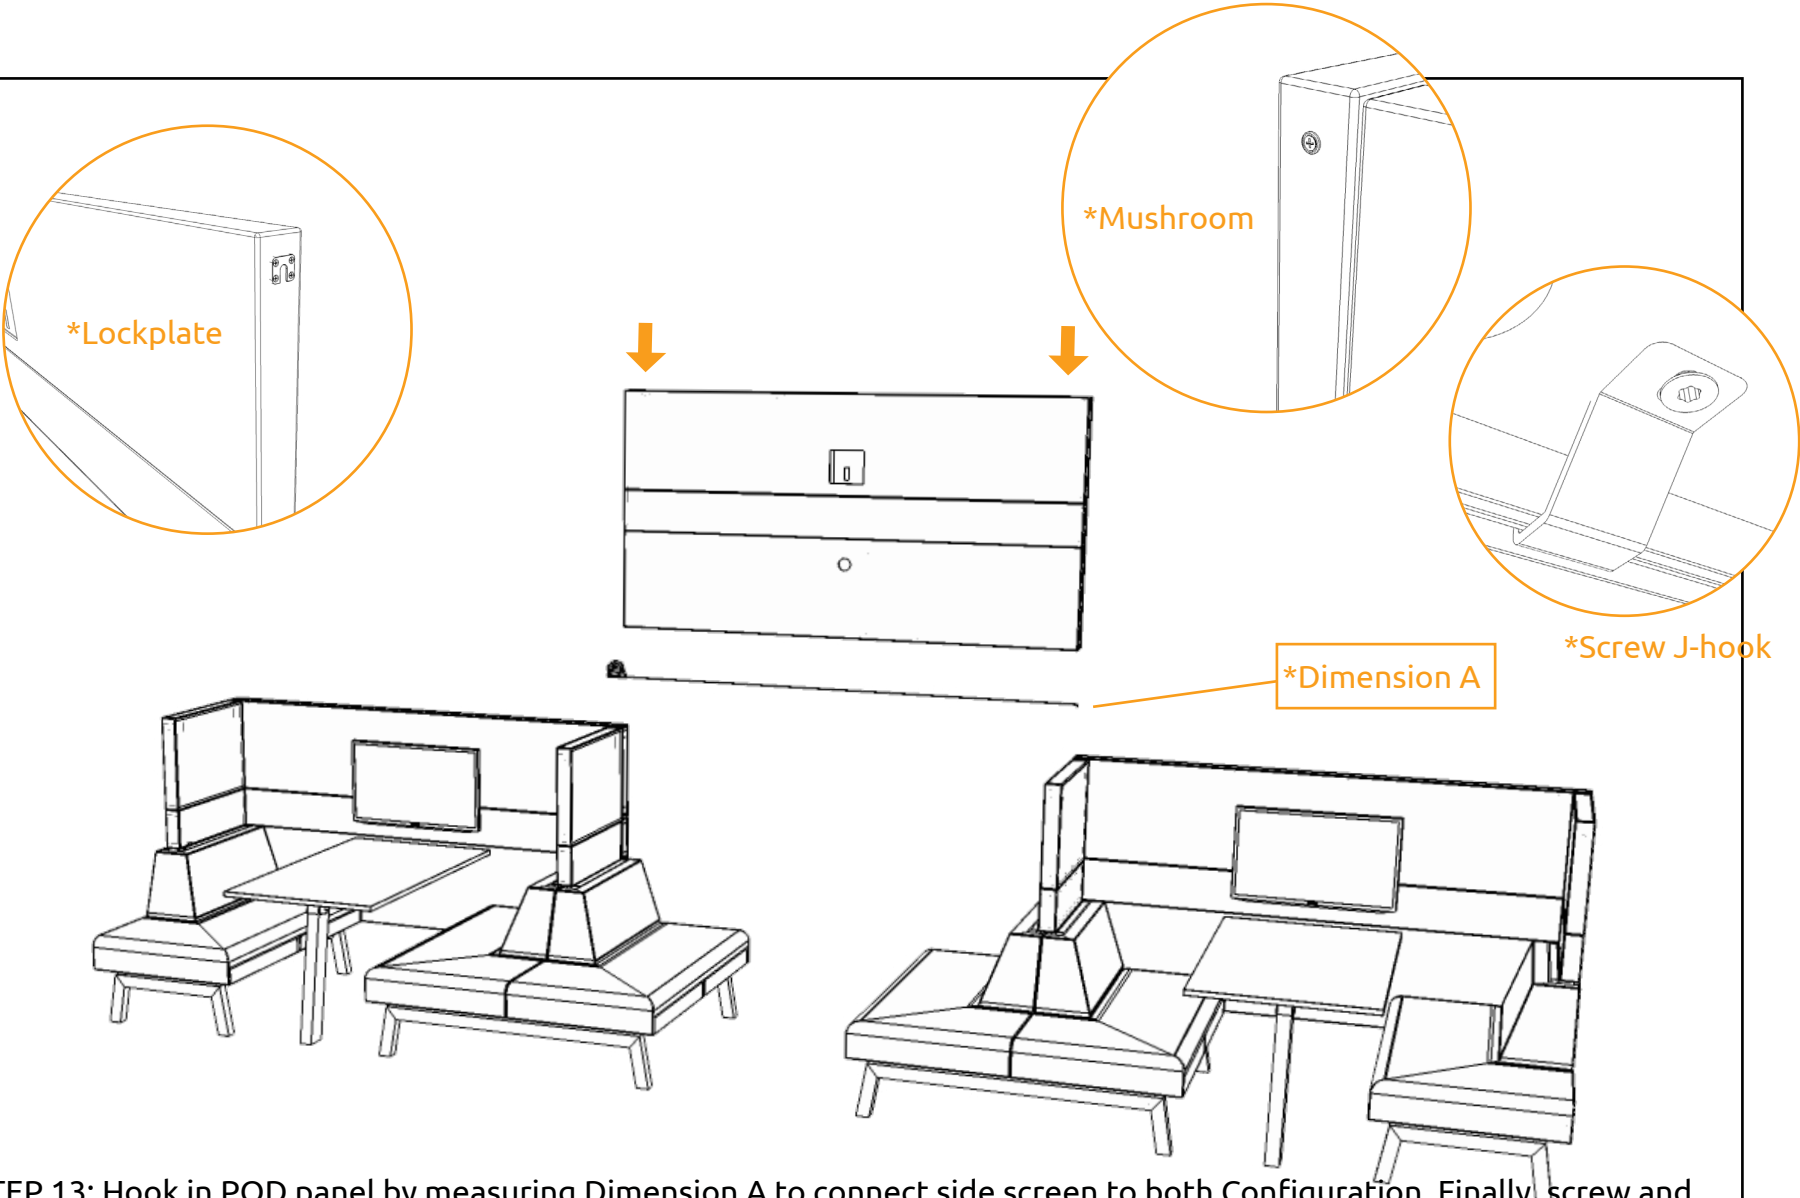

STEP 13: Hook in POD panel by measuring Dimension A to connect side screen to both Configuration. Finally, screw and tighten the J-hook to the panel.

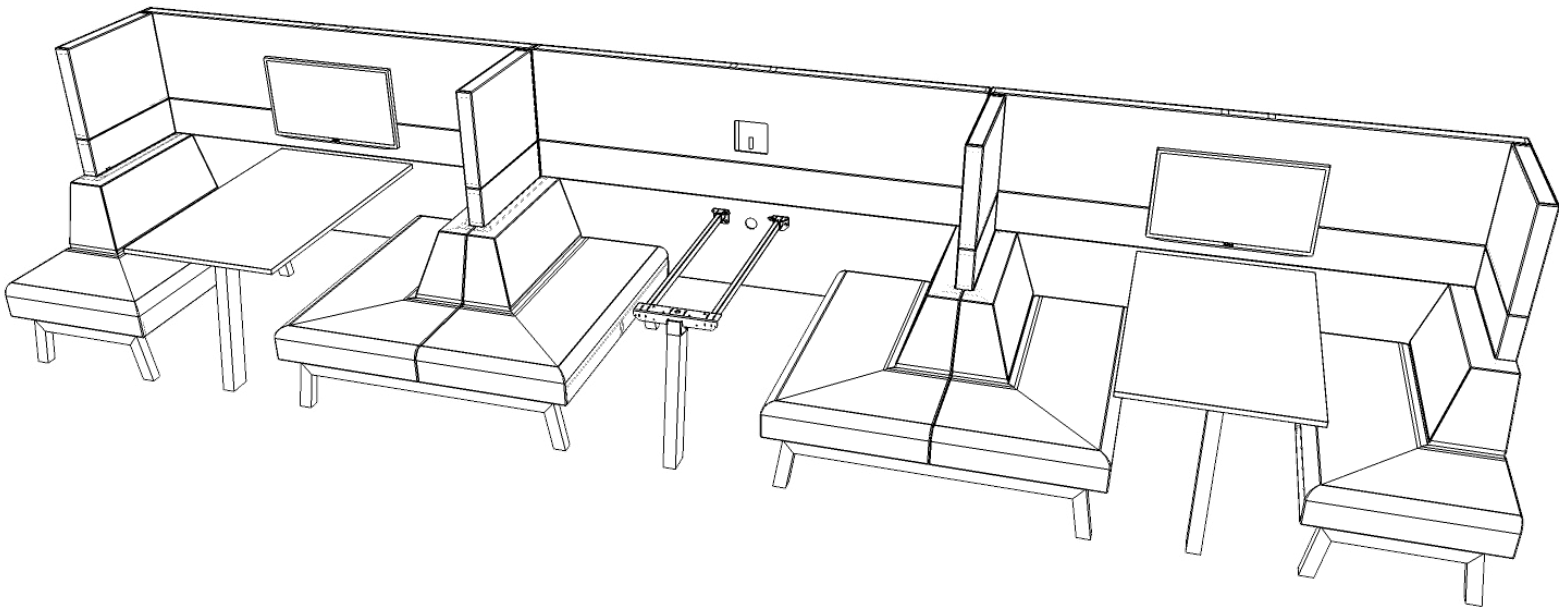


STEP 14: Add in POD table top support.

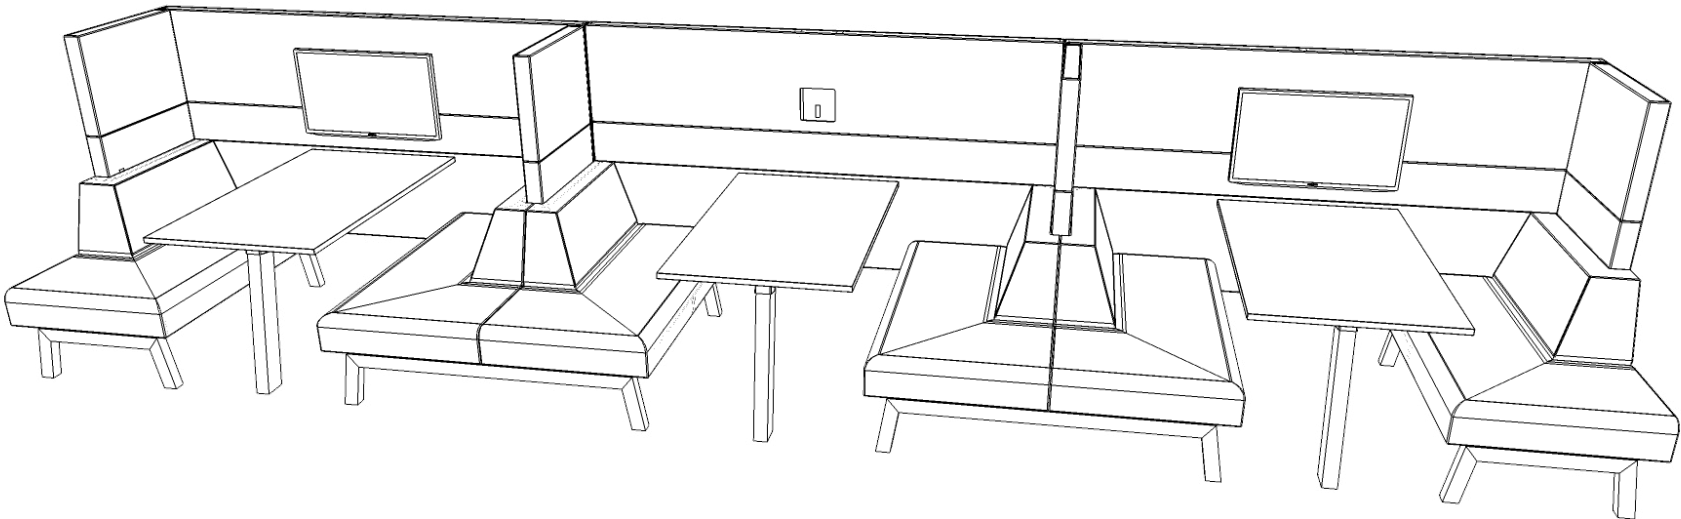


STEP 15: Install the POD table.



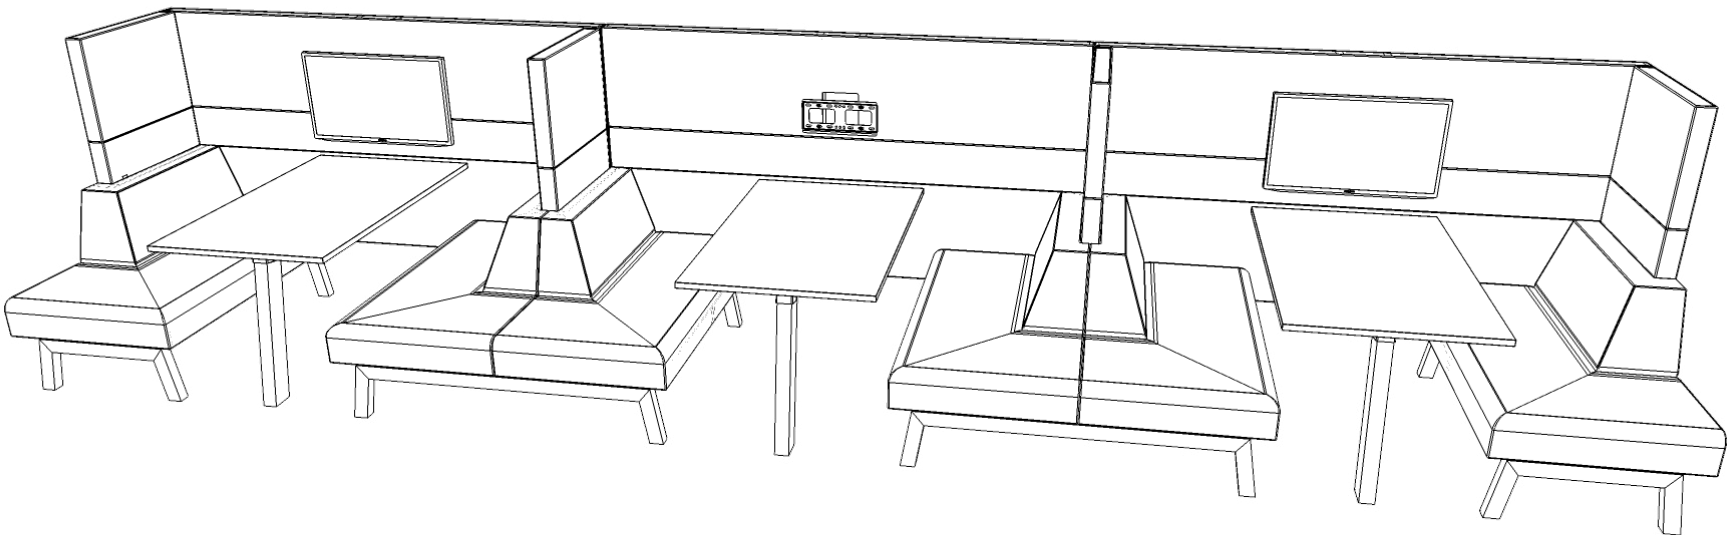


STEP 16: Open hole for monitor bracket.

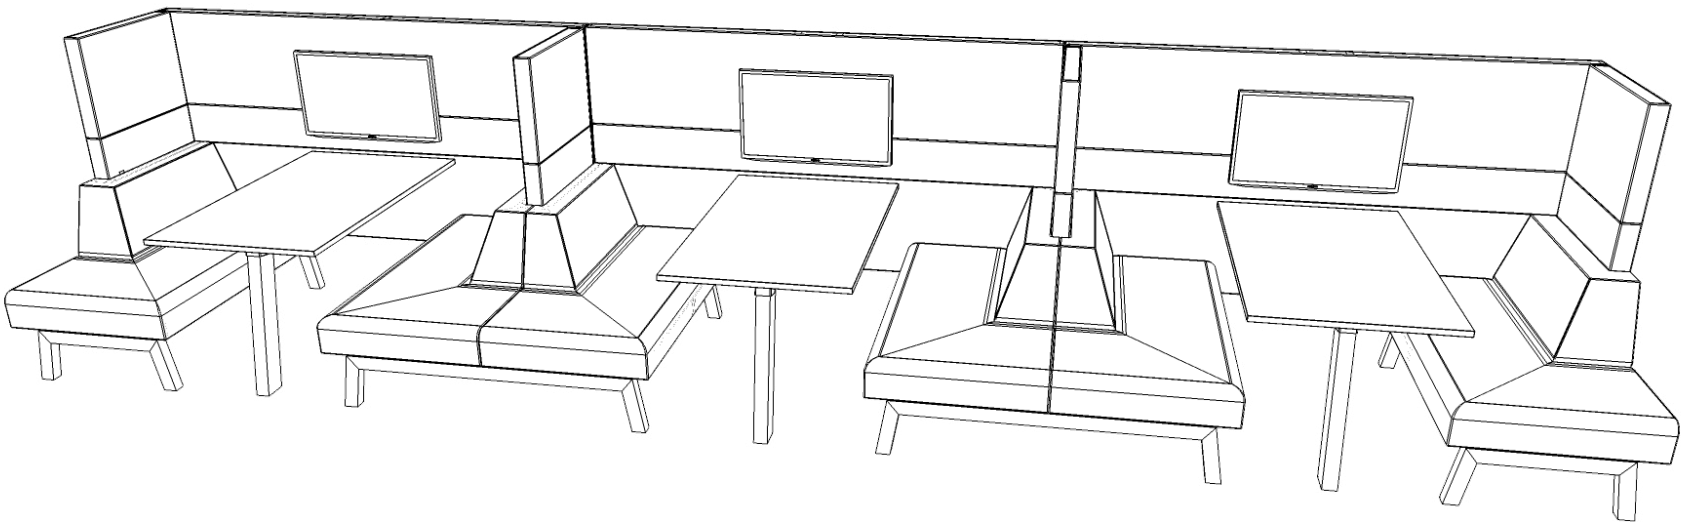


STEP 17: Add in 32' TV. THE INSTALLATION FOR LAYOUT 5 IS COMPLETE.




# LAYOUT 6

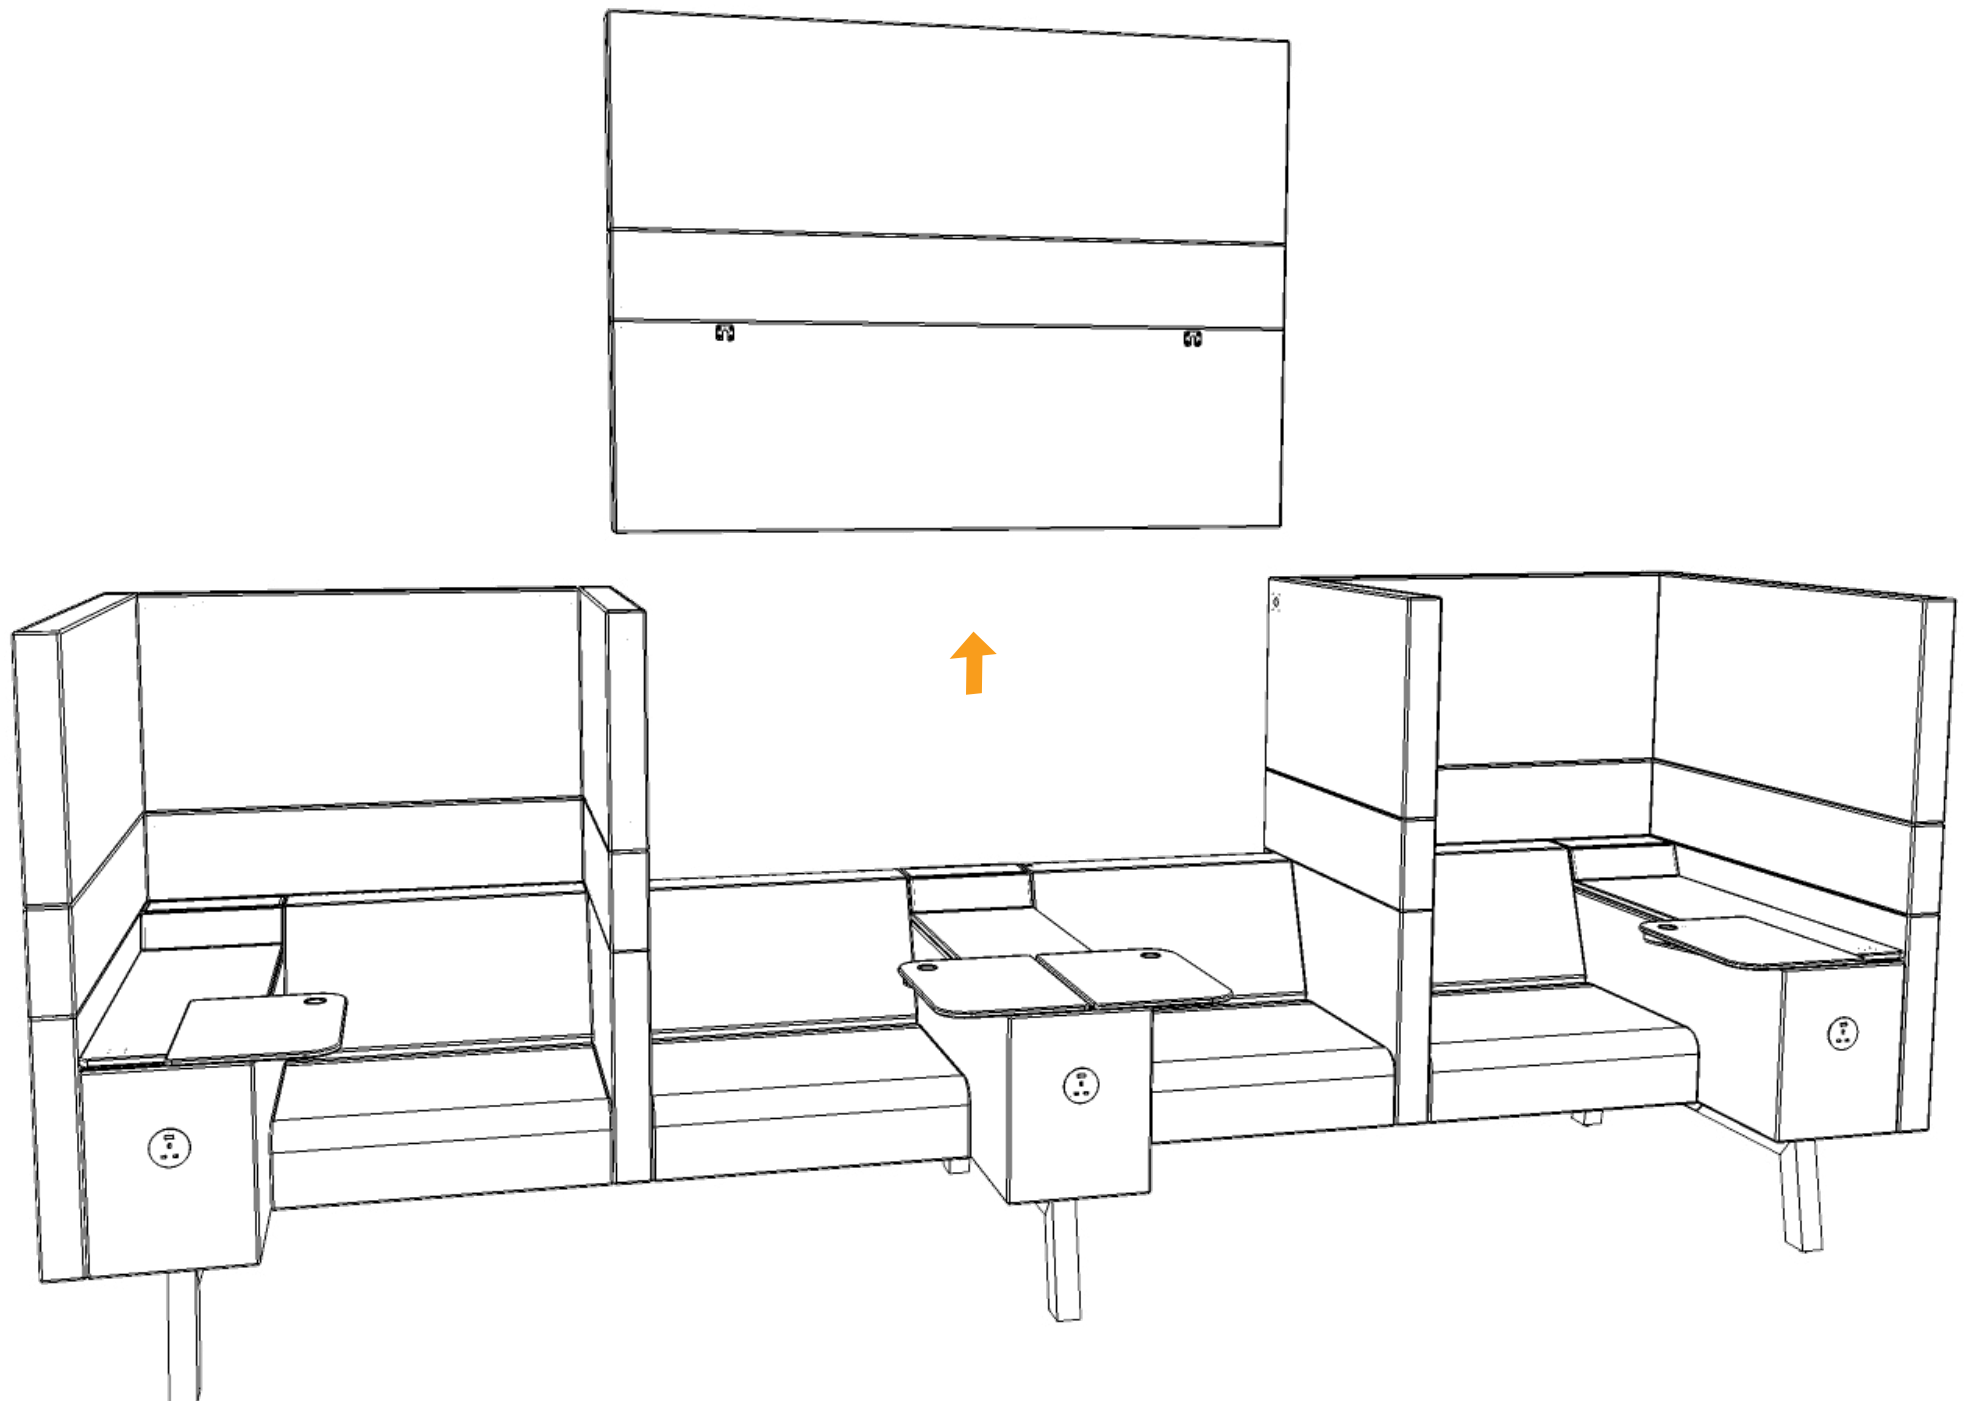


STEP 1: Take out hybrid back panel for box or biz class double high.

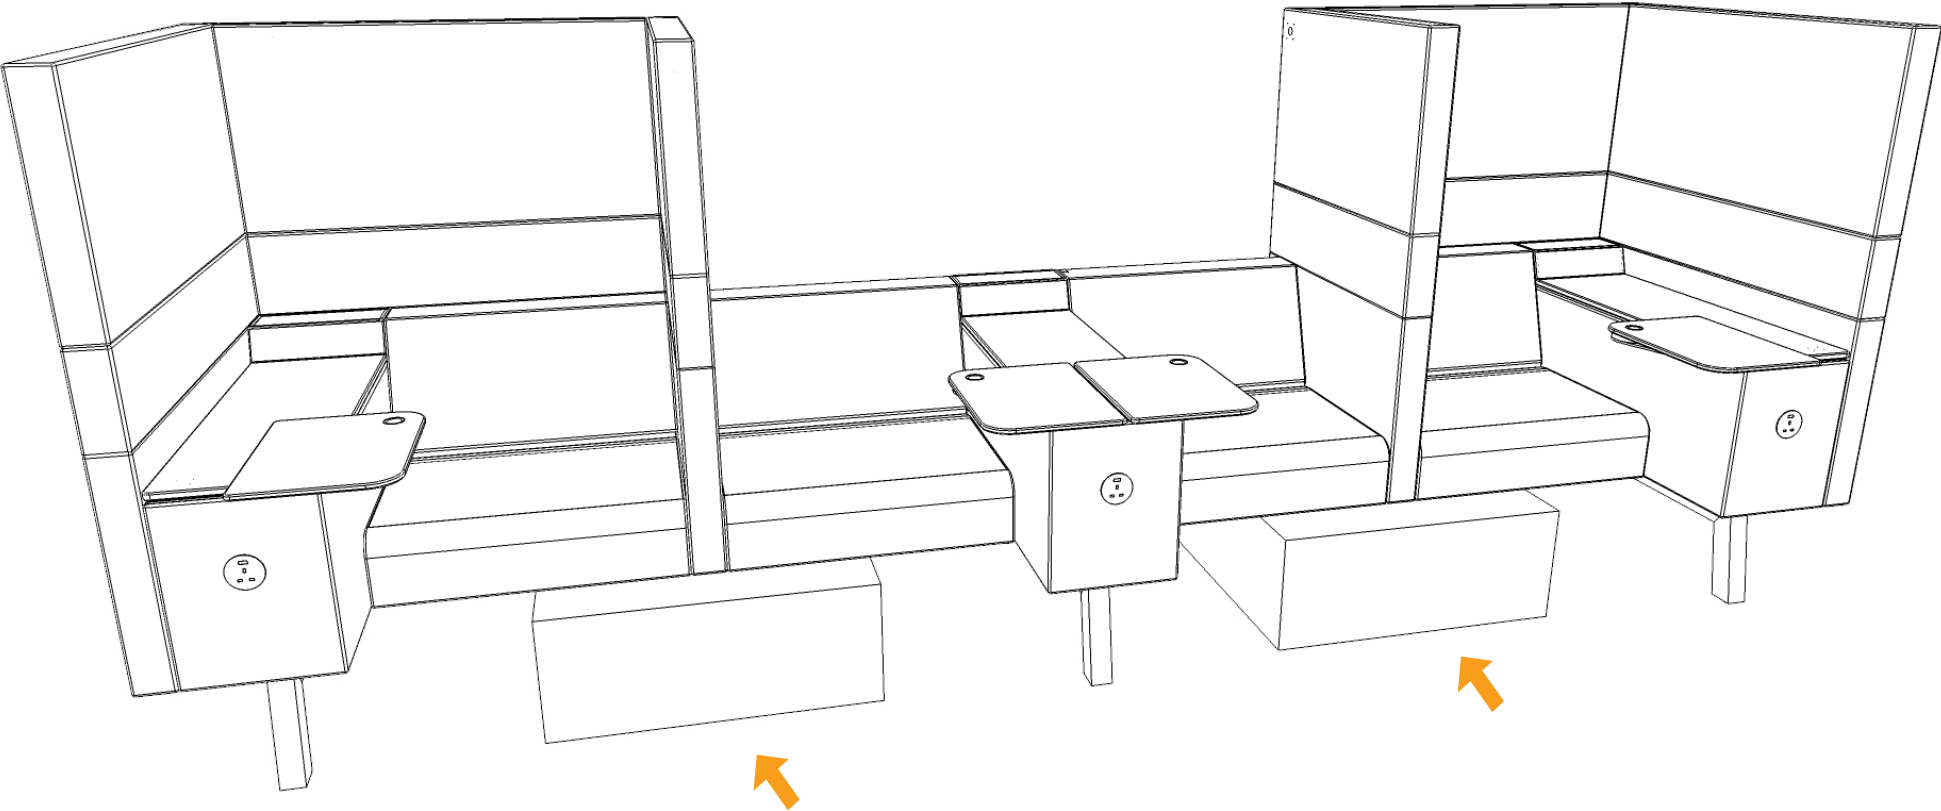


STEP 2: Put a block underneath to support.

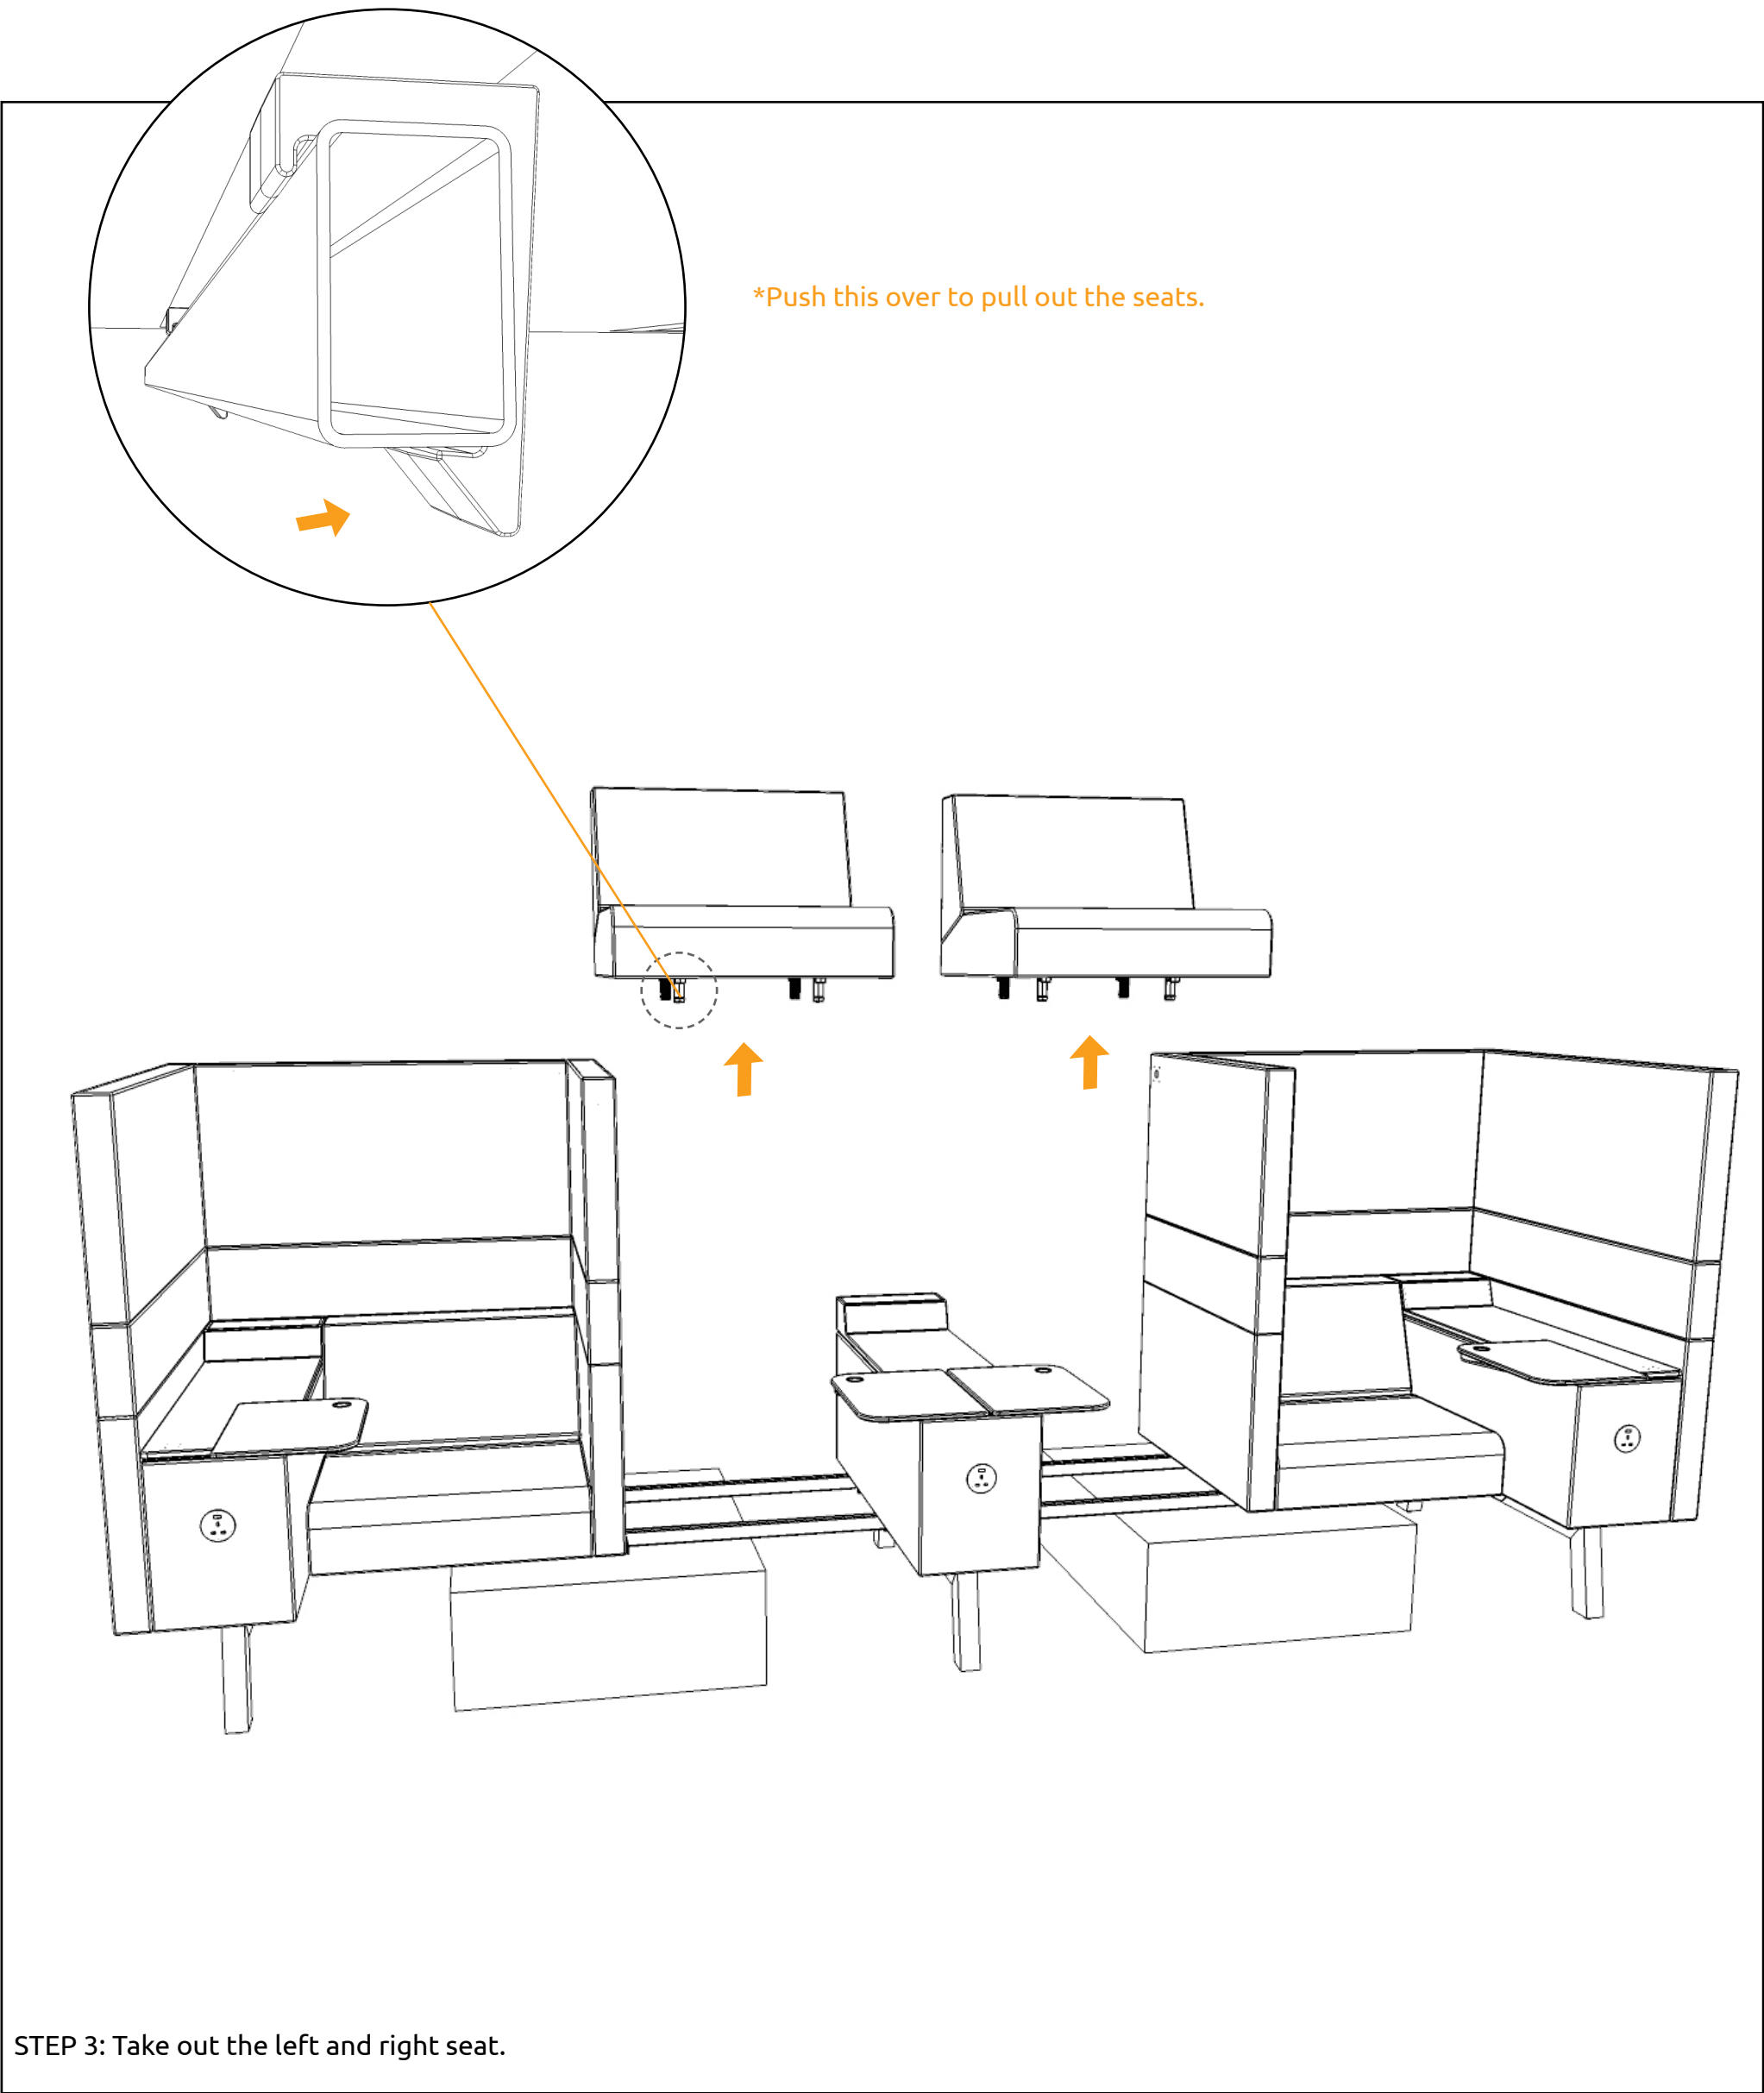

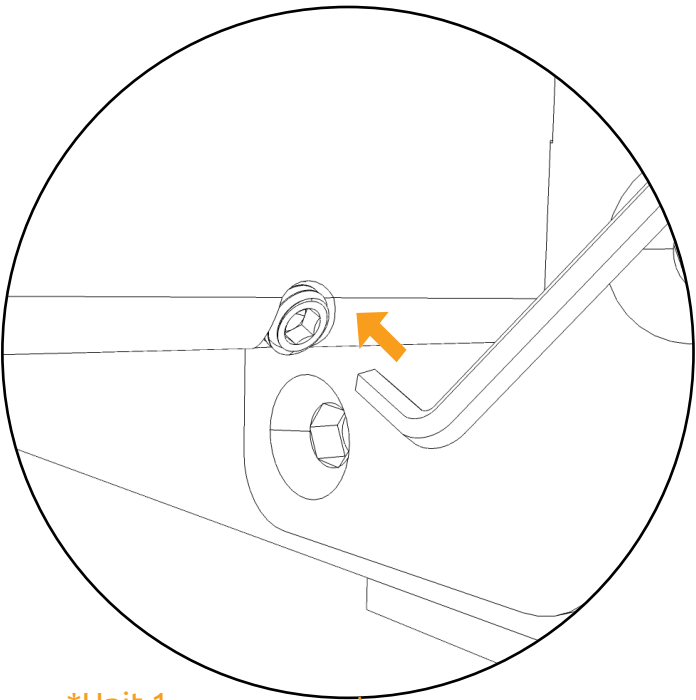



\*Unit 1

\*Unit 2

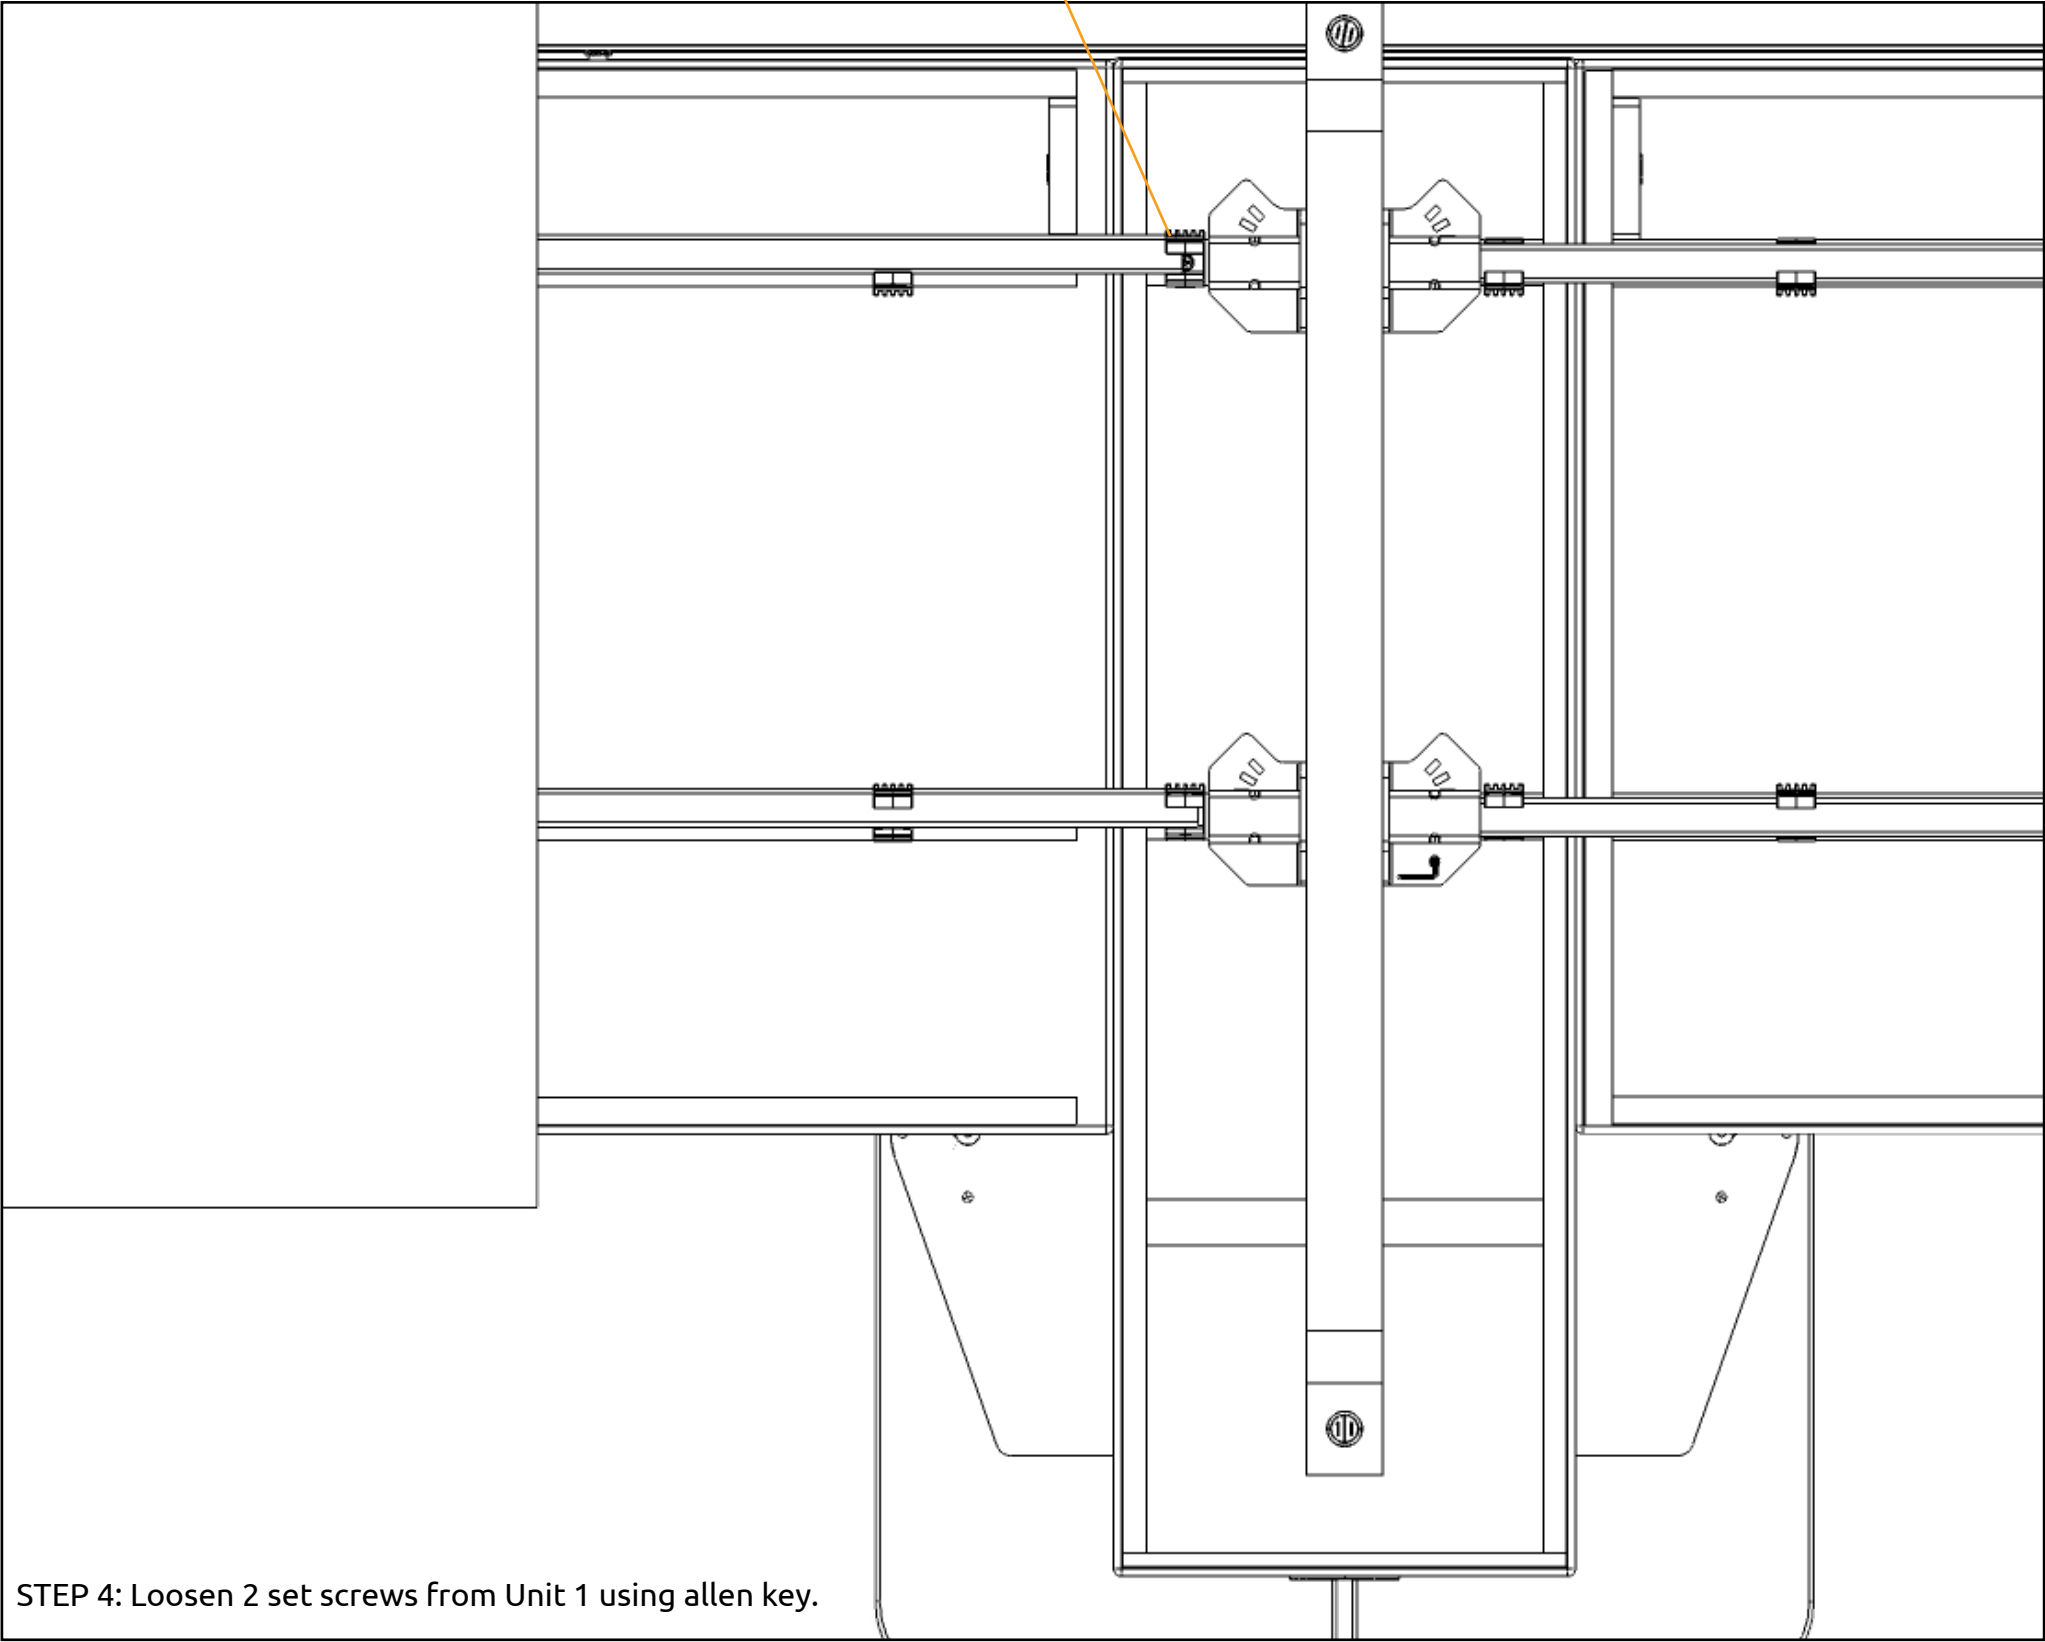


STEP 4: Loosen 2 set screws from Unit 1 using allen key.

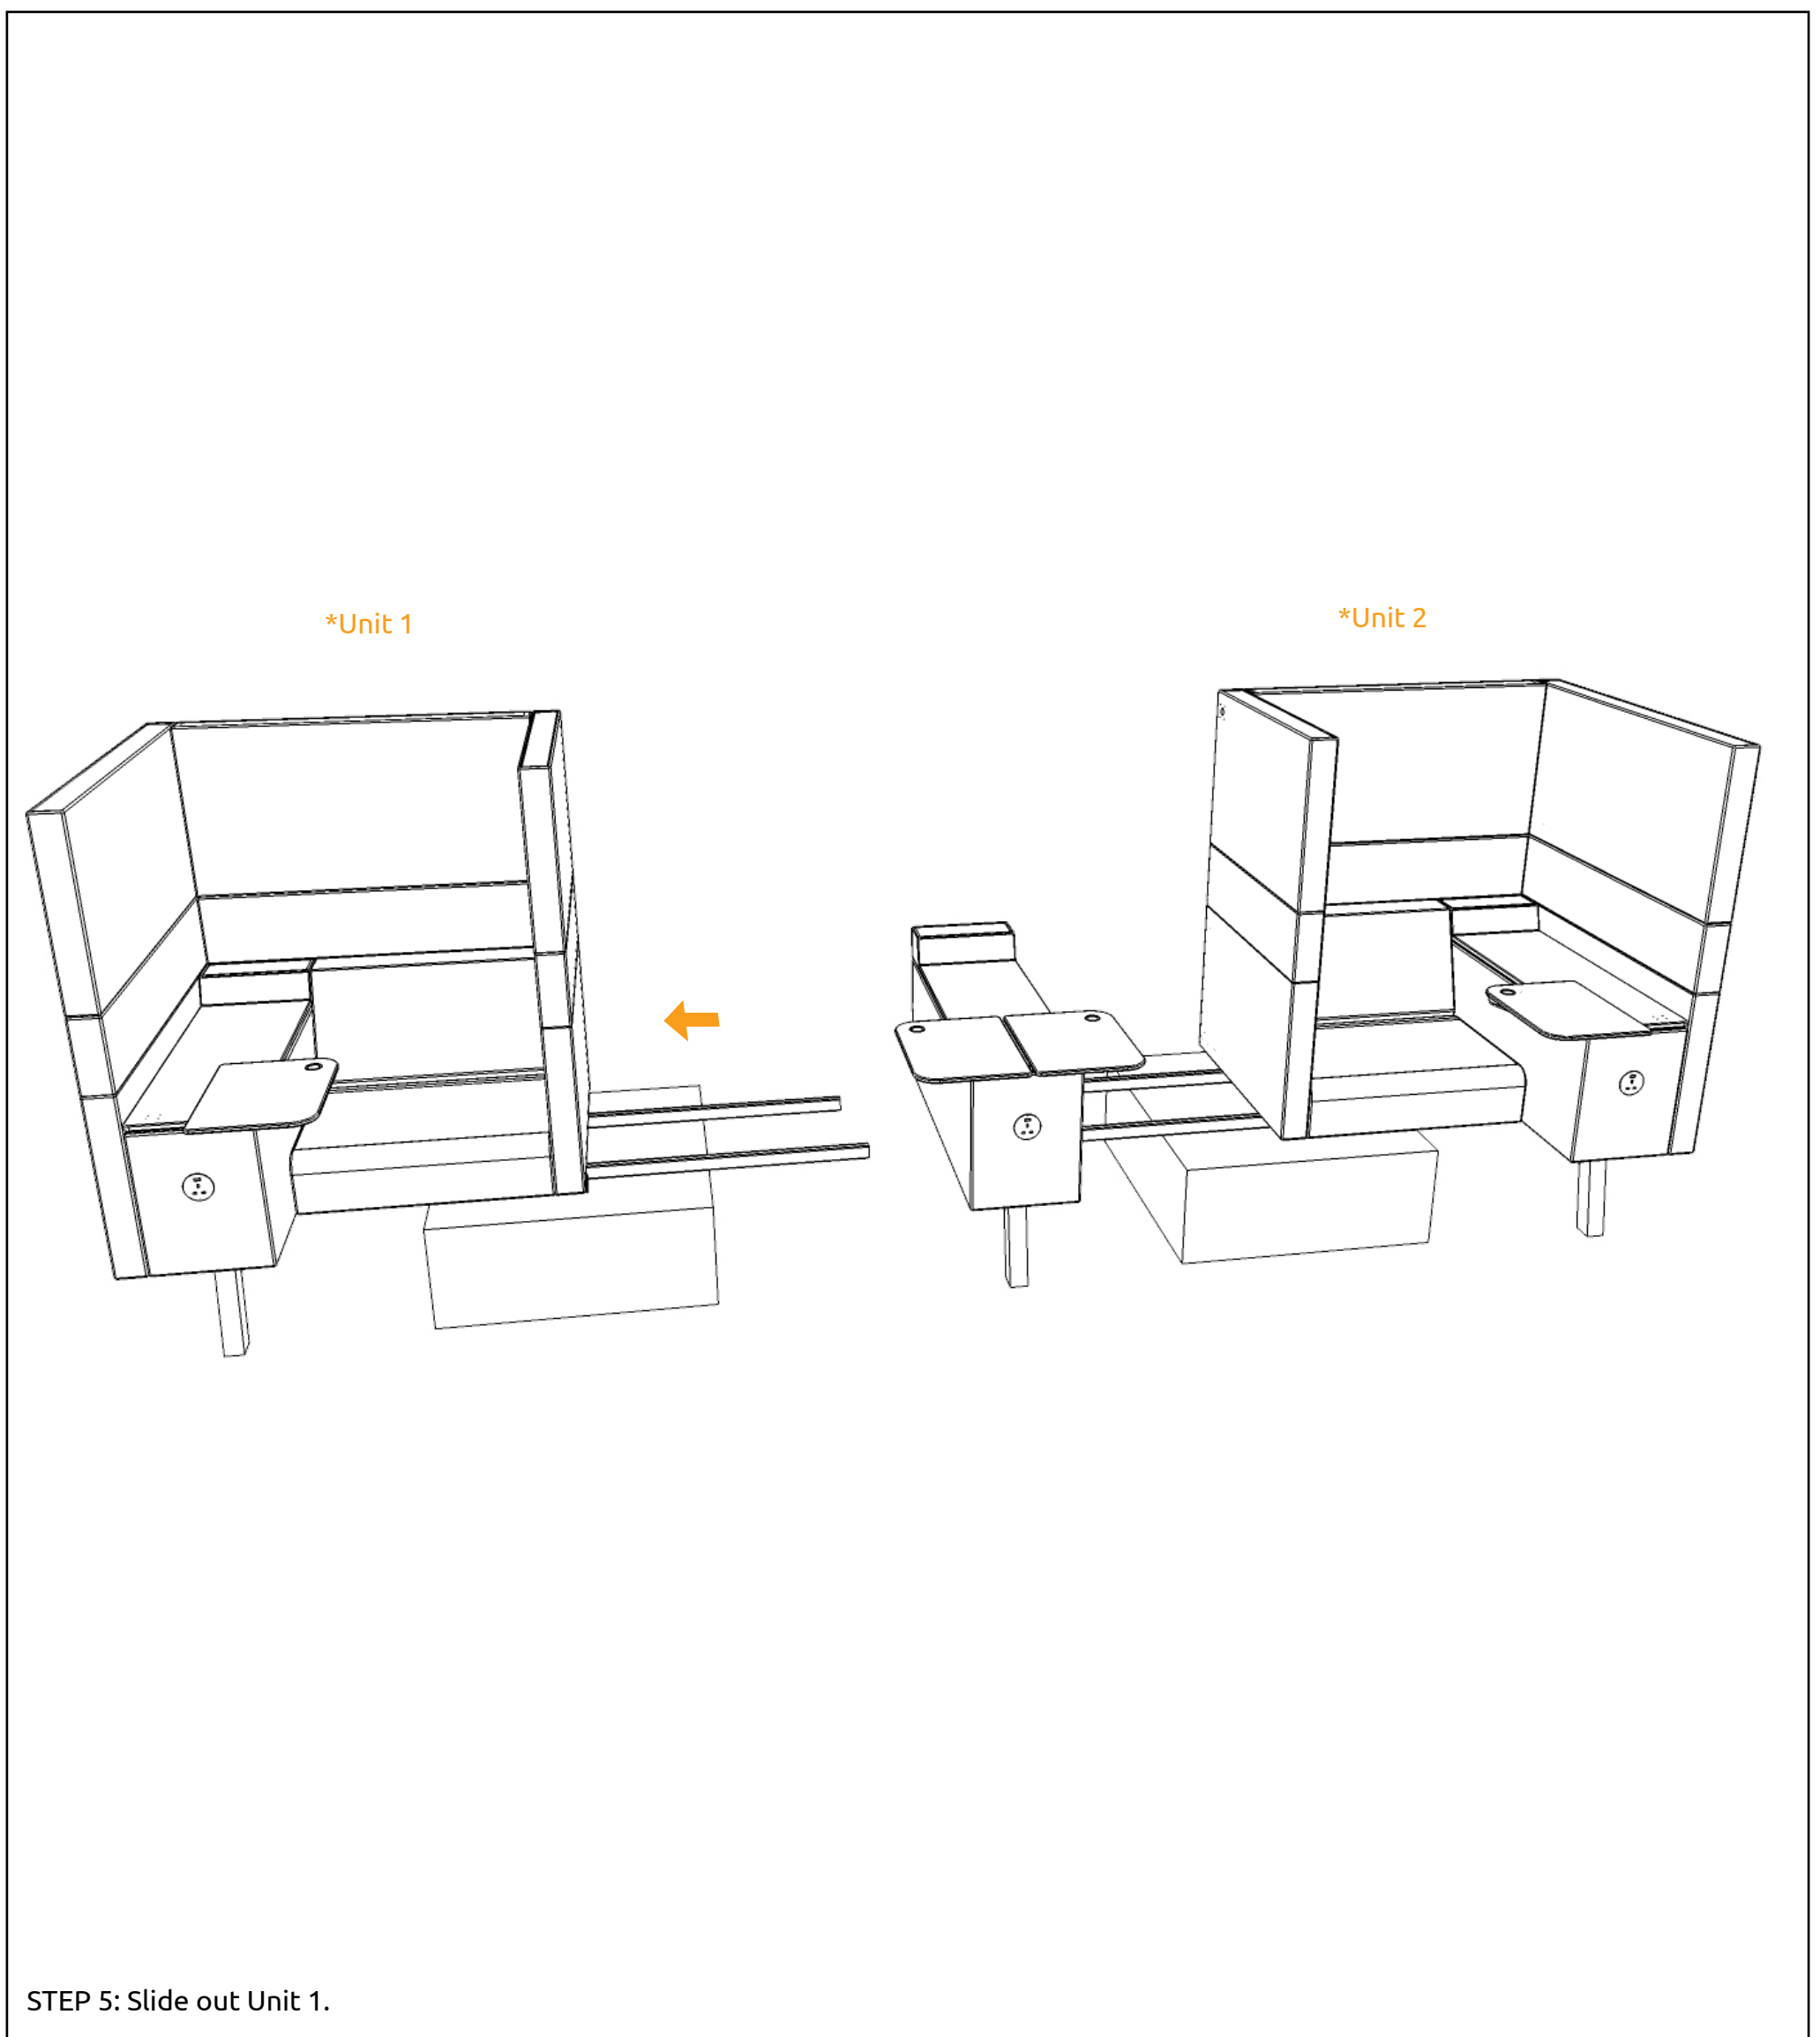

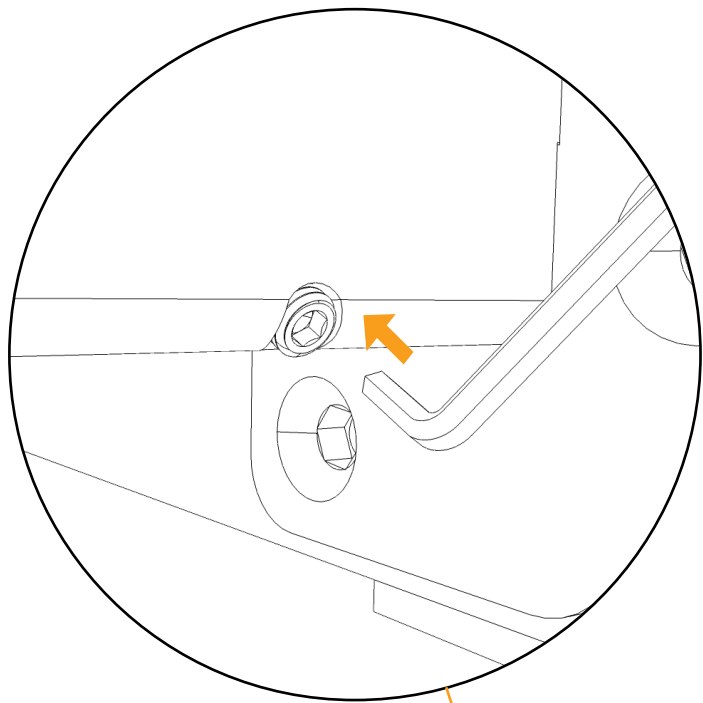


\*Unit 1

\*Unit 2

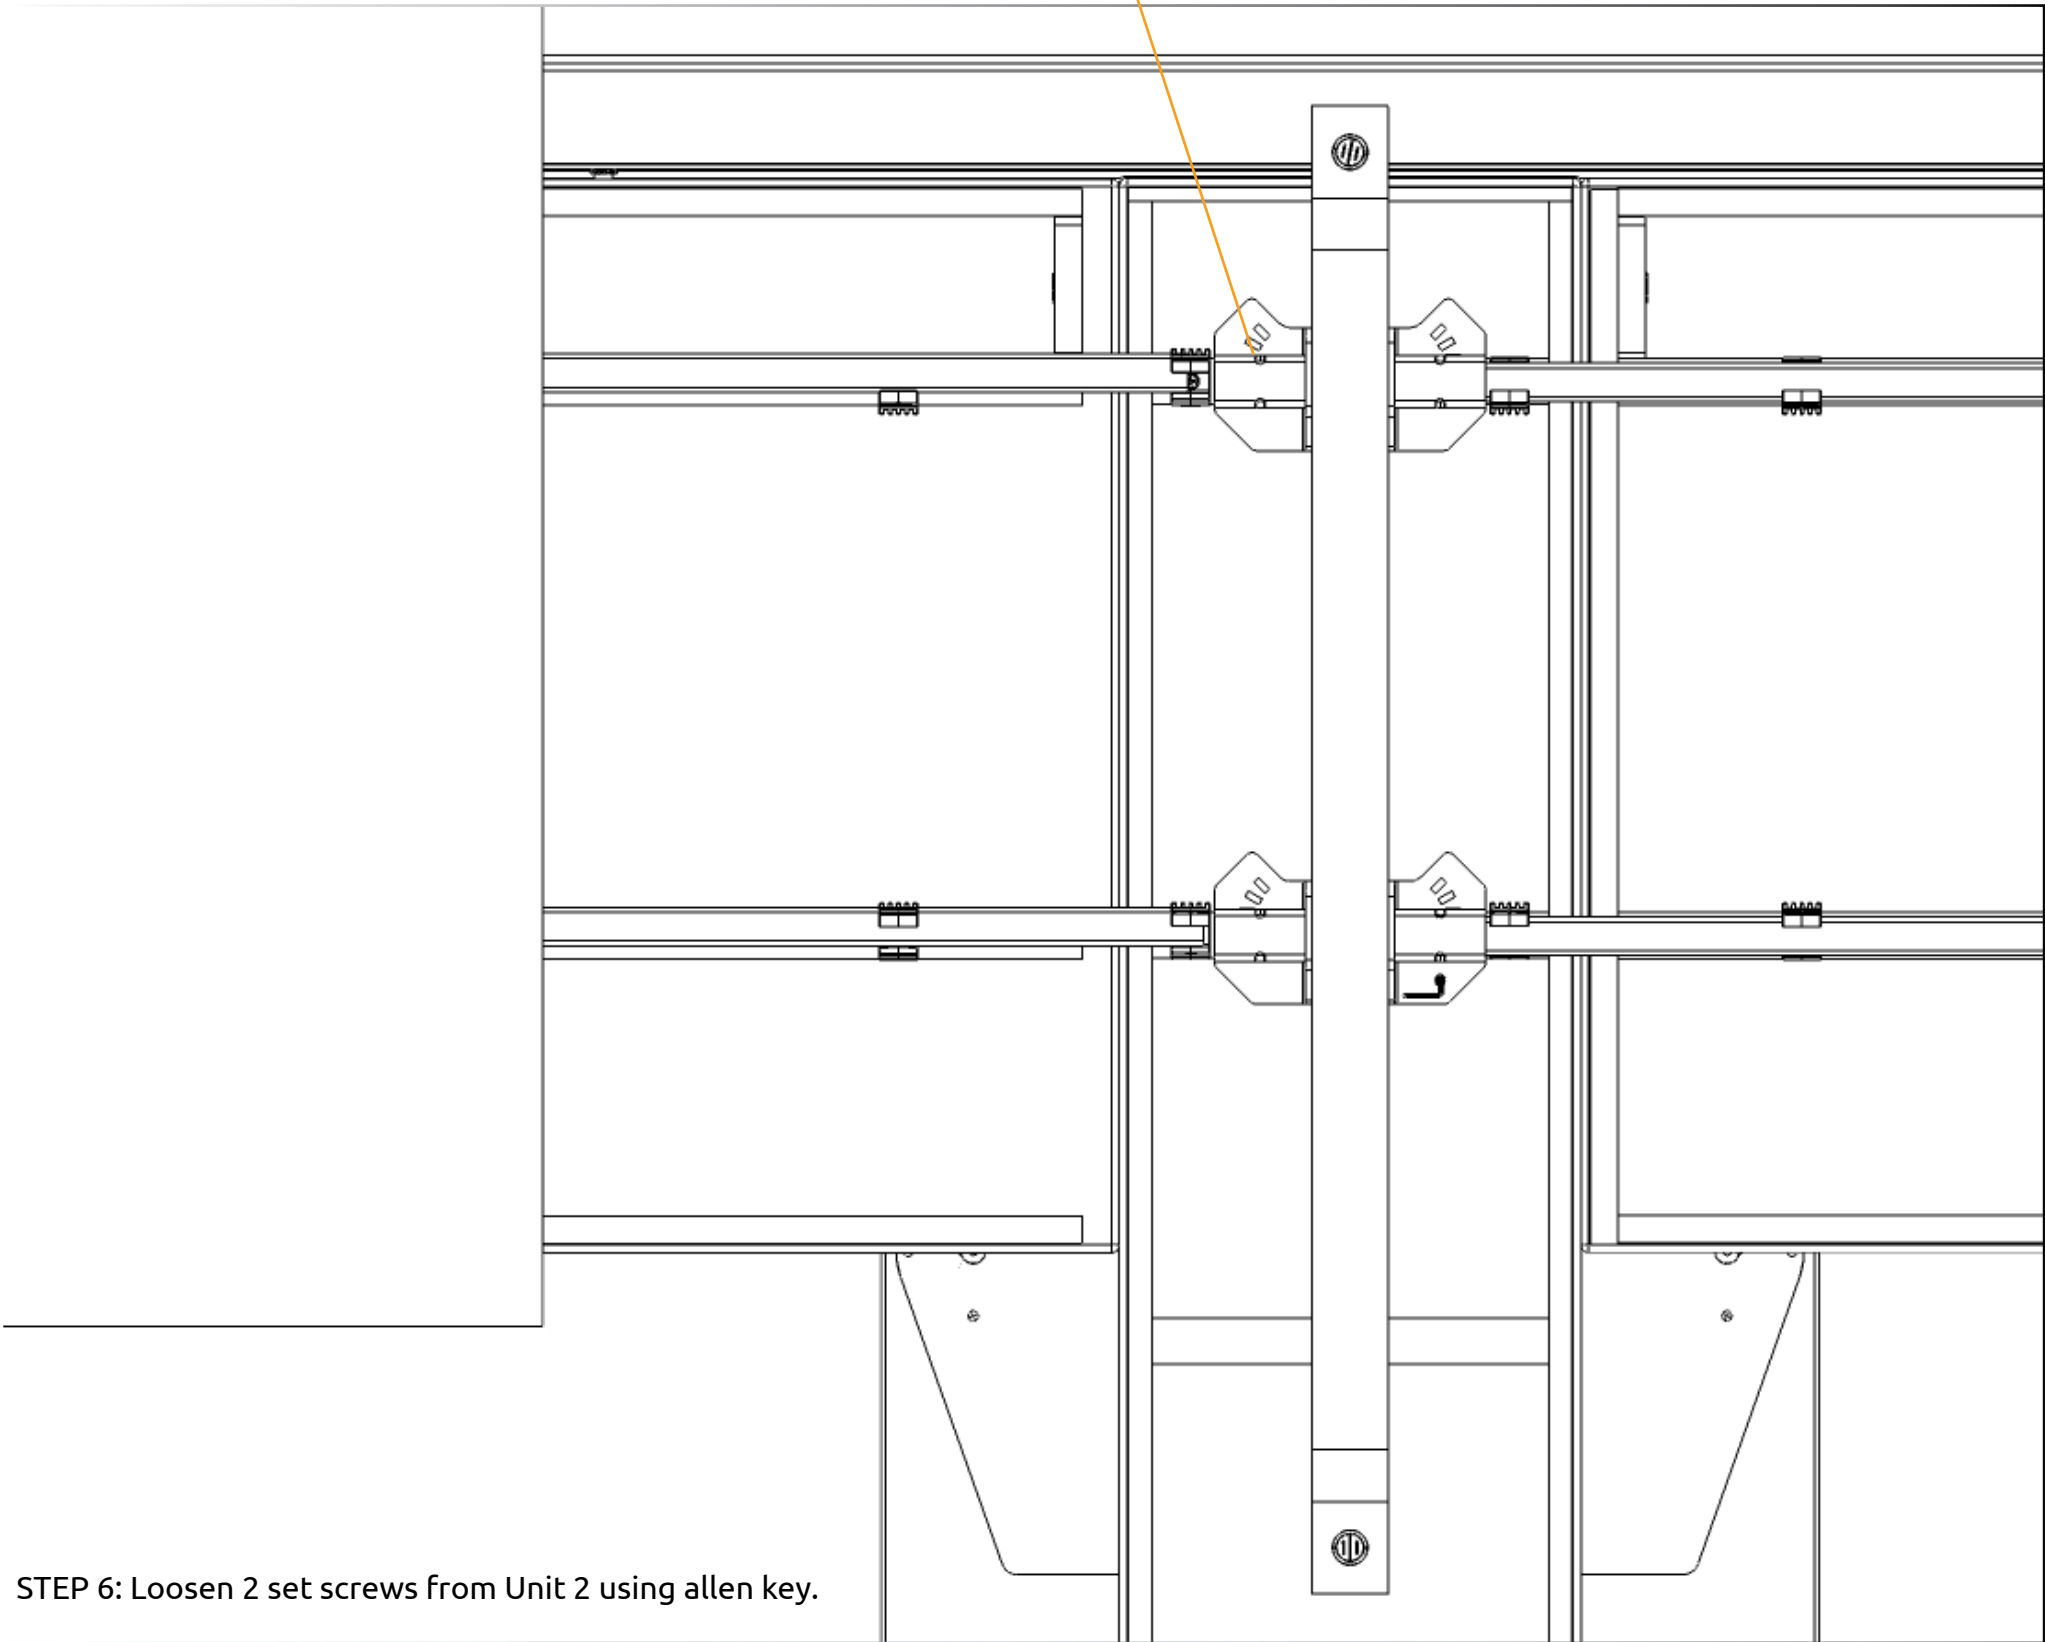


STEP 6: Loosen 2 set screws from Unit 2 using allen key.

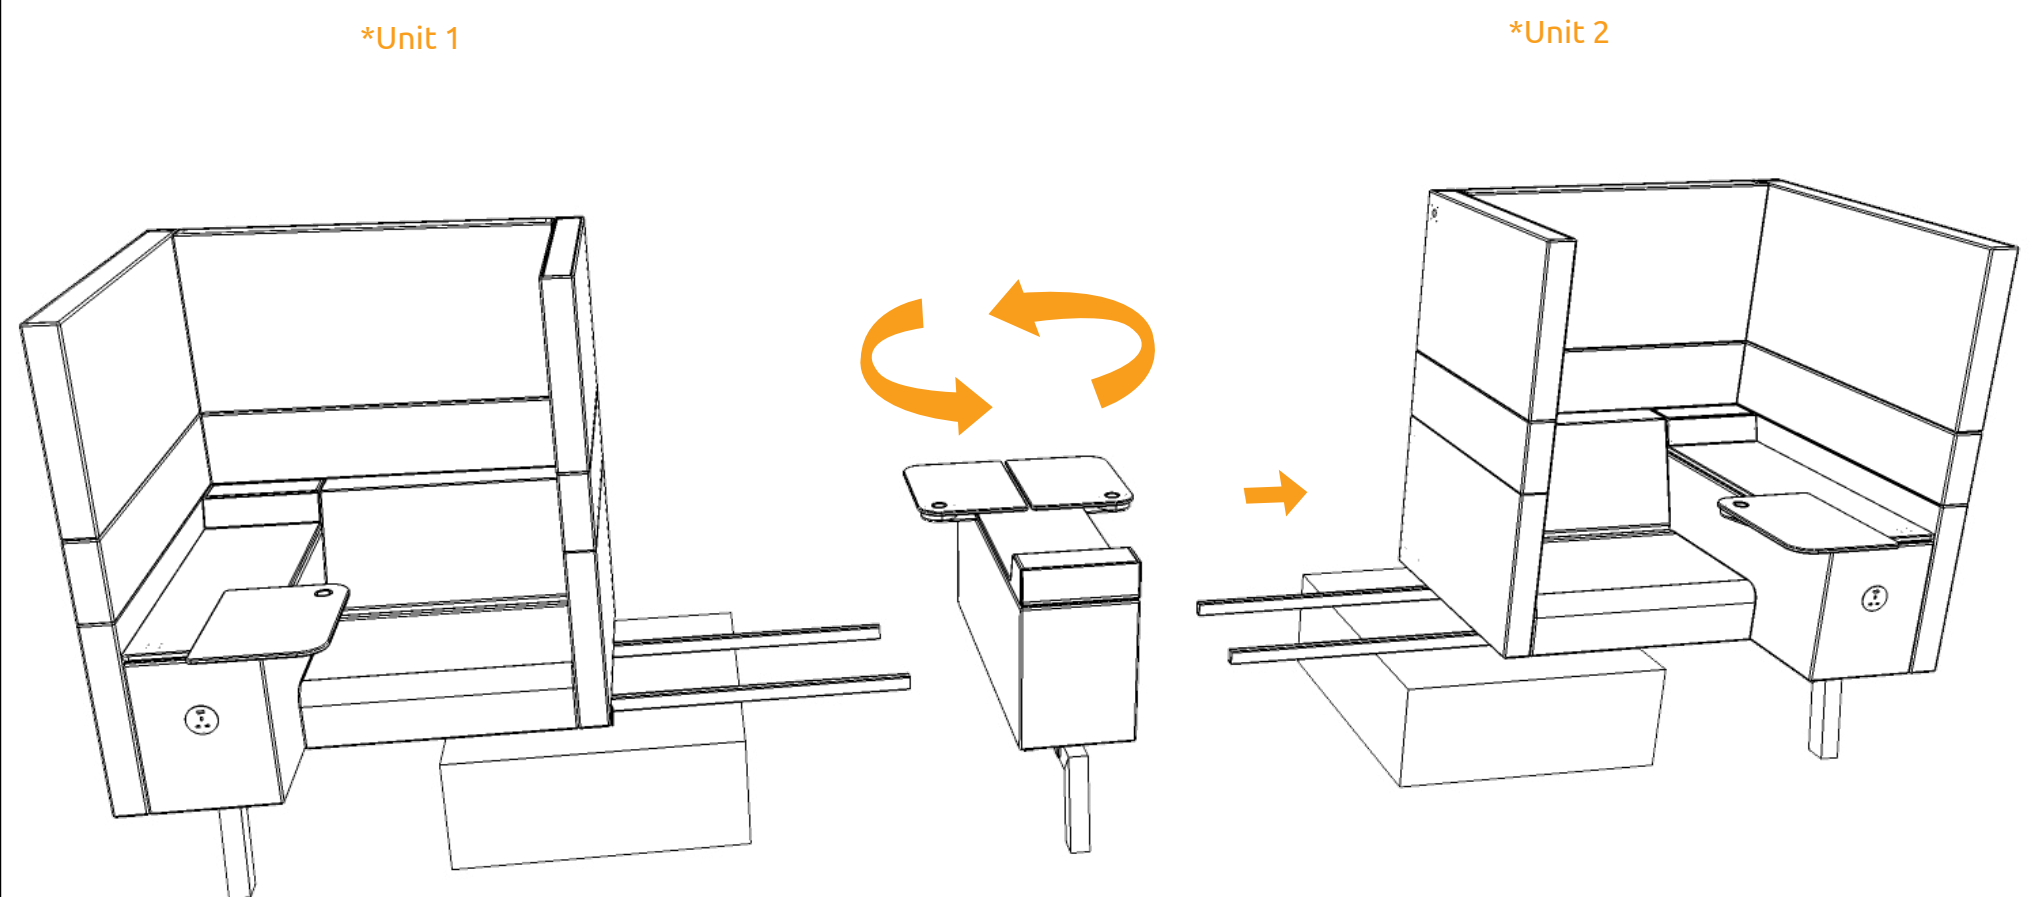


STEP 5: Slide out Unit 2 and turn 180° the biz box with wooden leg.




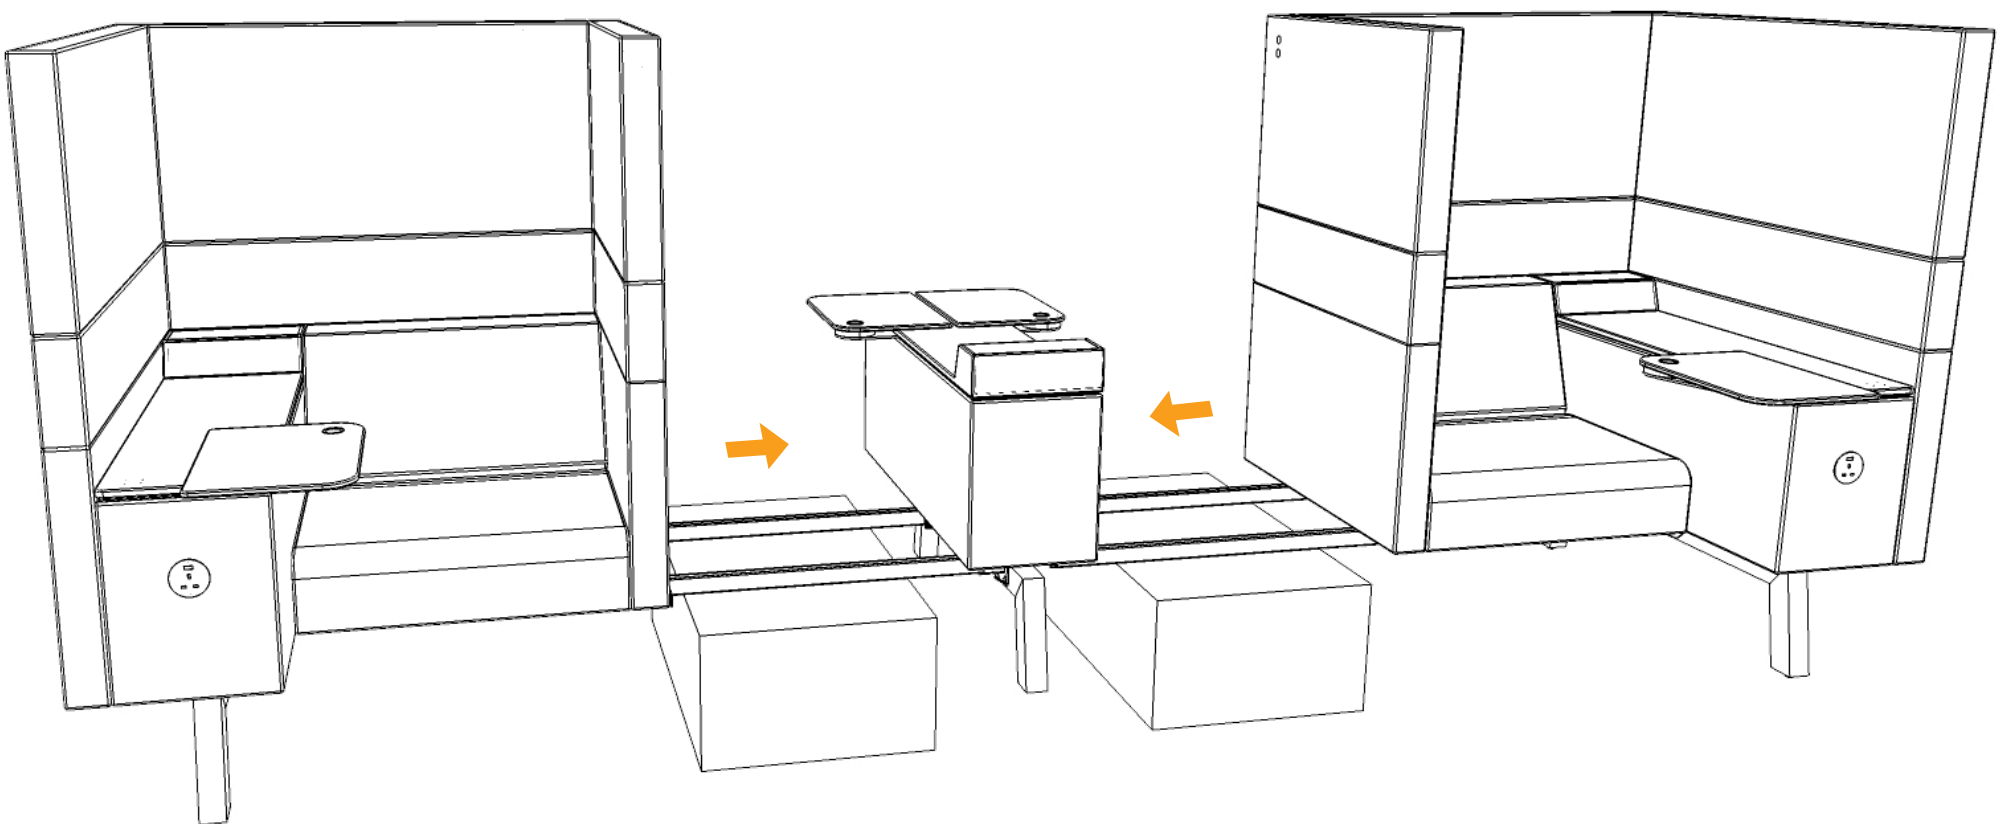


STEP 6: Connect back both Unit 1 and Unit 2 to the biz box and lock it.

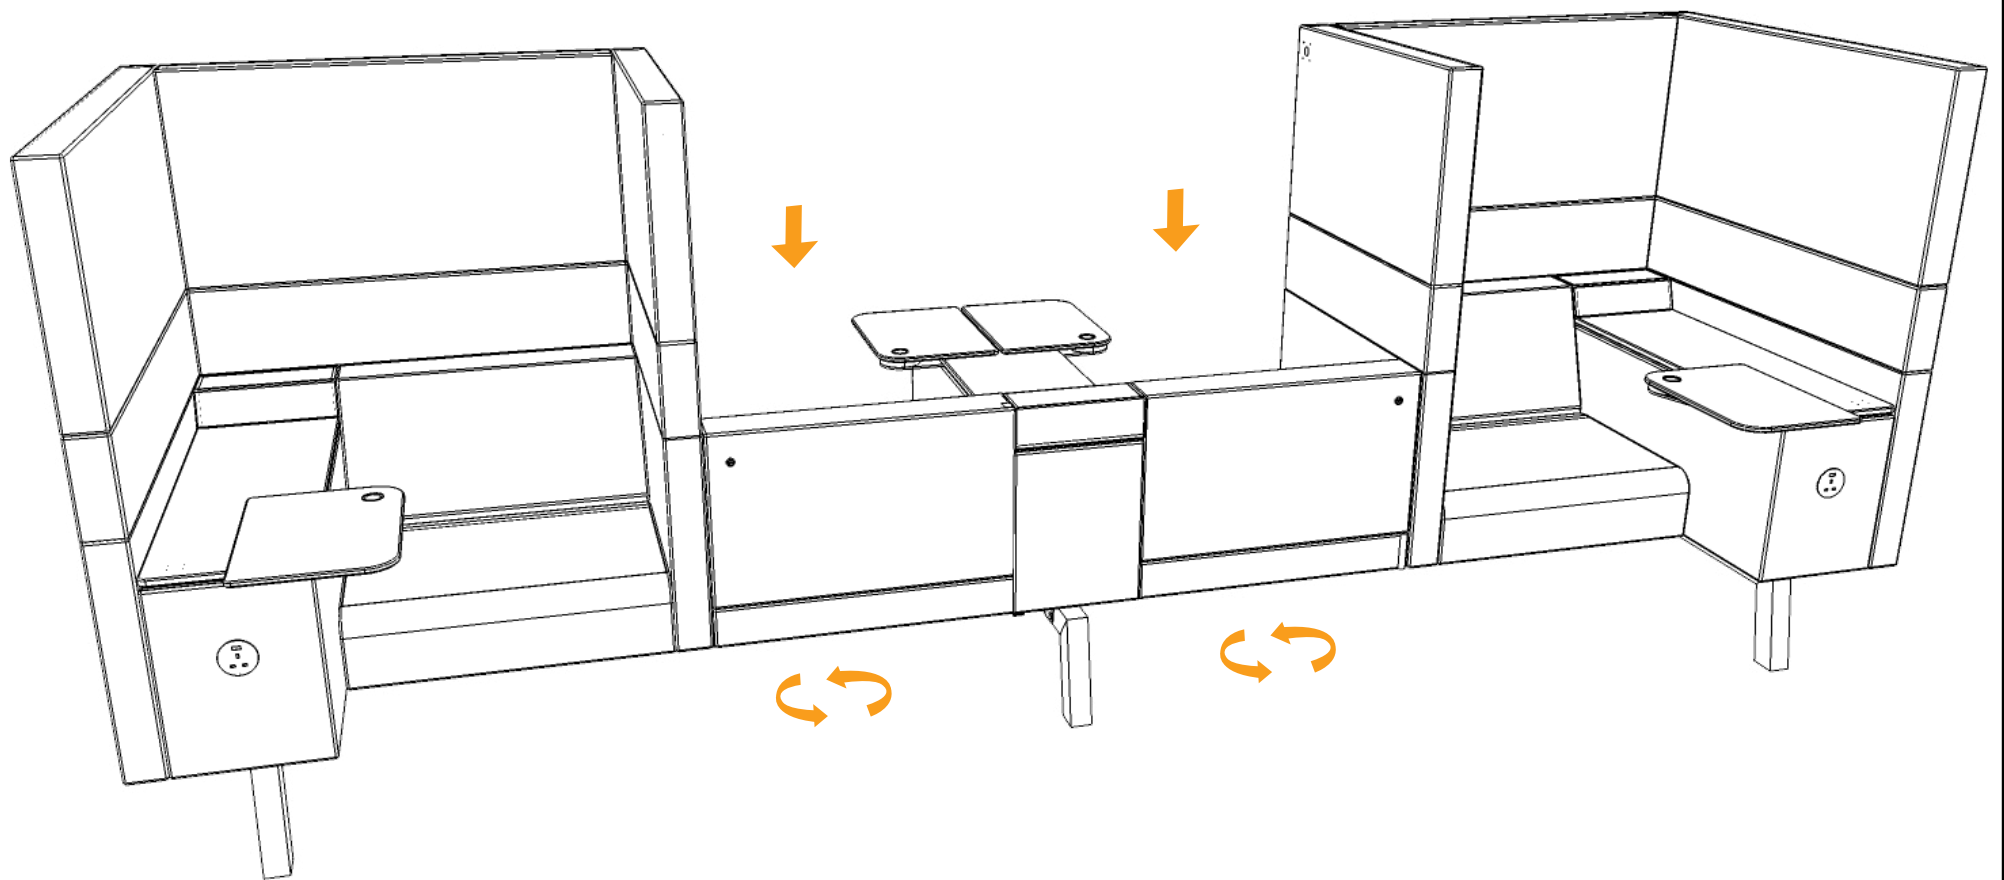


STEP 7: Put back the left and right seat after turning to 180 deg.


\*Gently press on the fabric surface.

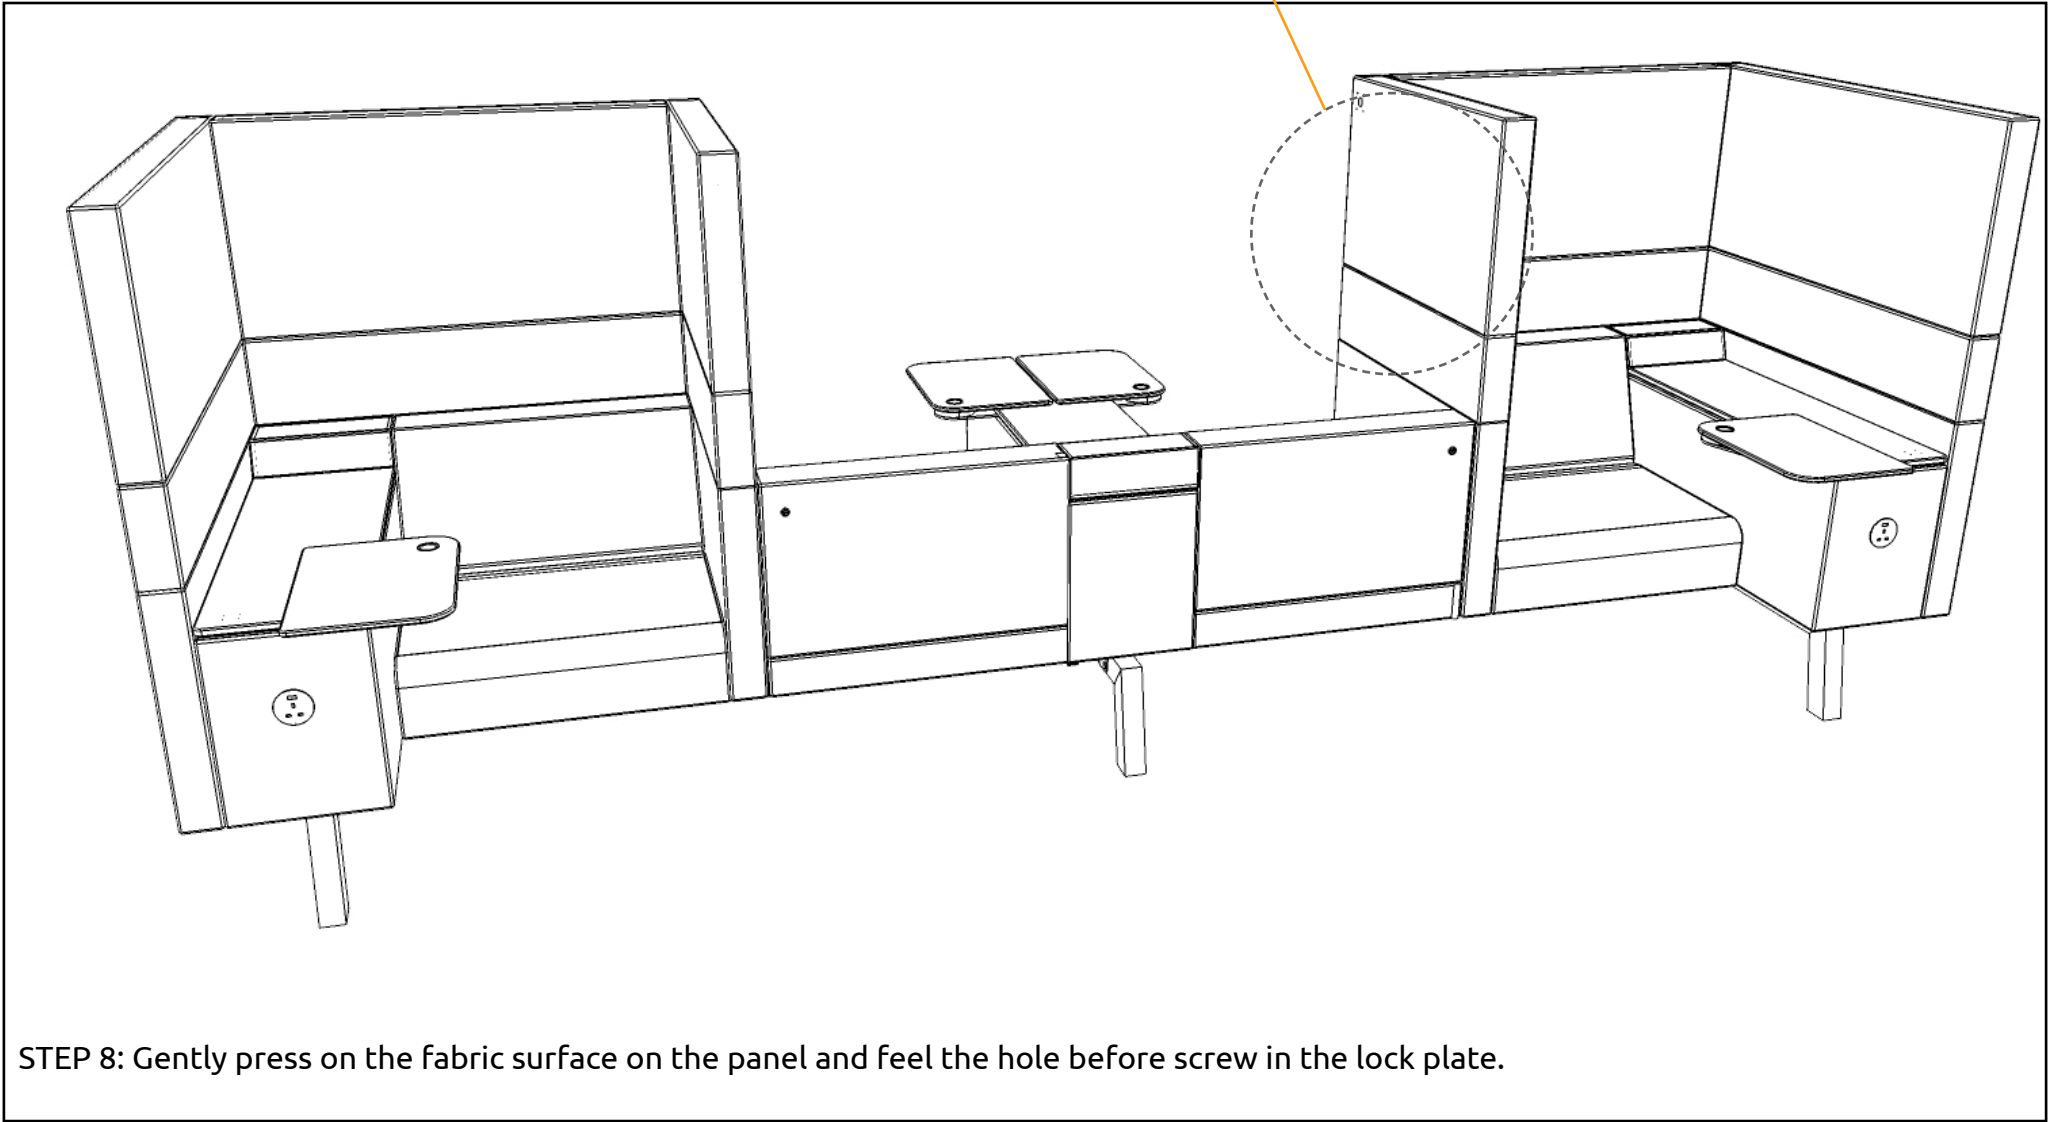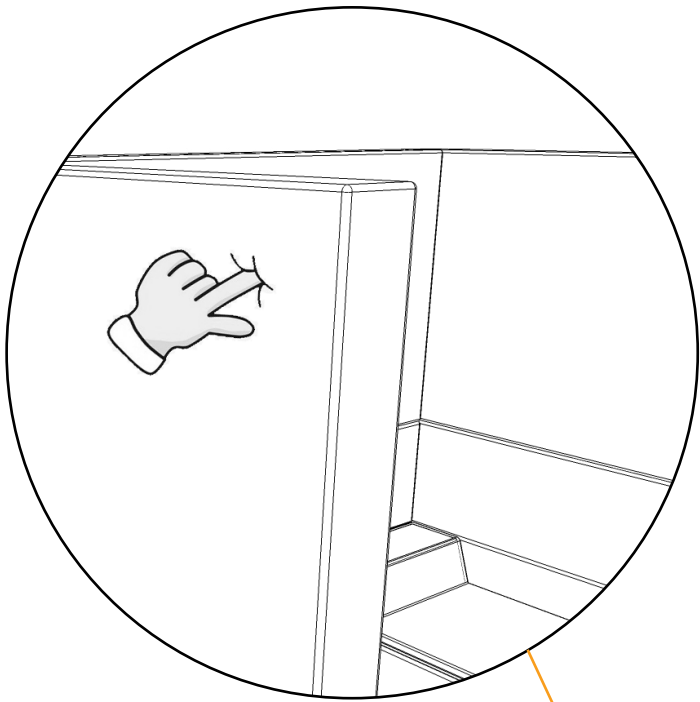


STEP 8: Gently press on the fabric surface on the panel and feel the hole before screw in the lock plate.

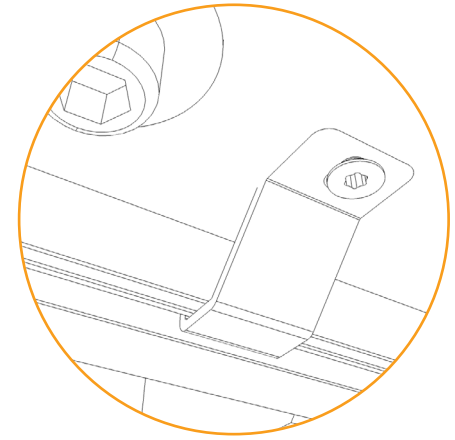


\*Screw J-hook

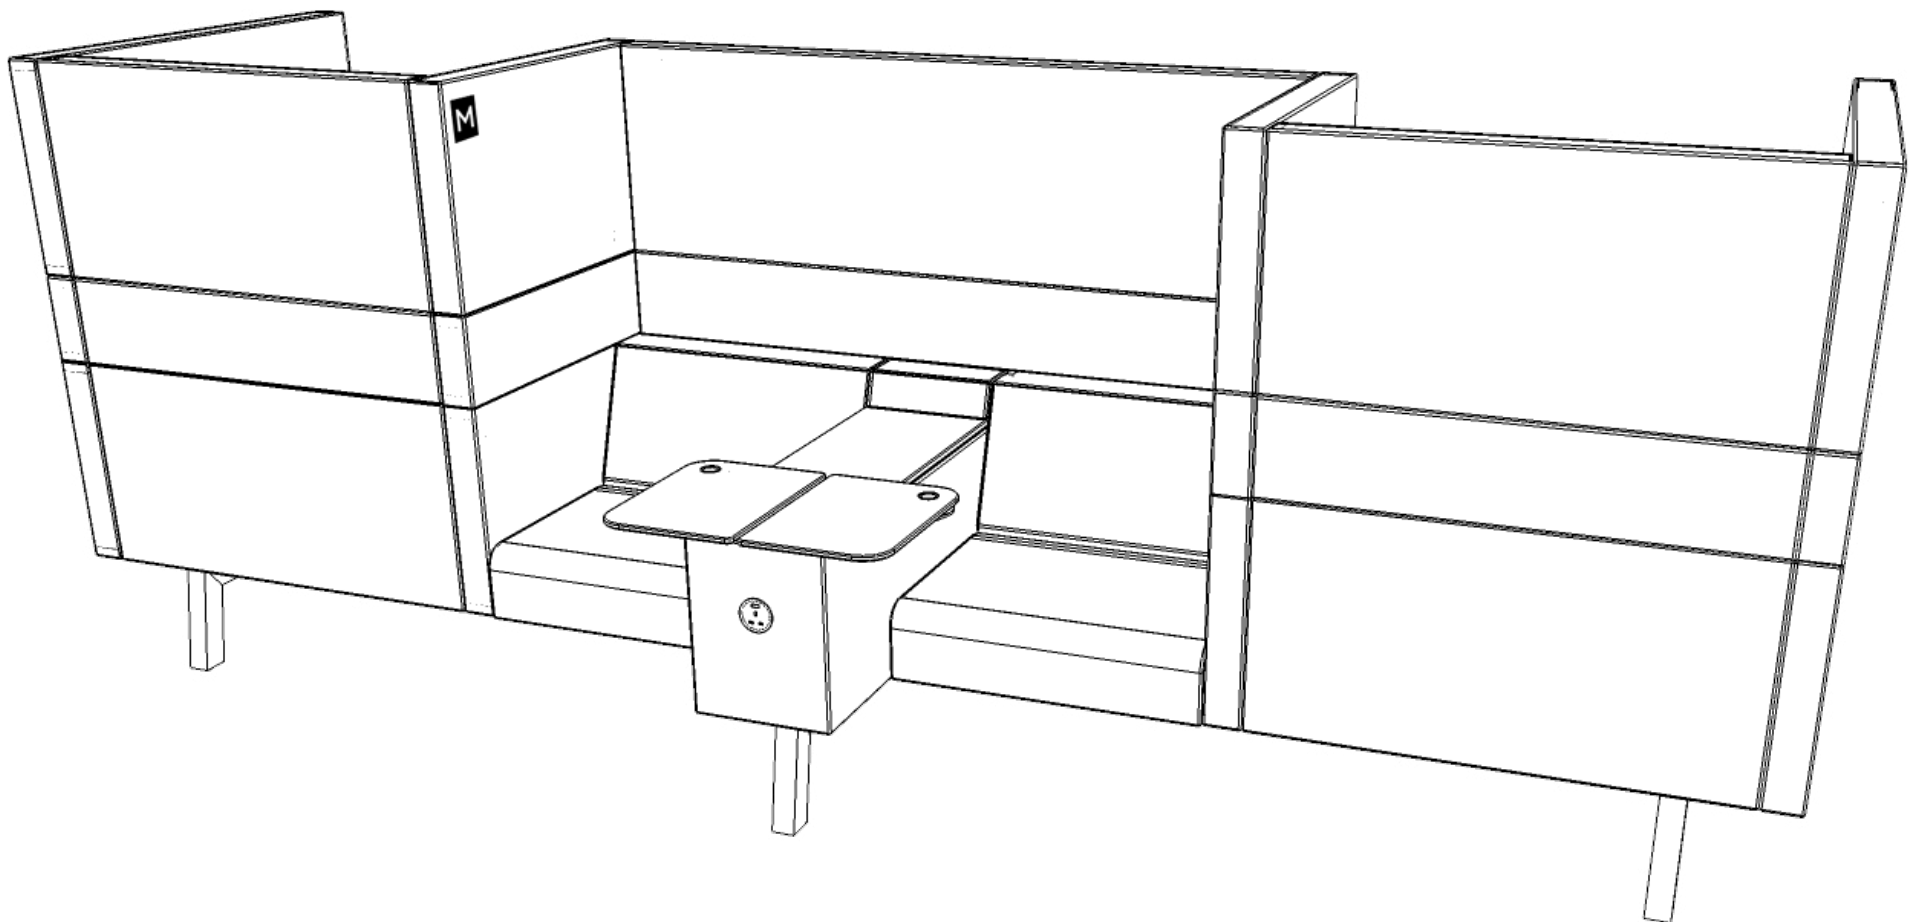

STEP 9: Put back the duo back panel. Finally, screw and tighten the J-hook to the panel.


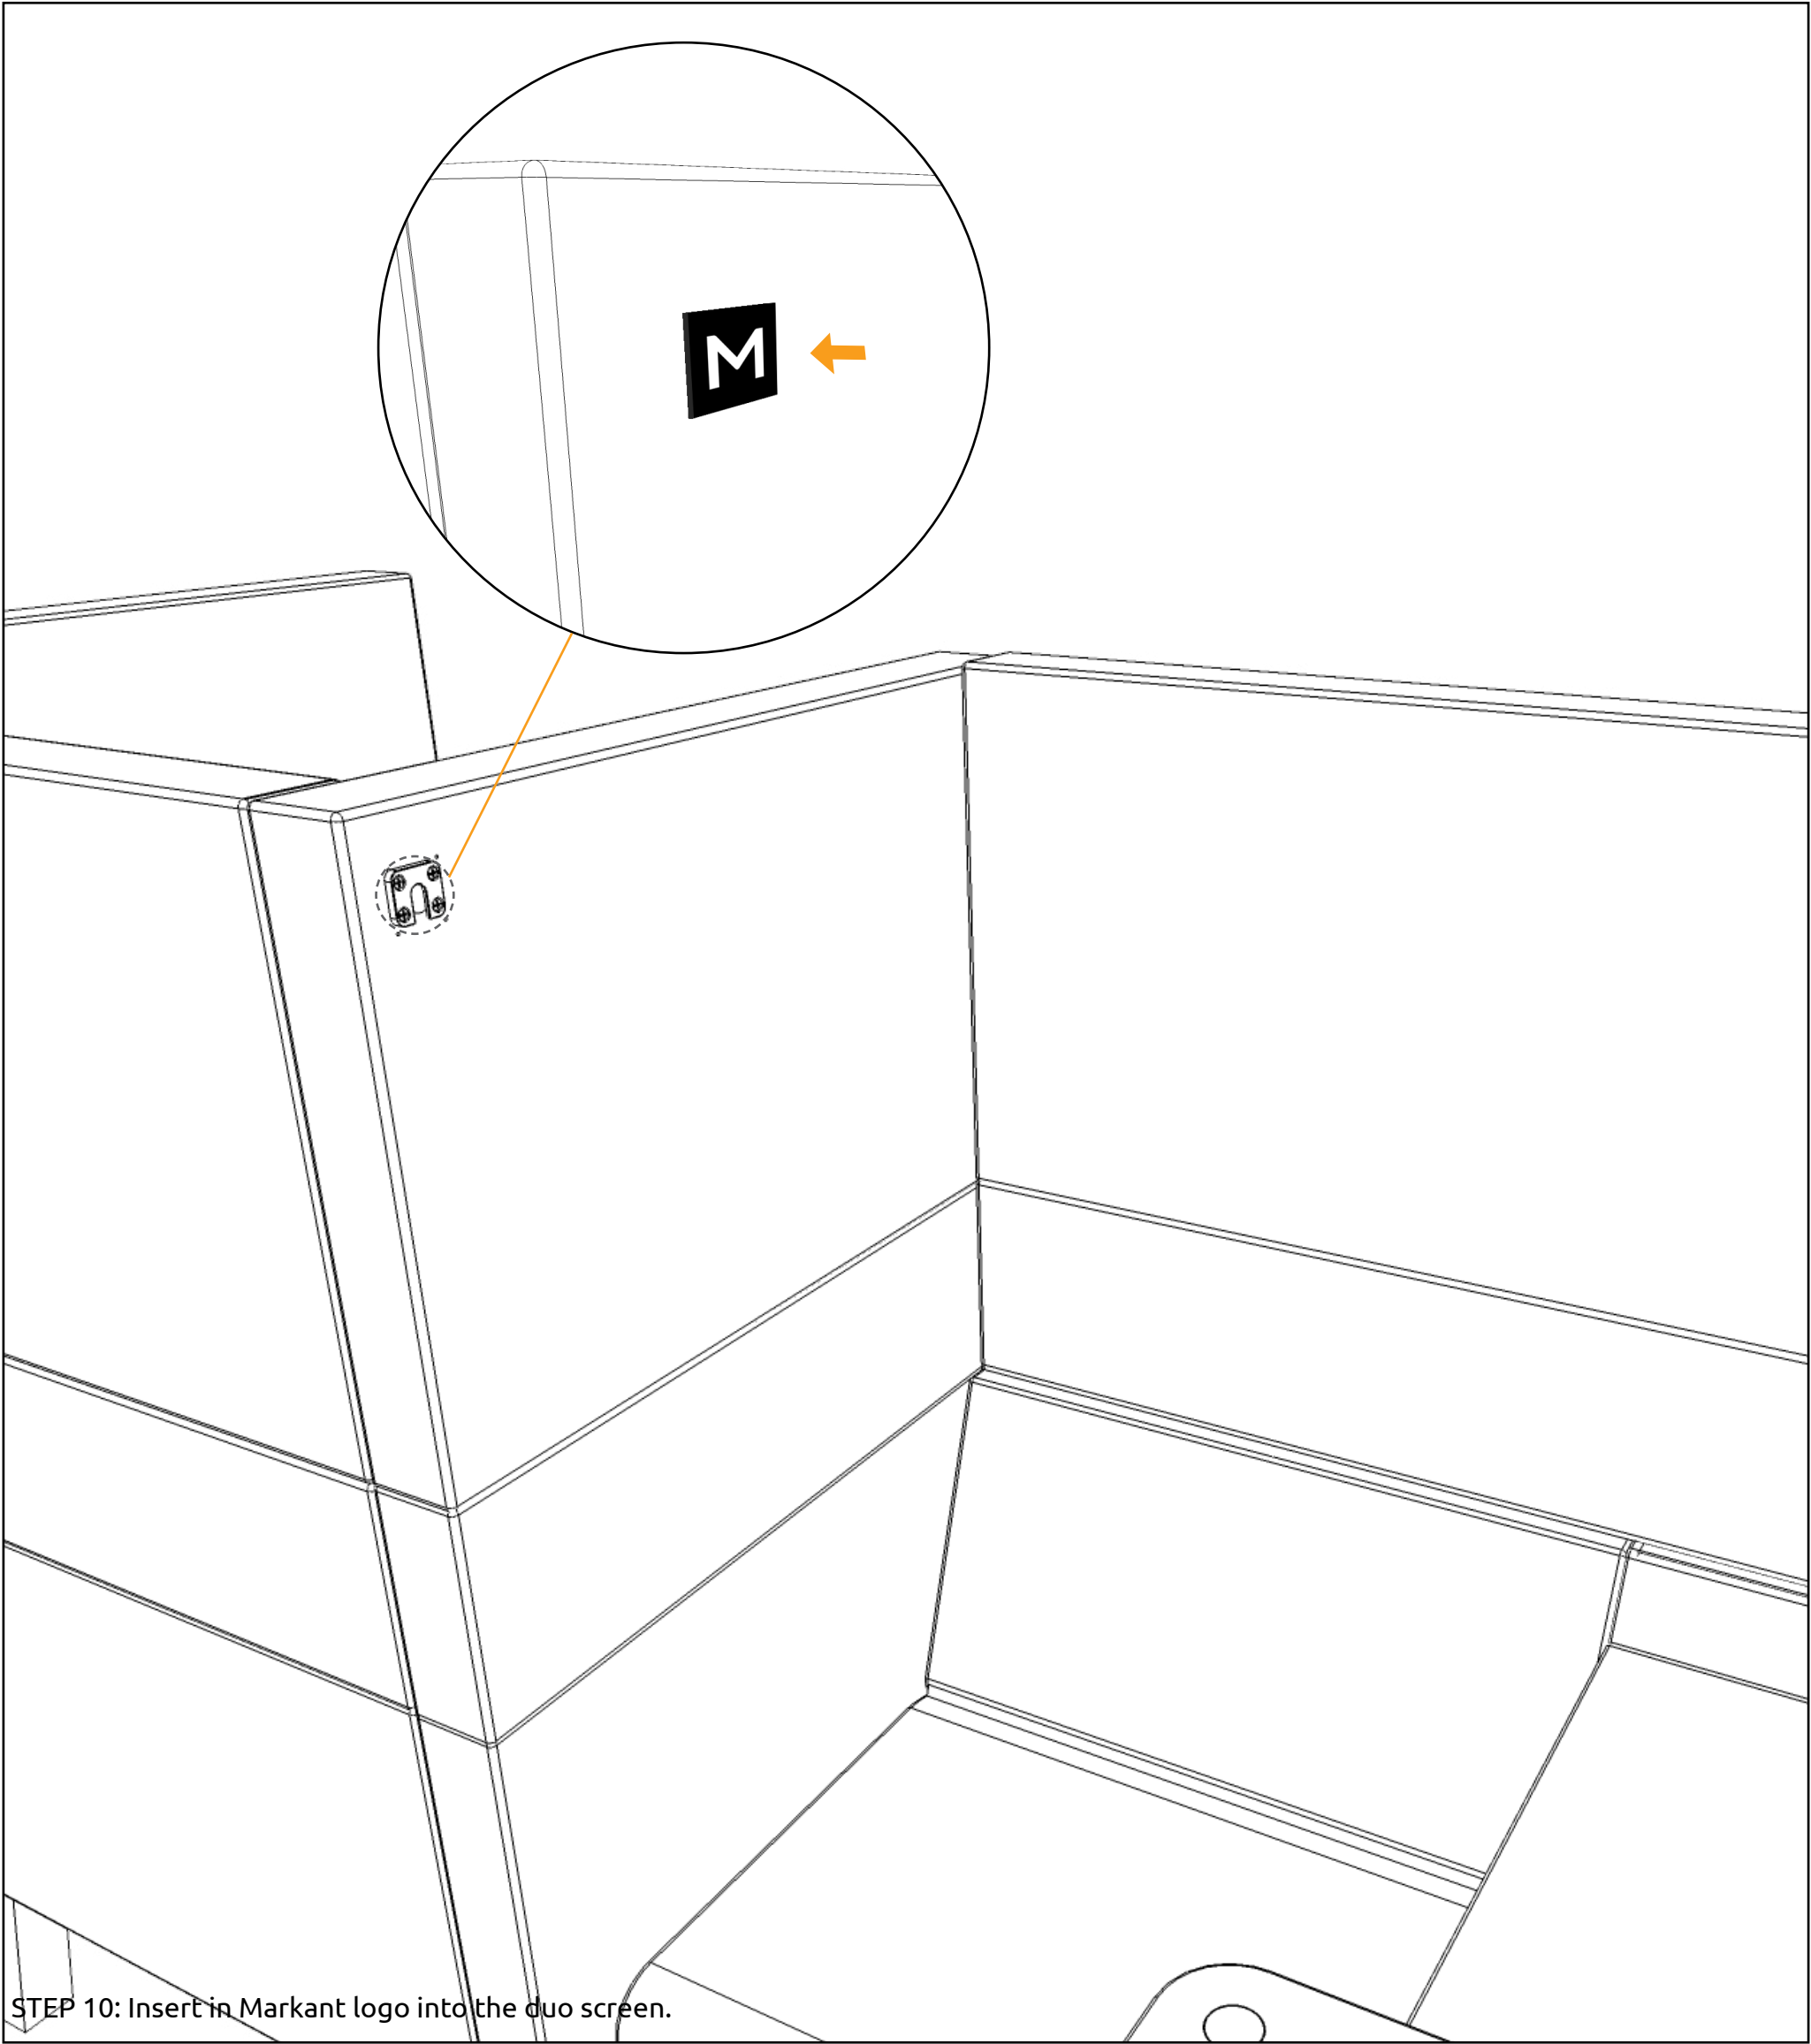


STEP 10: Insert in Markant logo into the duo screen.

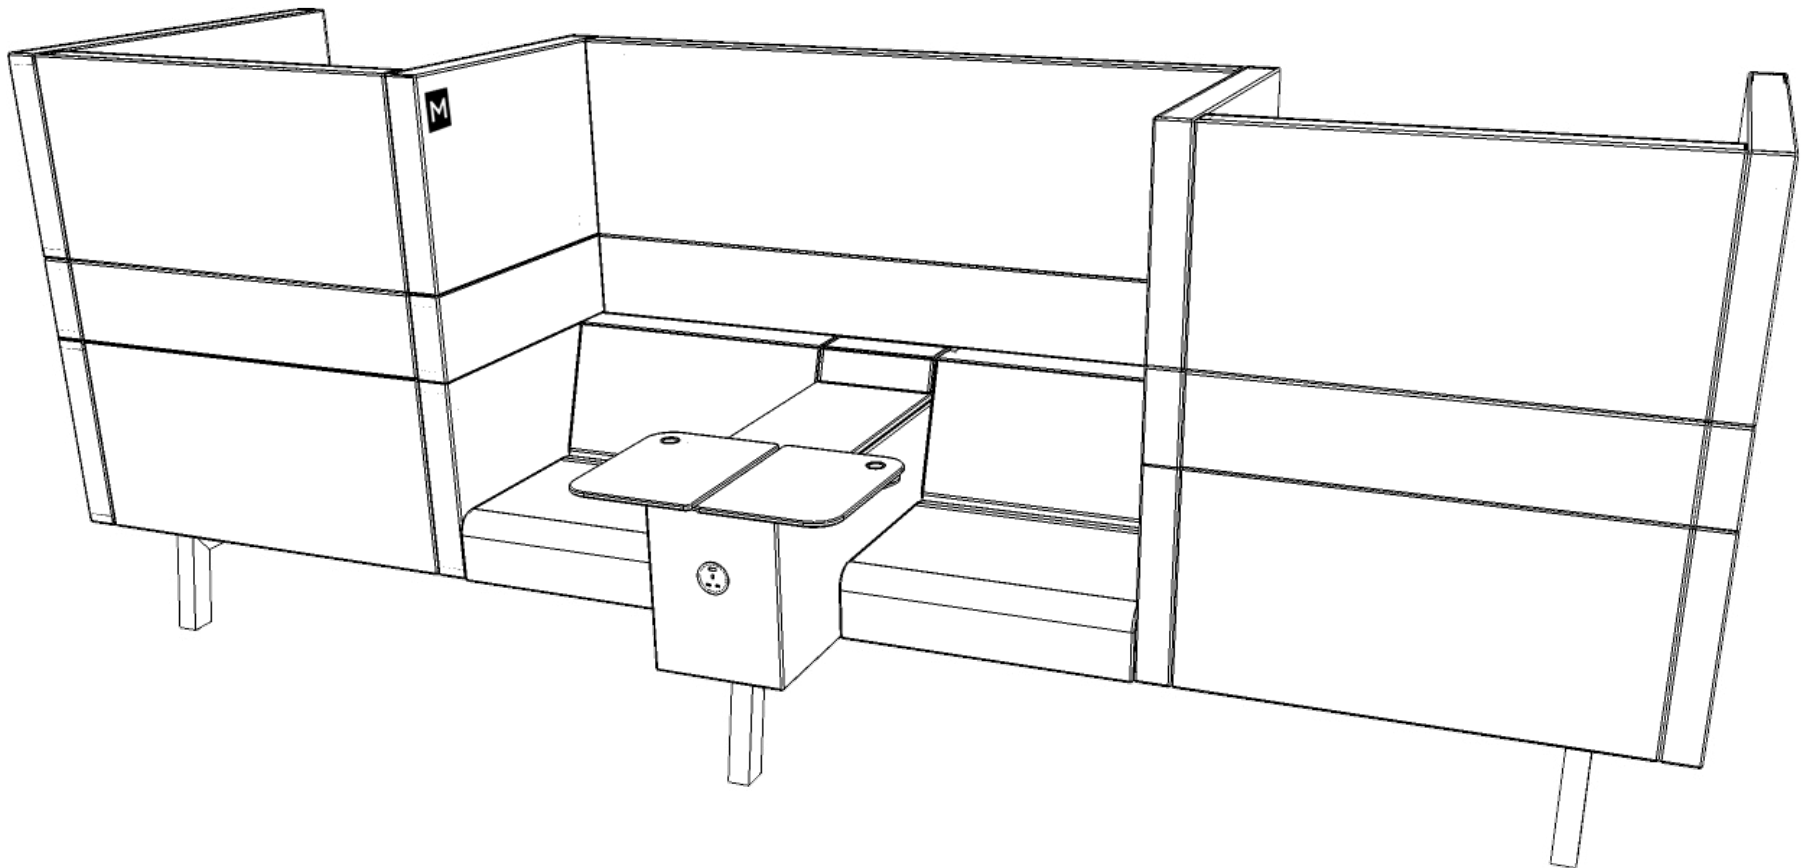


THE INSTALLATION FOR LAYOUT 6 IS COMPLETE.


# LAYOUT 7

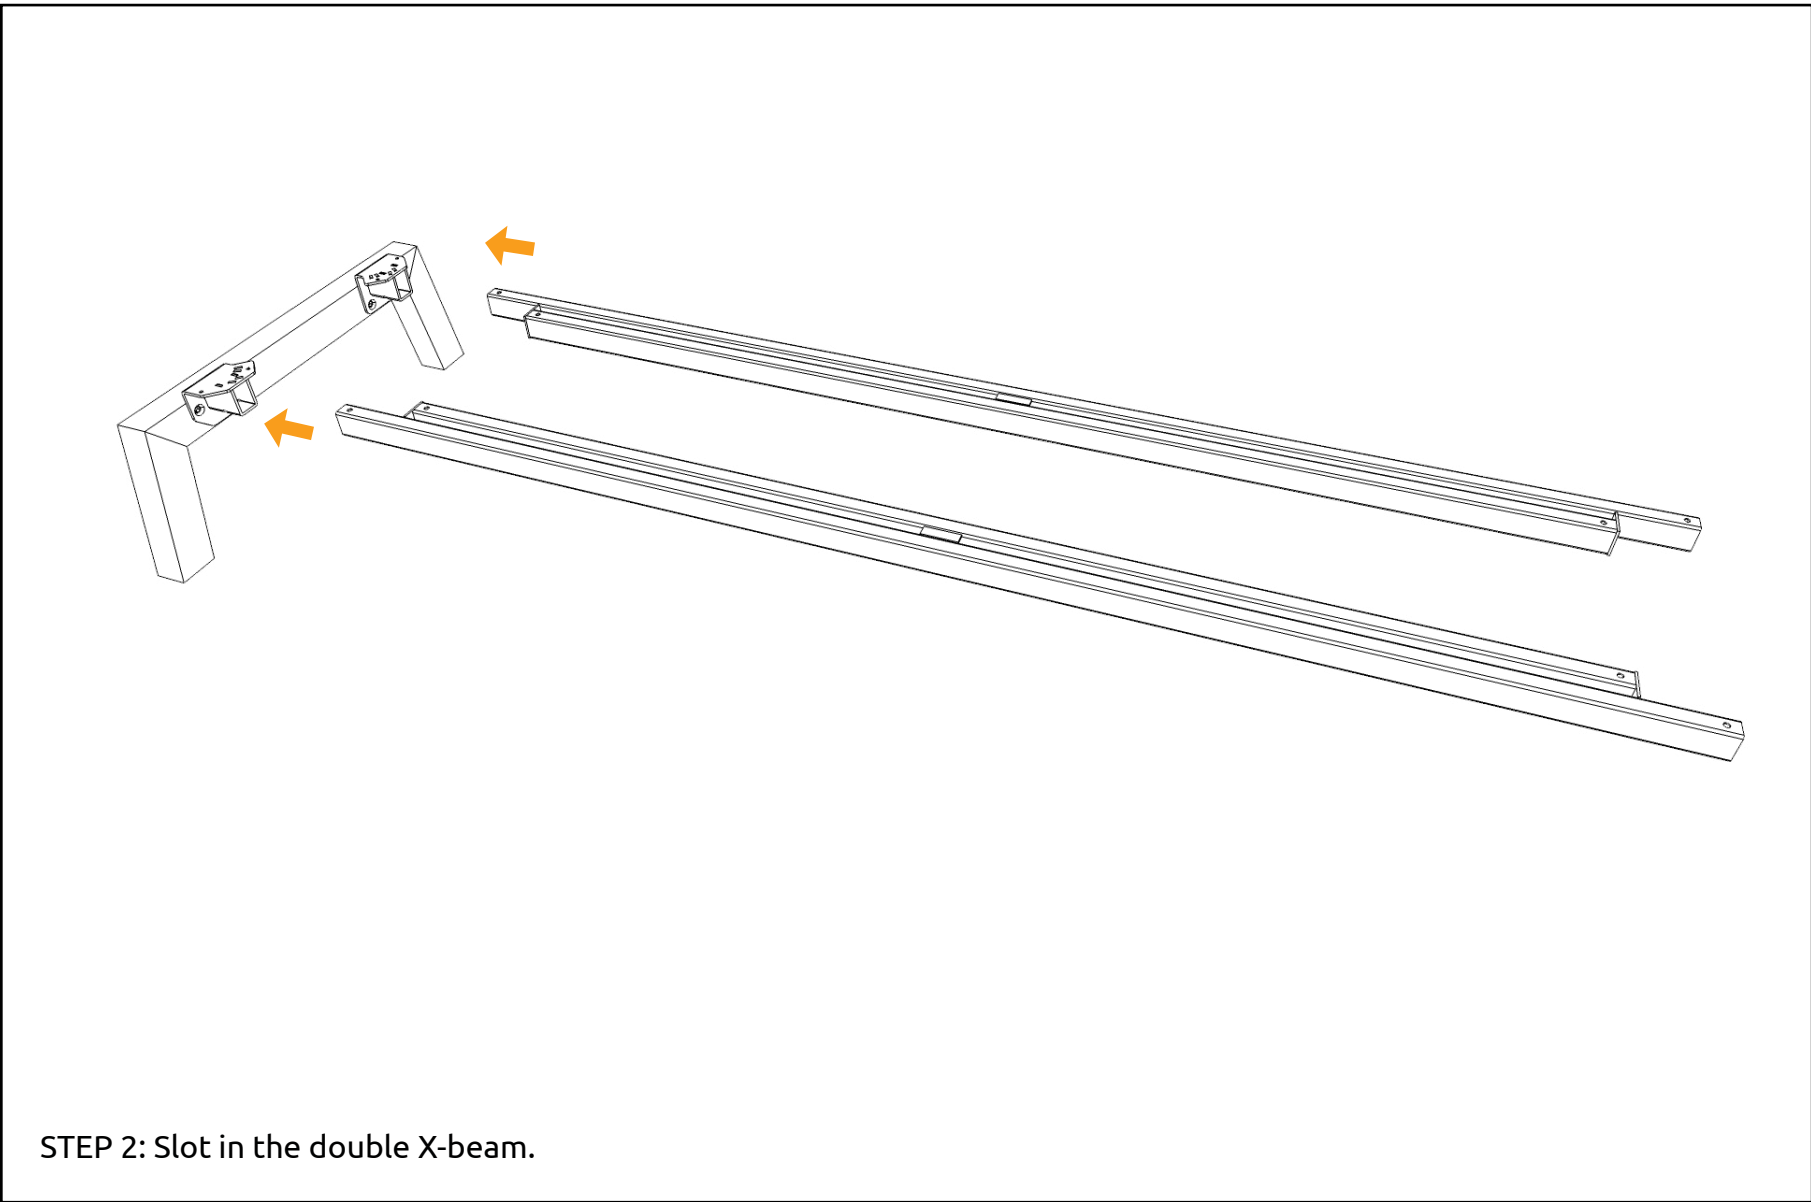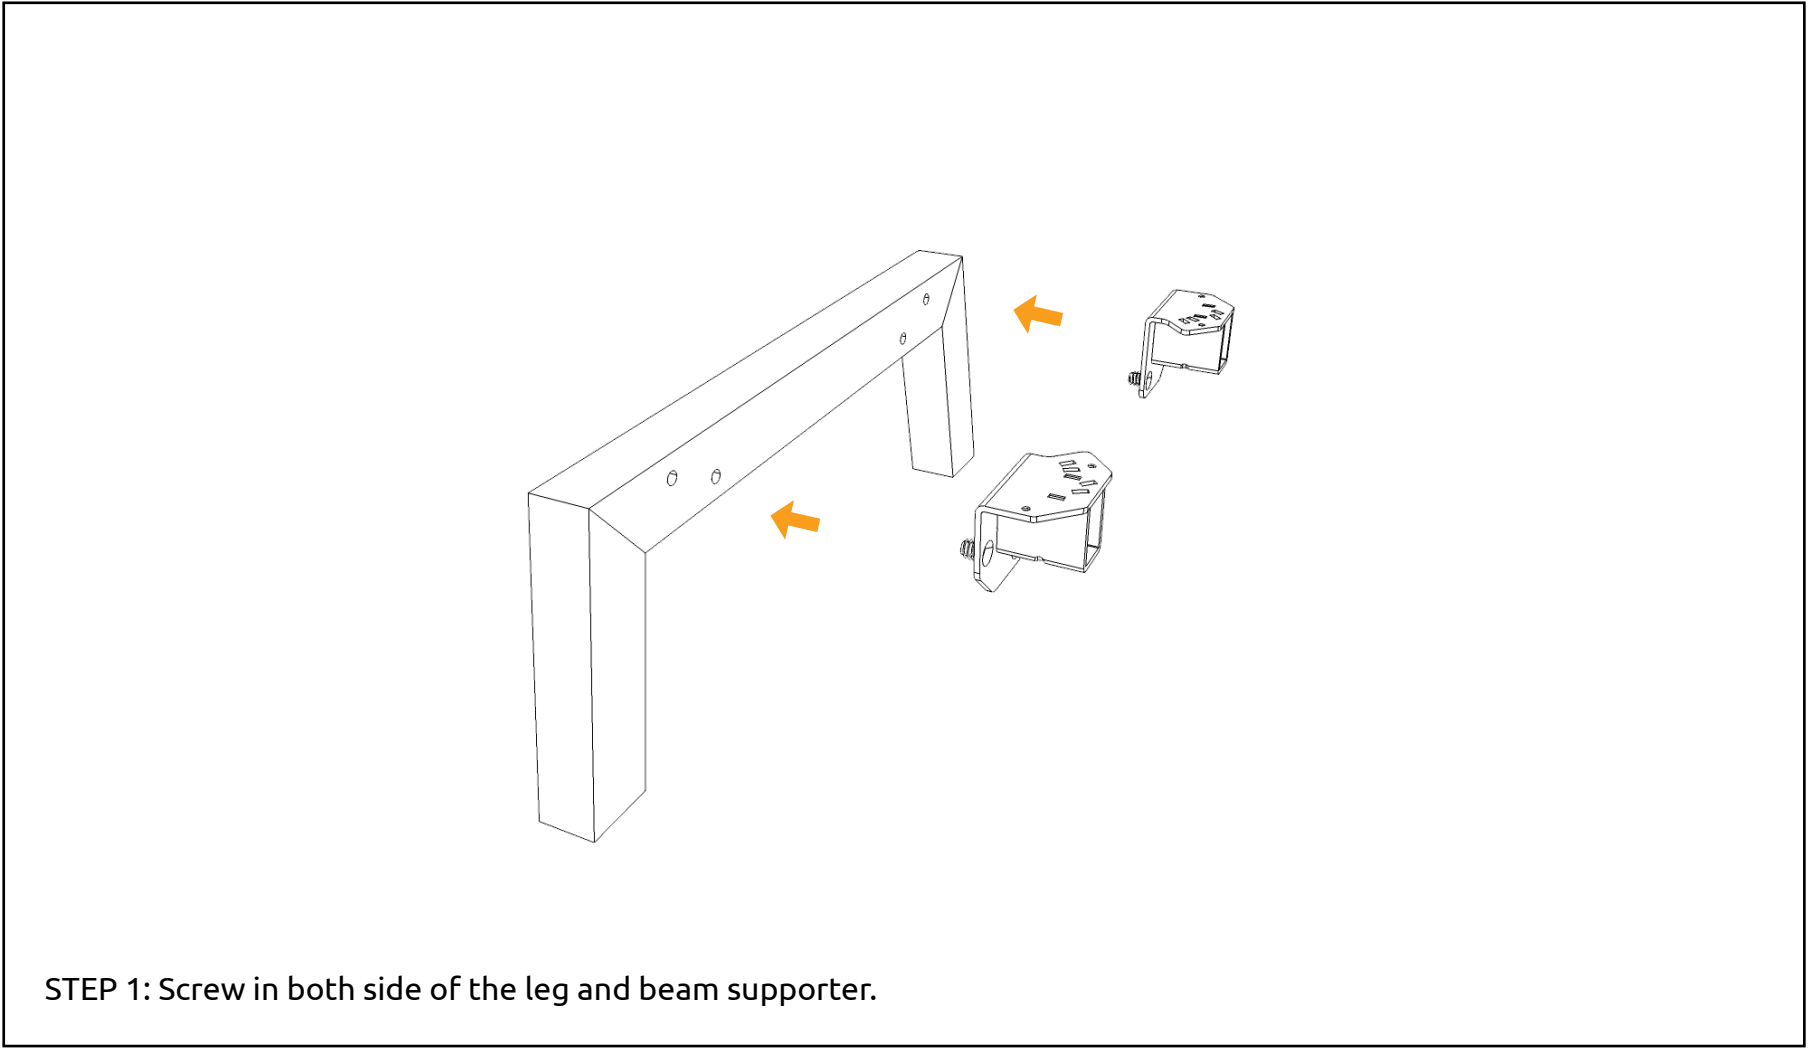




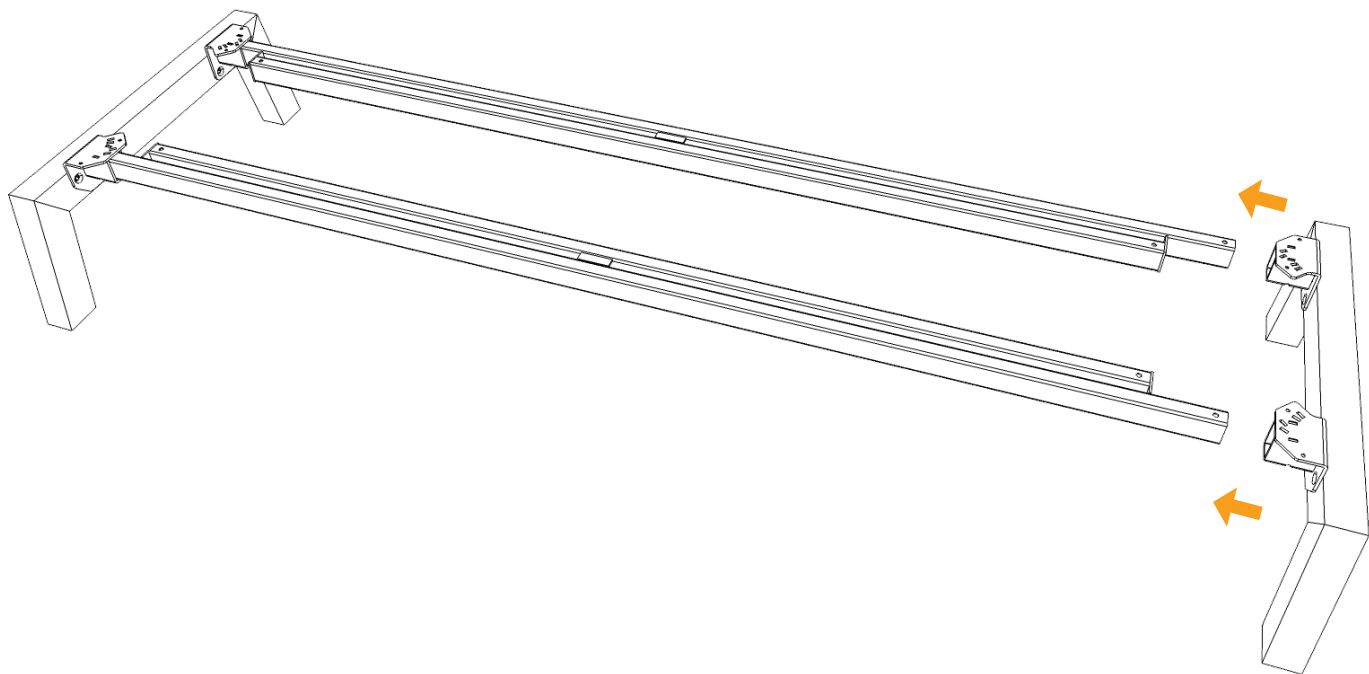


STEP 3: Slot in the other end of double X-beam to the opposite leg.

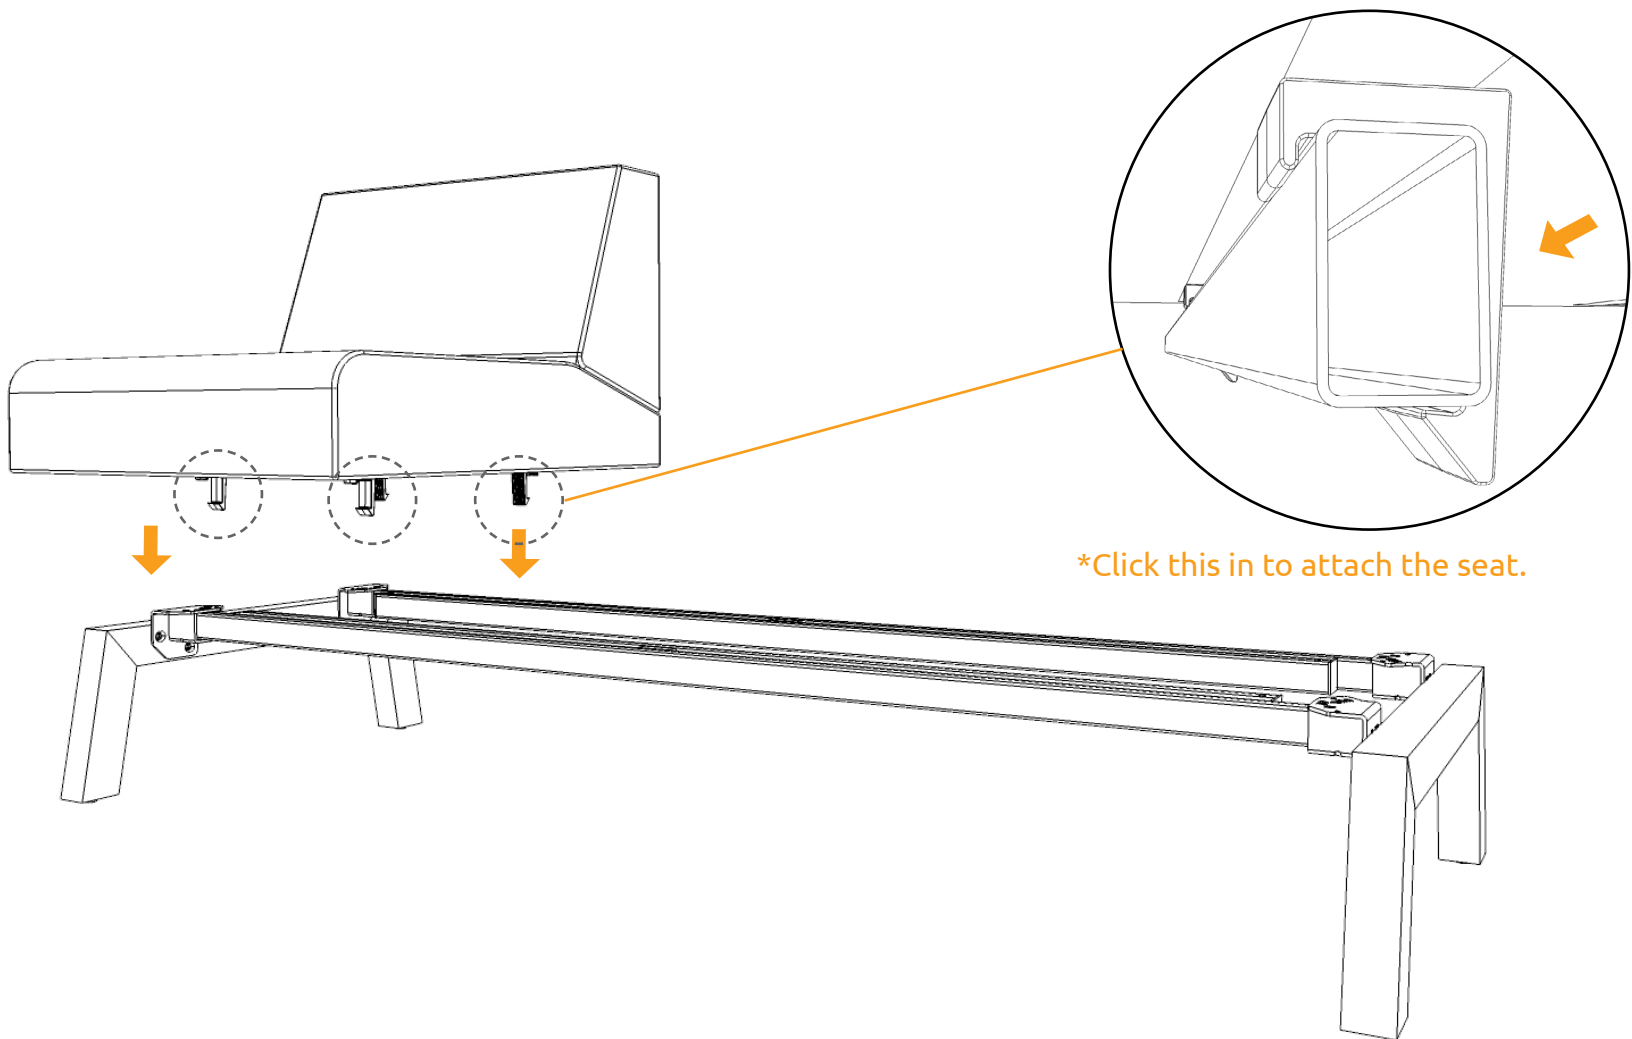



STEP 4: Snap in click first fix seater to the double X-beam.

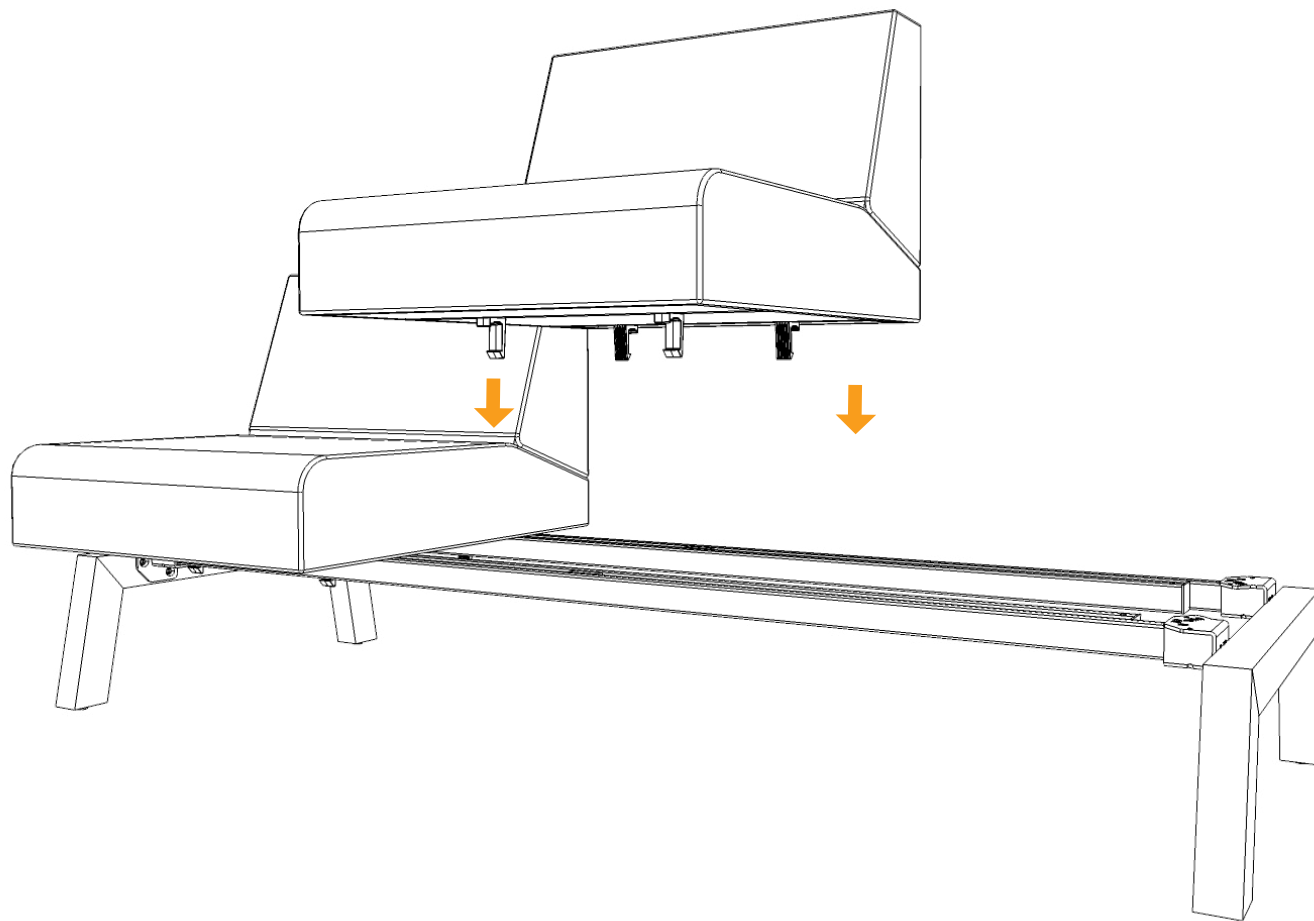


STEP 5: Snap in click second fix seater to the double X-beam.

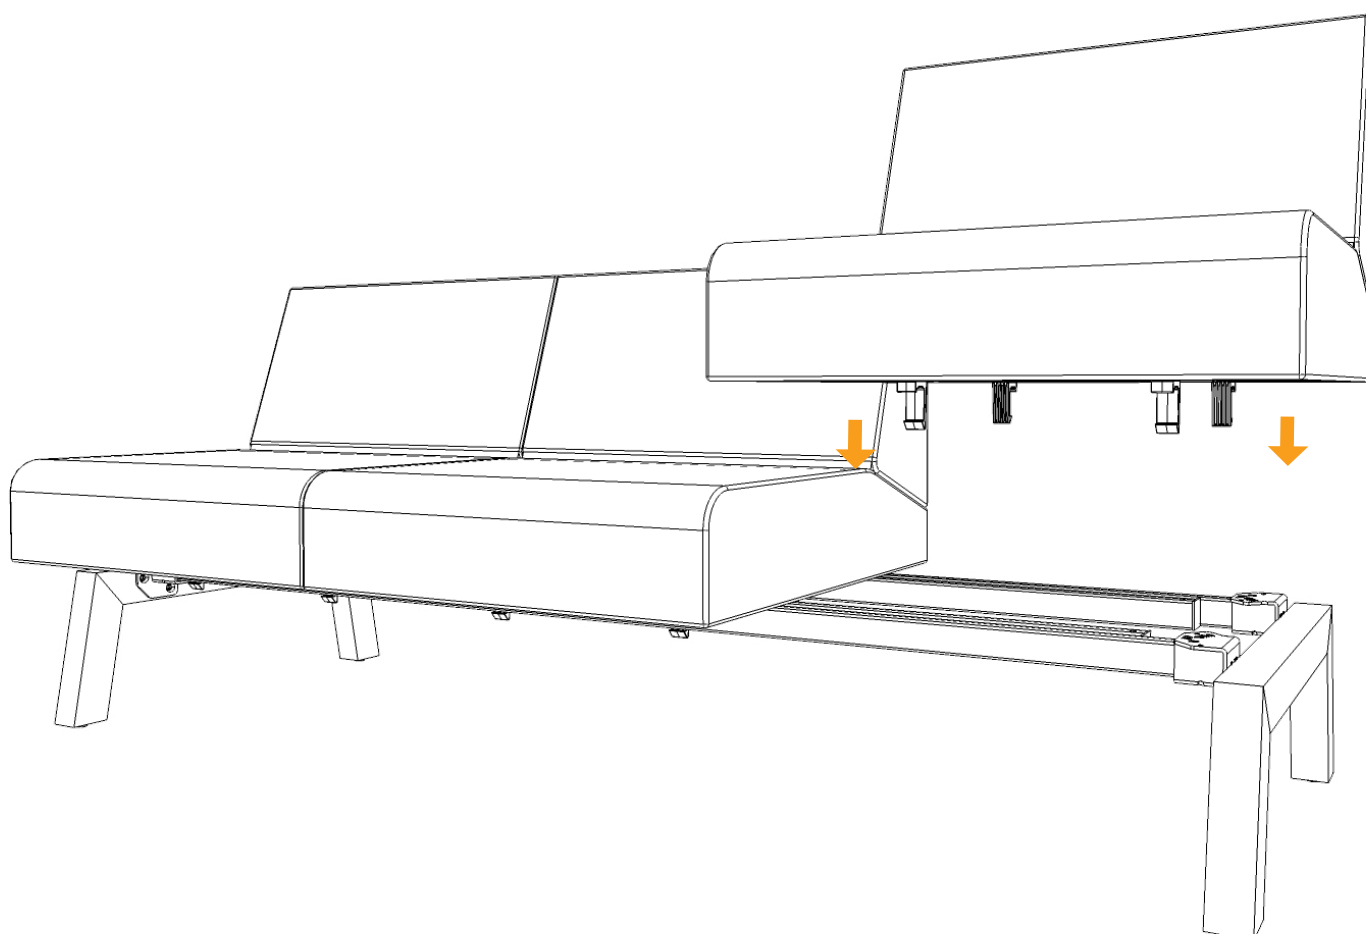

STEP 6: Snap in click third fix seater to the double X-beam

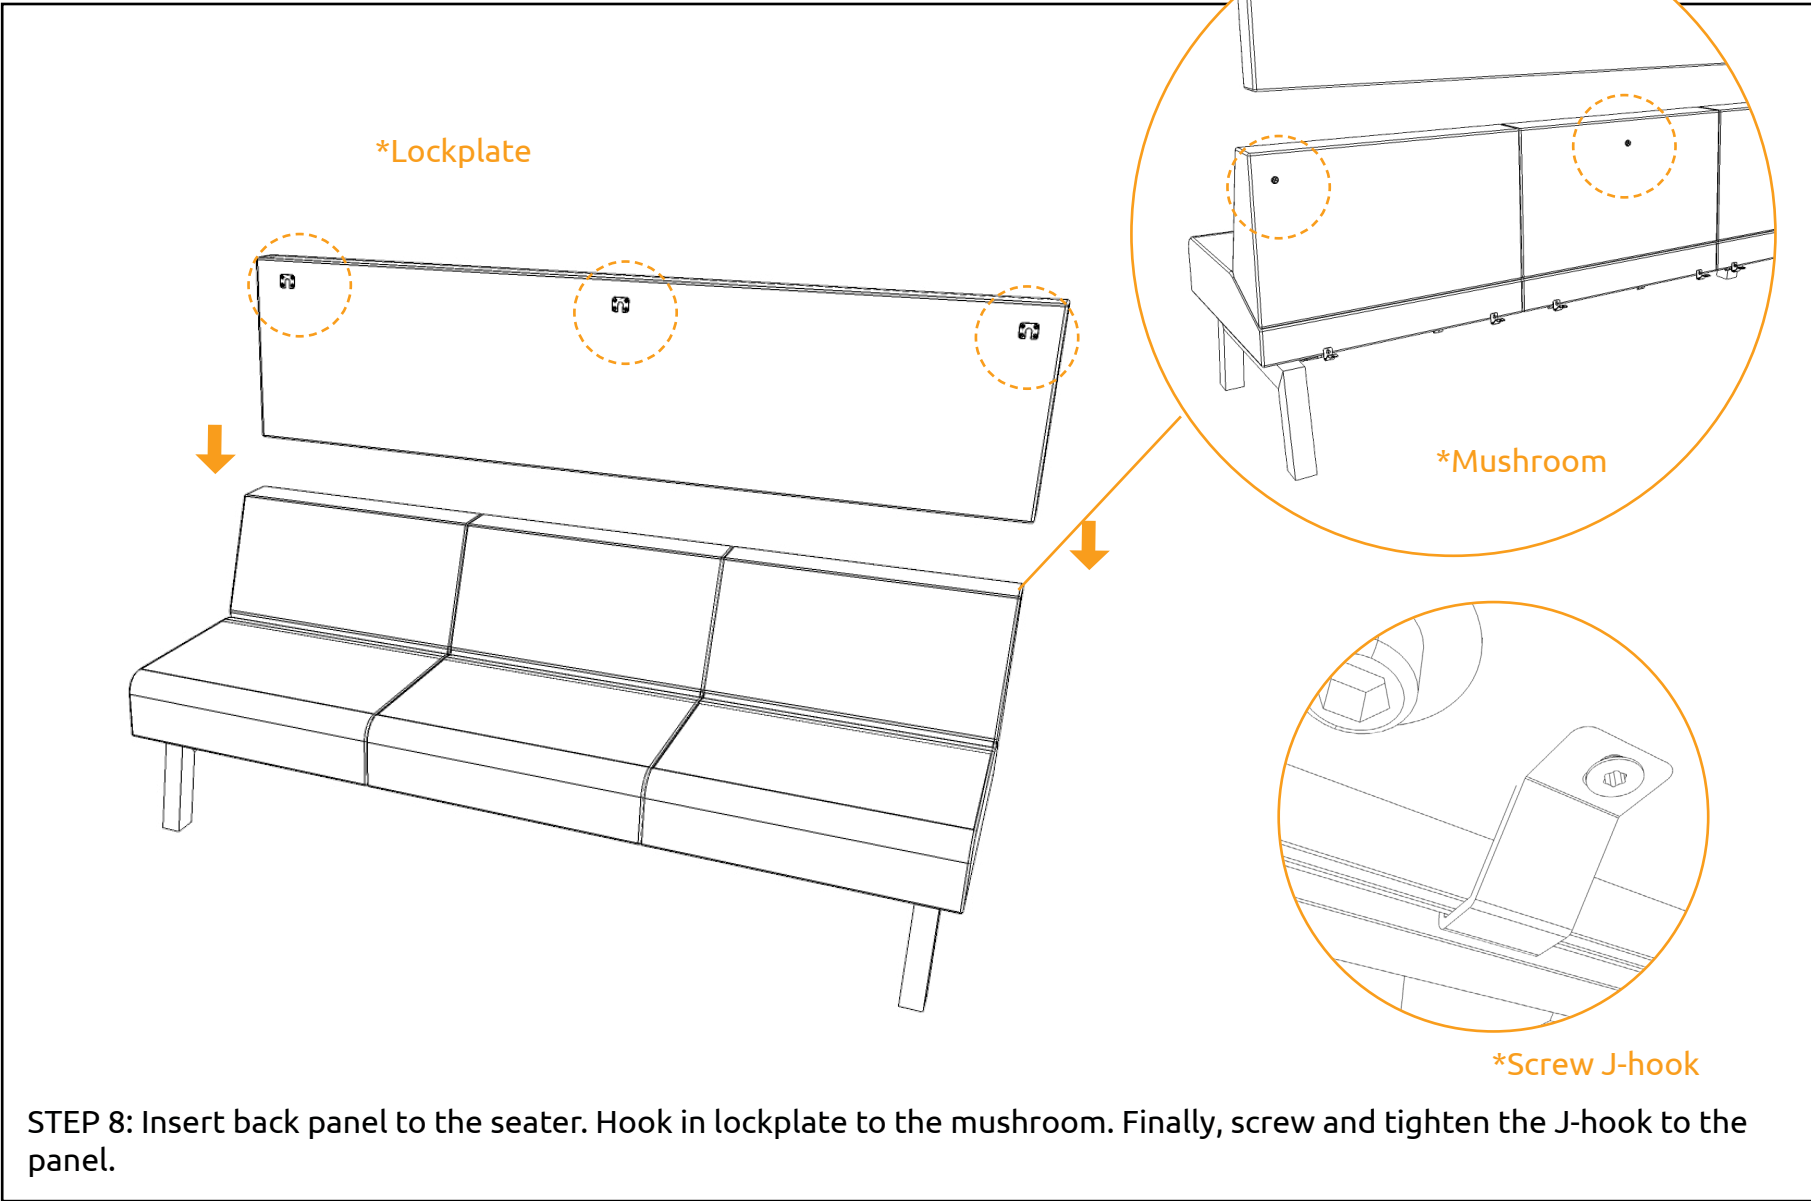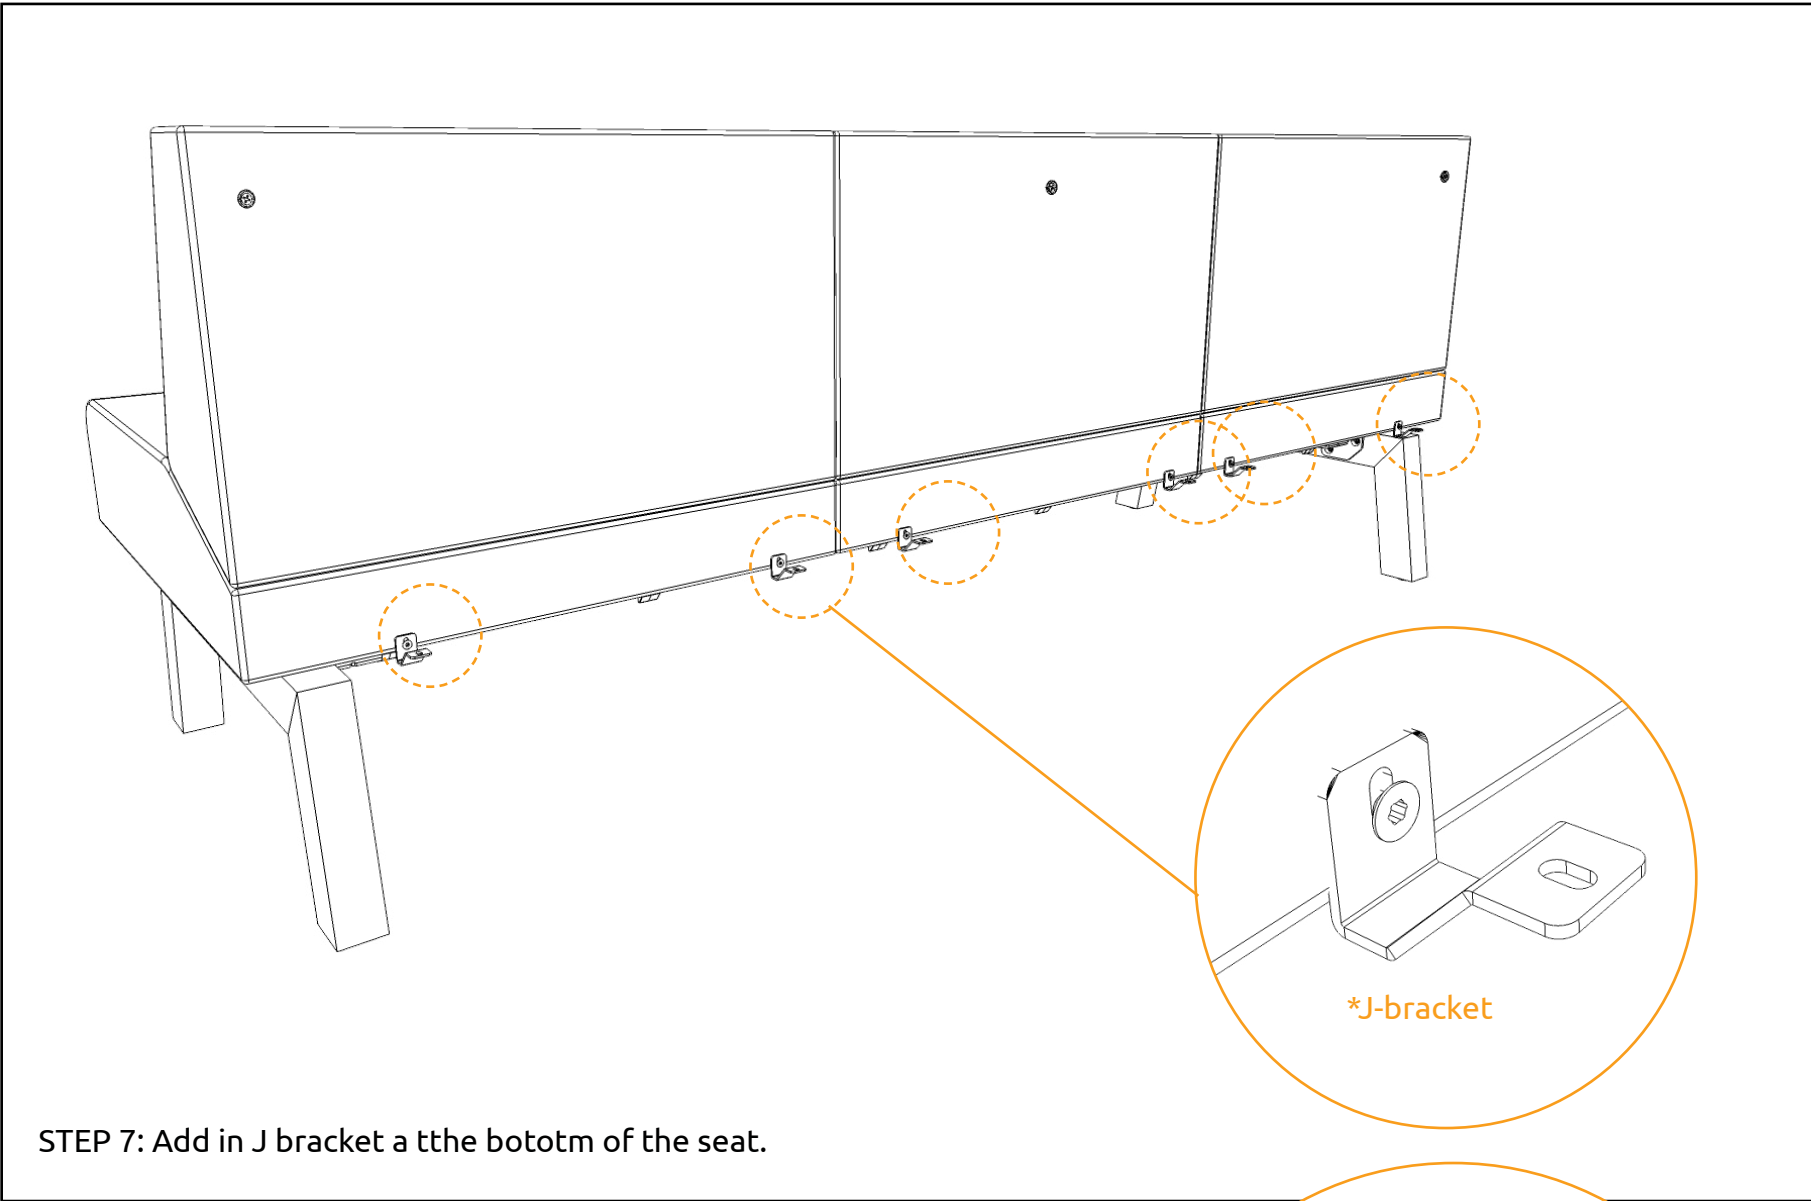

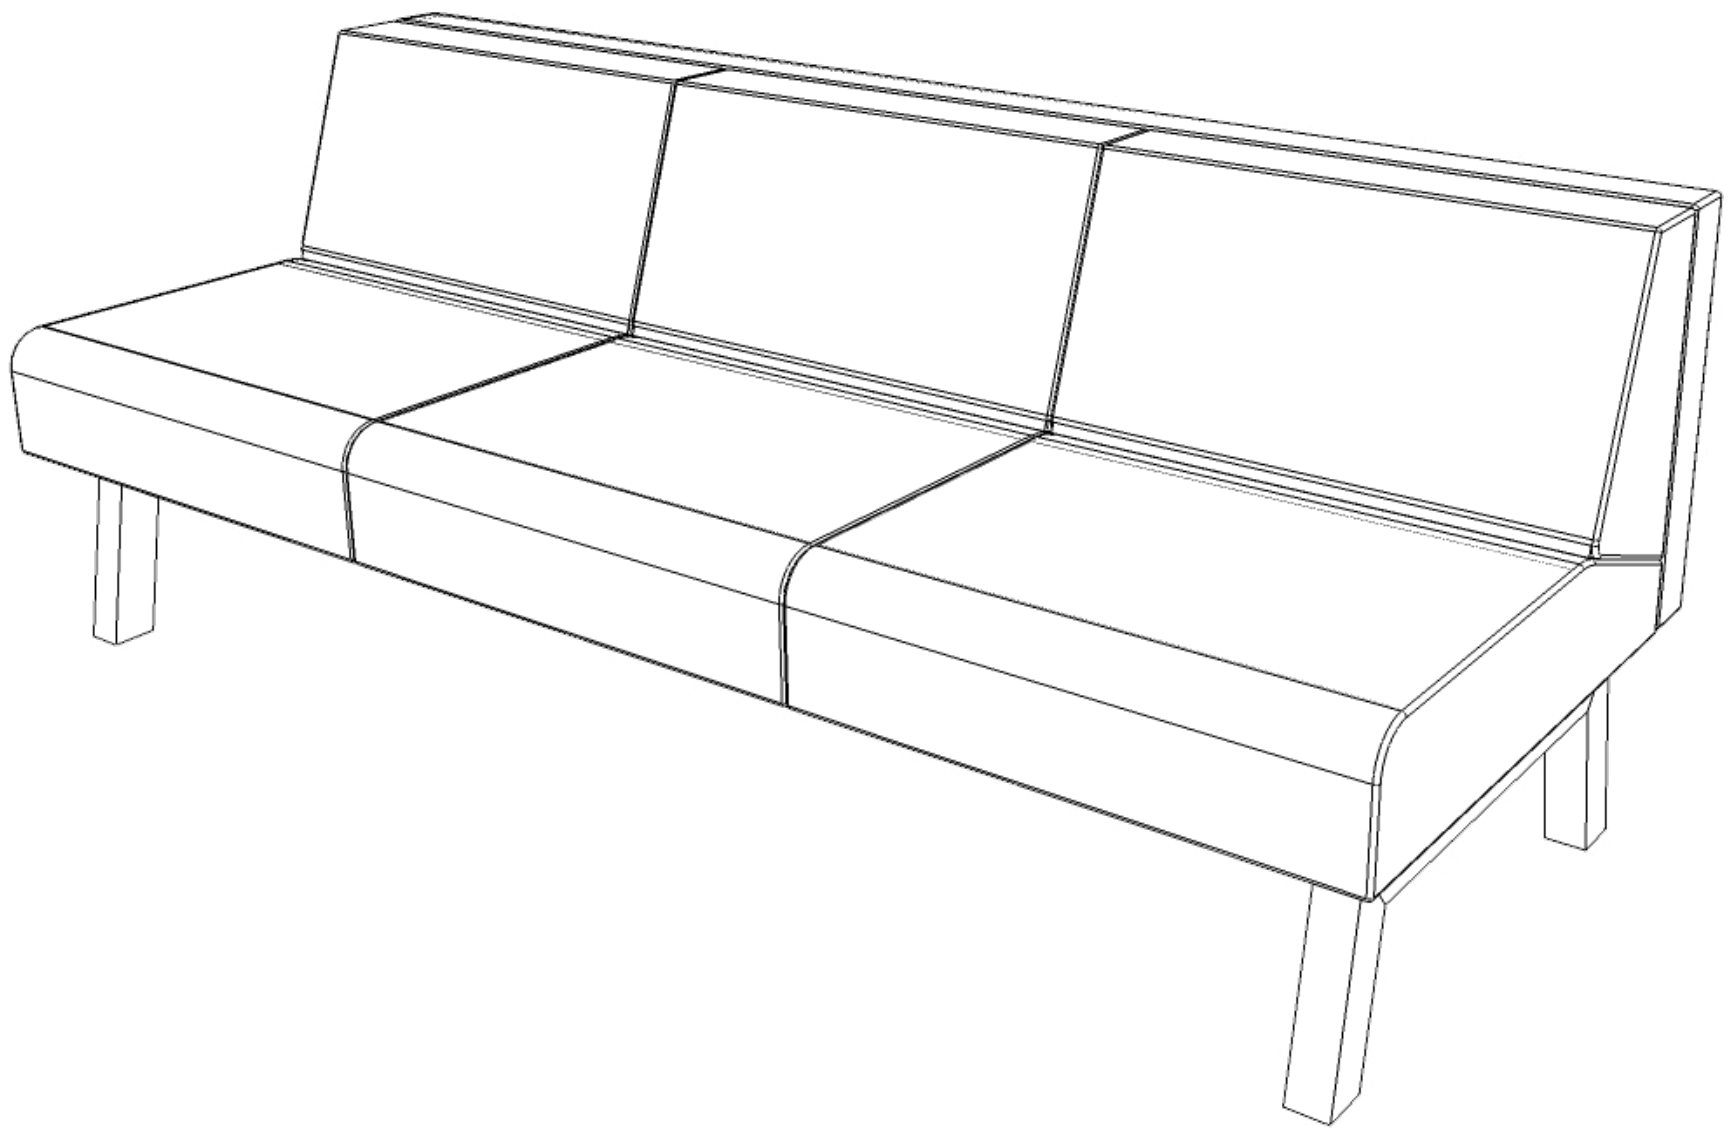

THE INSTALLATION FOR LAYOUT 7 IS COMPLETE.