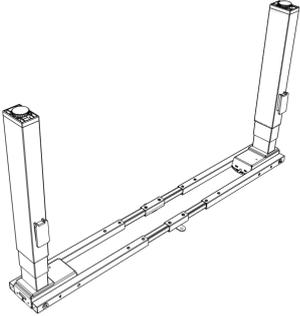
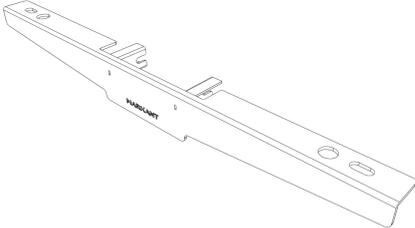
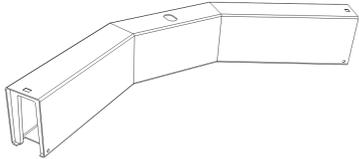
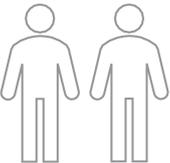
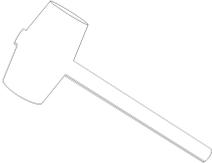




MAIN COMPONENTS

 <p>Component A (x3)</p>	 <p>Component B (x6)</p>	 <p>Component C (x3)</p>
---	--	---

TOOLS & MANPOWER


 <p>Manpower x2</p>	 <p>OPTION 1: Power Tool x2</p>	 <p>OPTION 2: Allen Key x2</p>	 <p>Mallet x2</p>	 <p>Leveler</p>
--	--	---	---	--

1

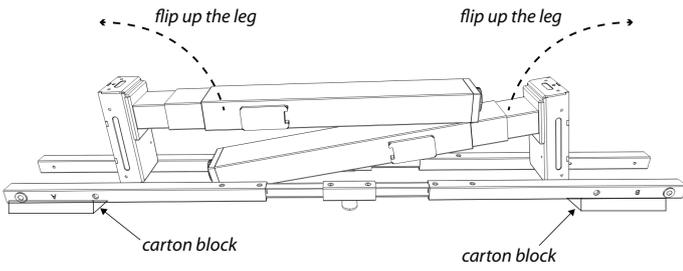


There are 3x Matrix Pro single frame (A). All the frame (A) are pre-assembled.

2

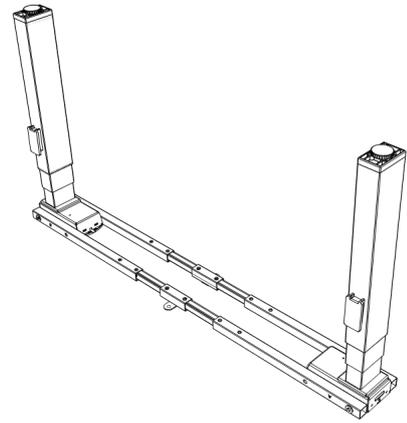


Raise the legs, slide the frame outwards to fit desired size and fix it with the bolts that are already mounted in the frame.

3

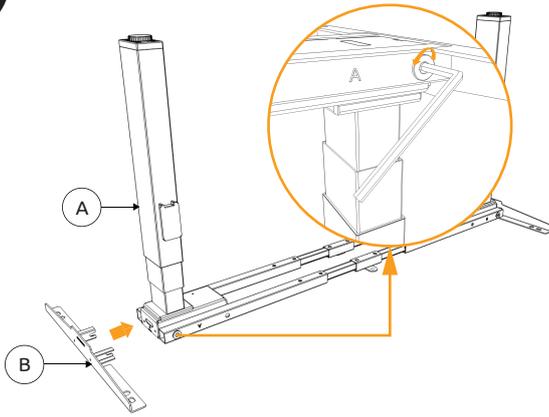


Attach B to A by secure the pre-assembled screw using Allen key.

4

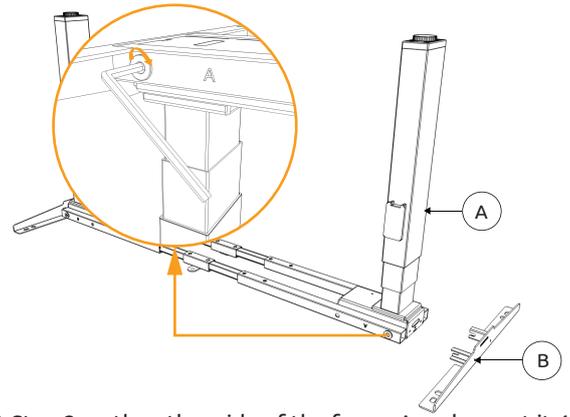


Repeat Step 3 on the other side of the frame A and repeat it 4x to the rest of Part A and B.

5

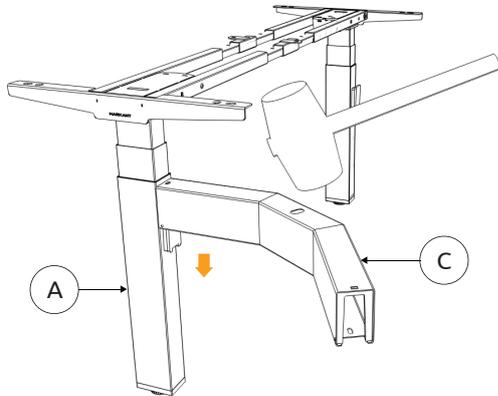


Attach C to A by using mallet.

6

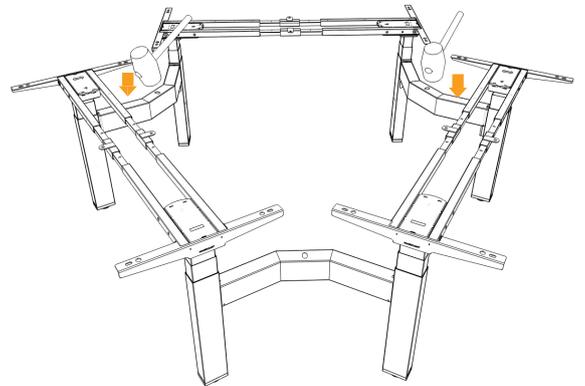


Repeat Step 3 for another 2x to the other parts.

7

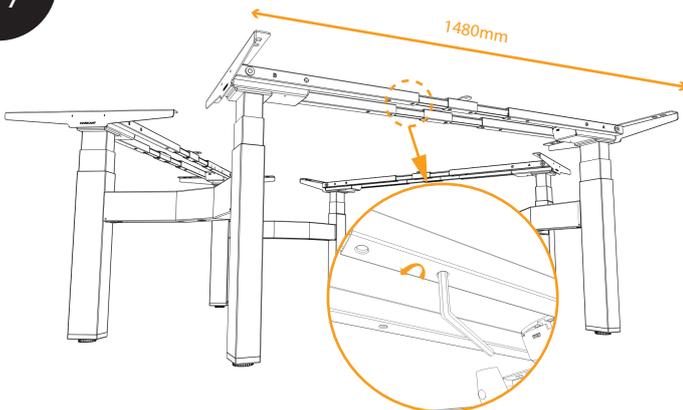


Adjust the table length to 1480mm and secure the screw using Allen key. Repeat this step on the other 2 remaining legs.




8

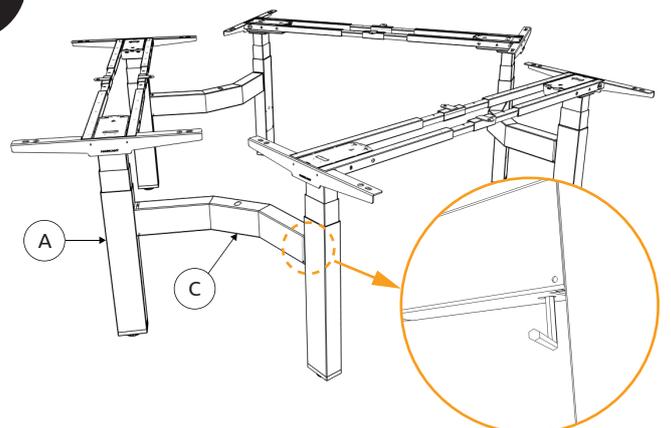



Finally secure the lock plate under the C with screw using Allen key. Repeat this step 2x to the other part of the legs.

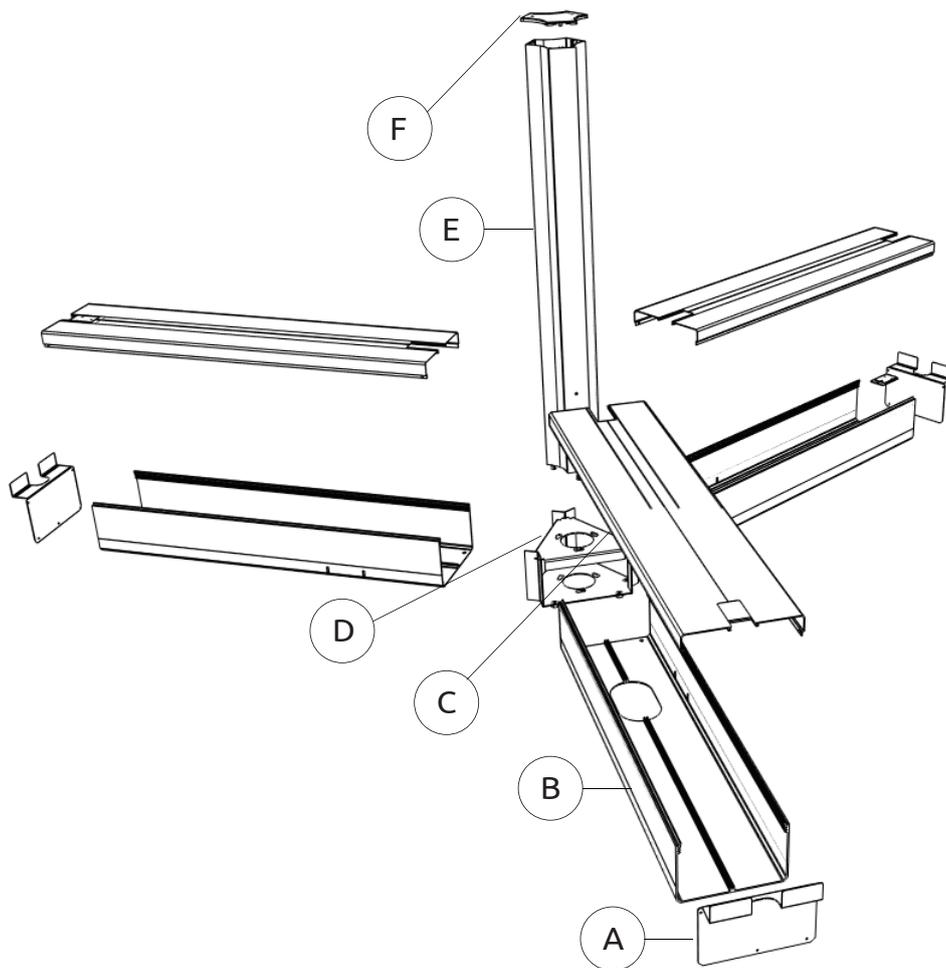


MAIN COMPONENTS

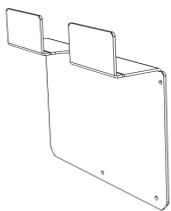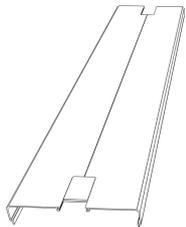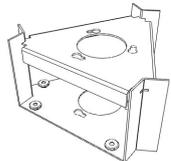 <p>Component A (x3)</p>	 <p>Component B (x3)</p>	 <p>Component C (x3)</p>	 <p>Component D (x3)</p>	 <p>Component E (x3)</p>	 <p>Component F (x3)</p>
--	---	---	--	---	---

TOOLS & MANPOWER

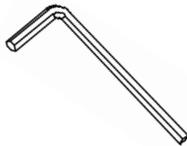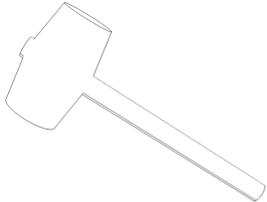
 <p>Manpower x1</p>	 <p>Power Tool x1</p>	 <p>Allen Key x5</p>	 <p>Mallet x1</p>
--	--	--	--

1

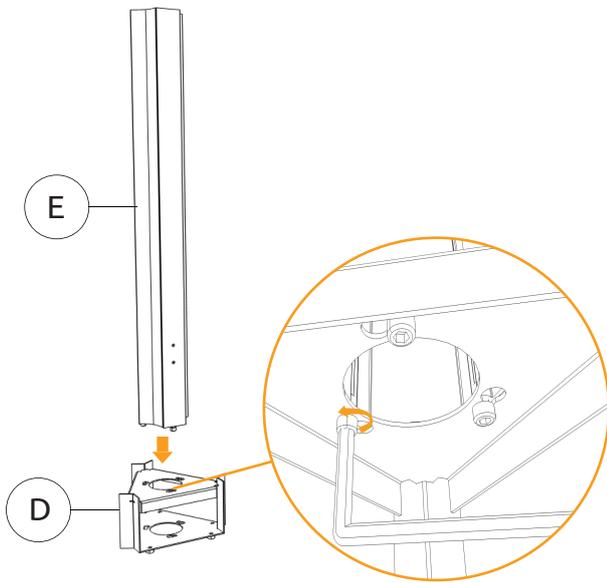


Attach E (with the pre-install screw) to the key hole of D and tighten it using Allen key.

2

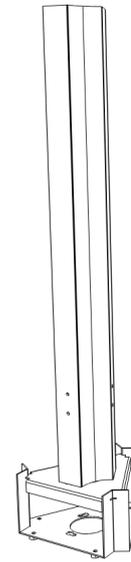


The installation on the first accessories part is completed.

3

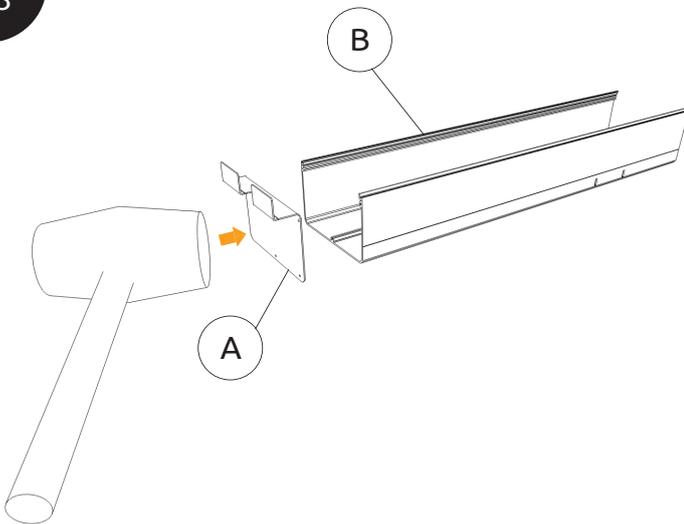


Use Mallet to attach A to B. Repeat this step for another 2x to the rest of the components.

4

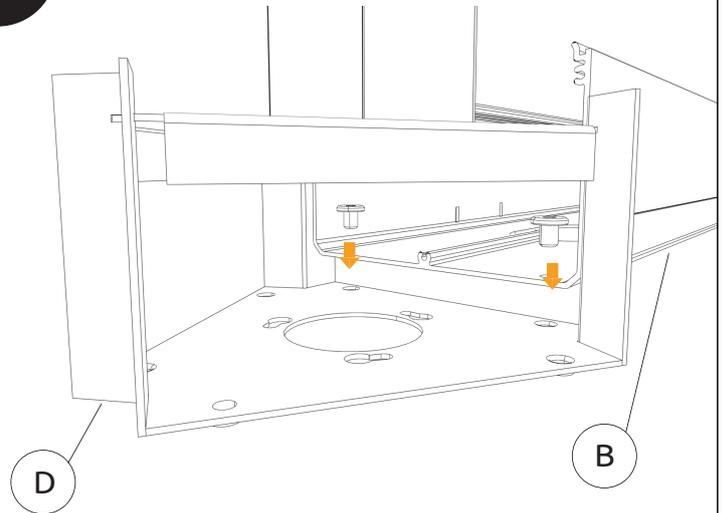


Screw B to D by using JCBC screw. Repeat this step for another 2x to the rest of the components.

5

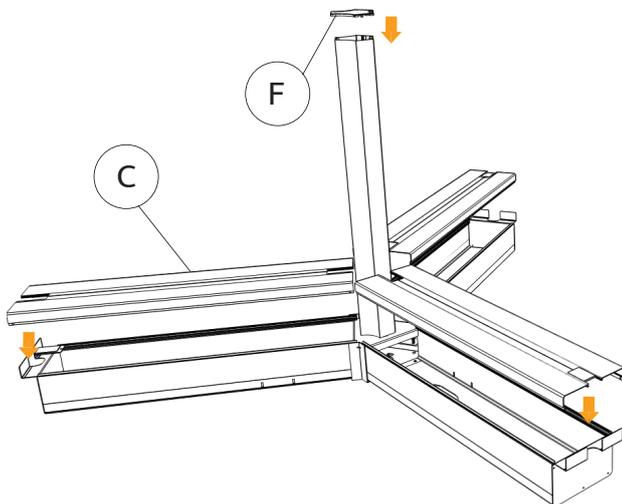


Cover up both part with C and F. Repeat this step 2x for Component C.


6

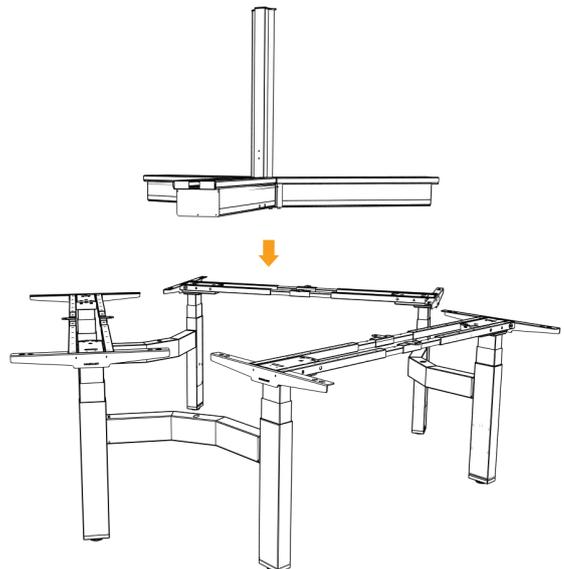


Finally attach the accessories on top of the standard Matrix Pro Wing.

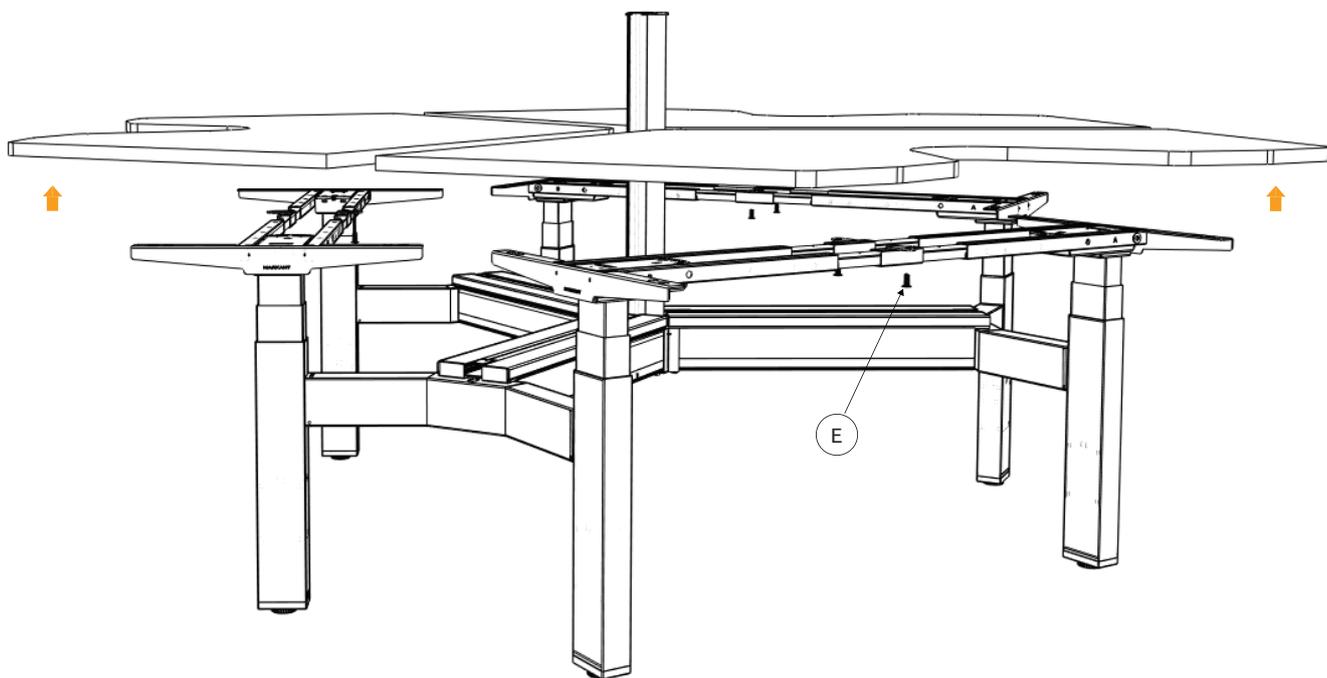



Attach table top on the frame and secure it using (E) screw. Repeat this step 2x on the other frame.

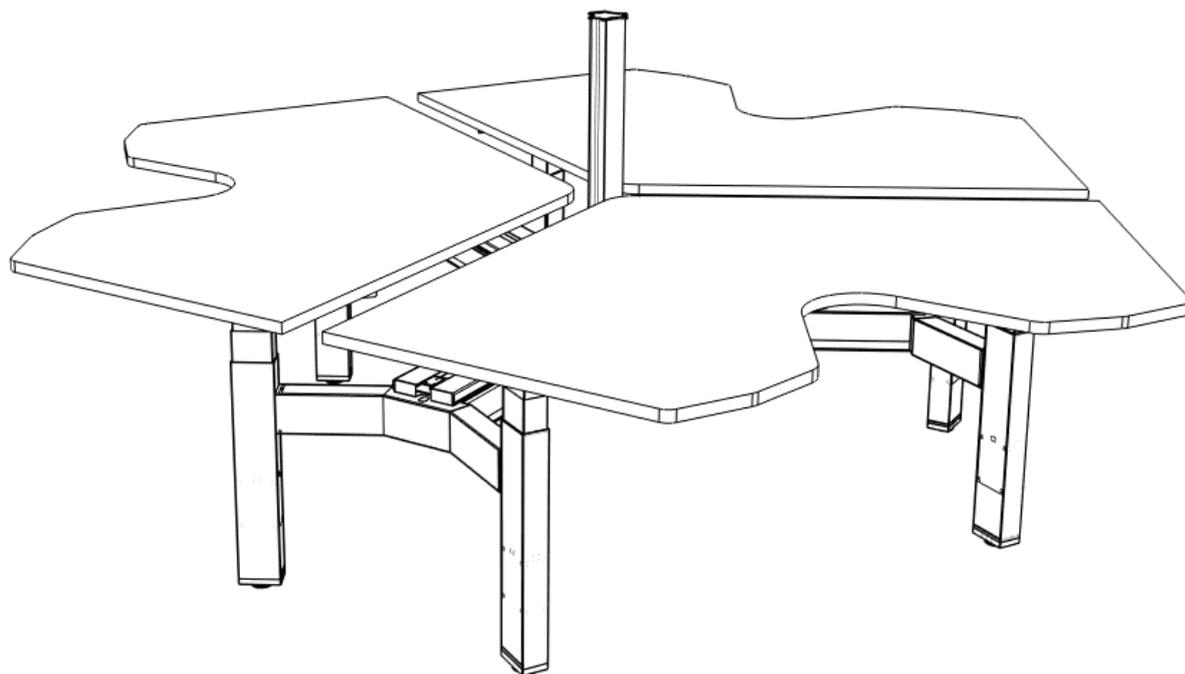

The installation for the table top is completed.

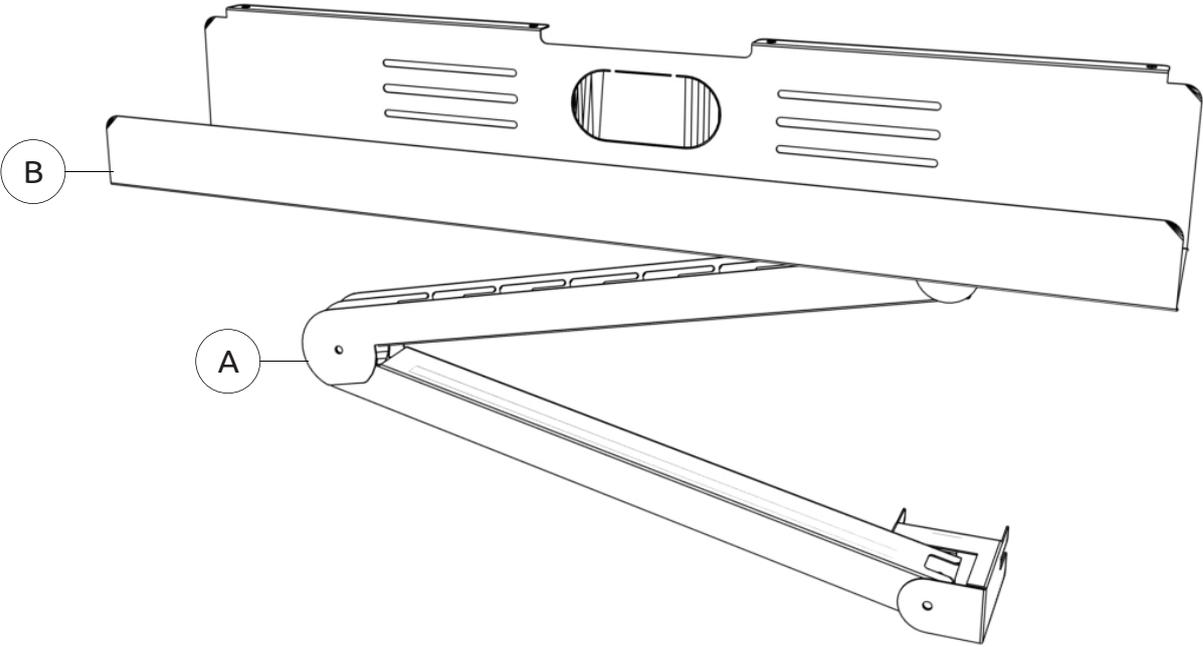


MAIN COMPONENTS

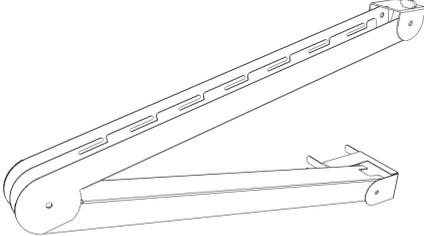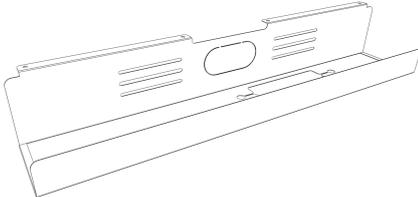 <p>[A] Elbow (x1)</p>	 <p>[B] Smart Gutter (x1)</p>
---	---

TOOLS & MANPOWER


 <p>Manpower x1</p>	 <p>Power Tool x1</p>	 <p>Allen Key x5</p>
--	--	---

1

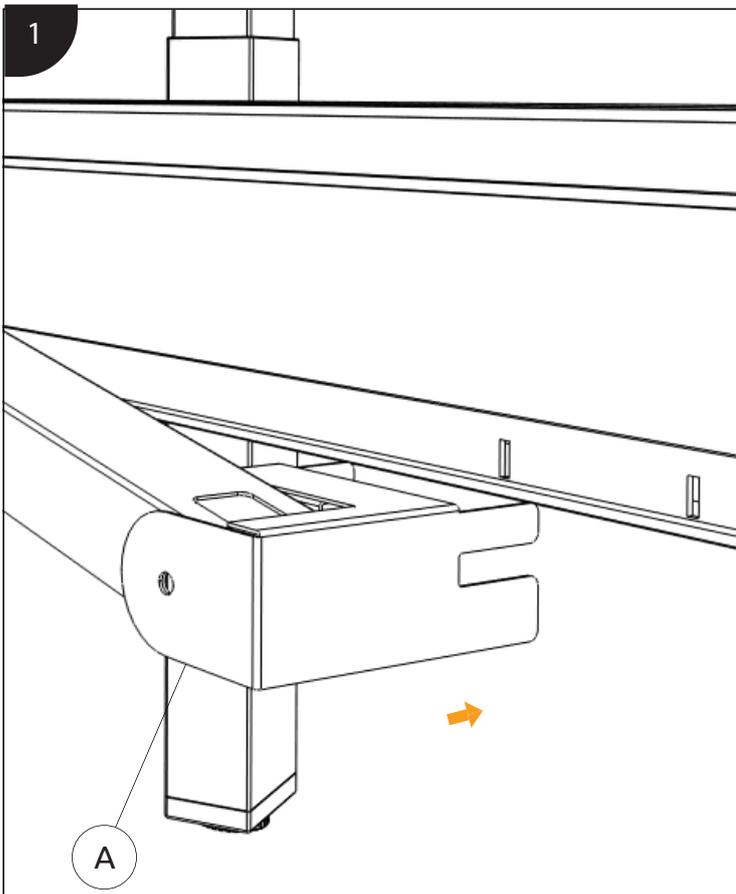


Attach A by slotting it's bottom adapter into the Main Gutter holes.

2

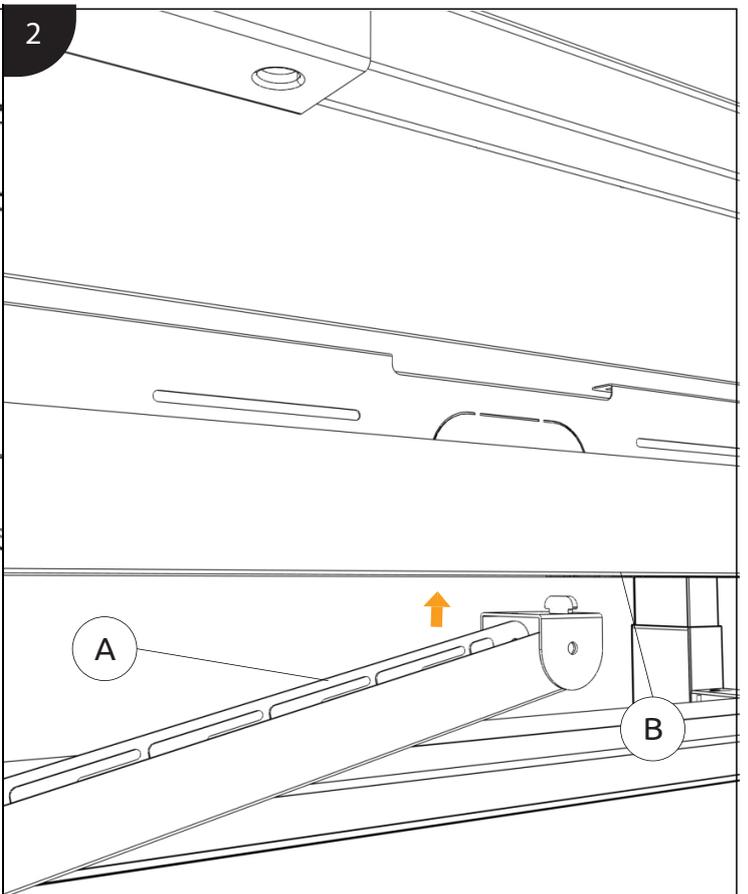


Then attach top part A to bottom B.

3

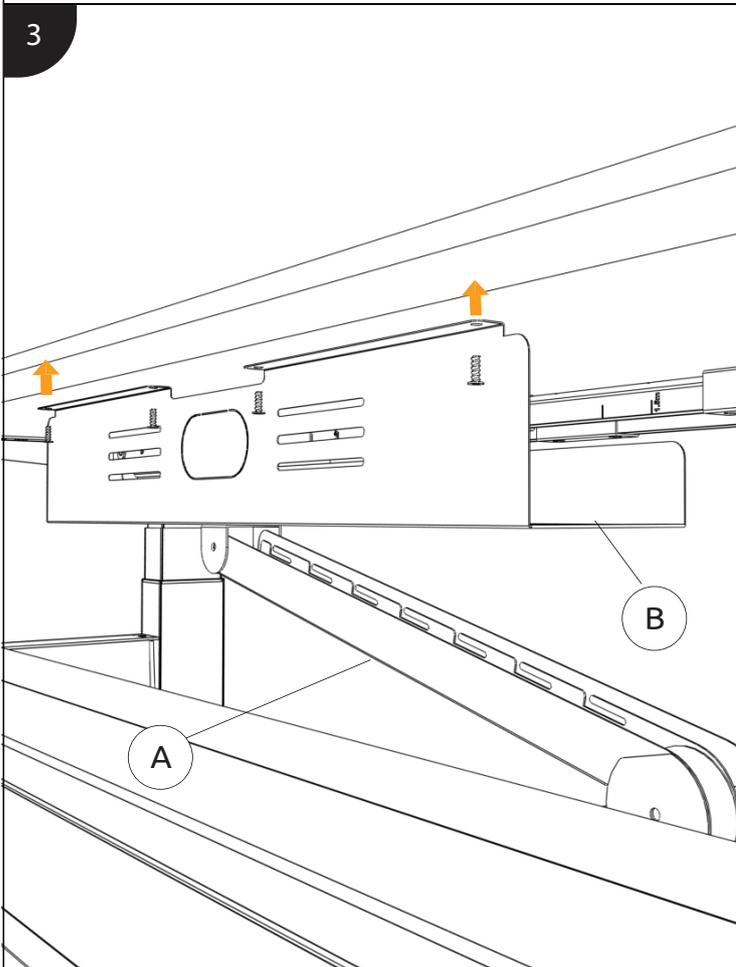


Lastly, the B is self-tapped under the table top.


4

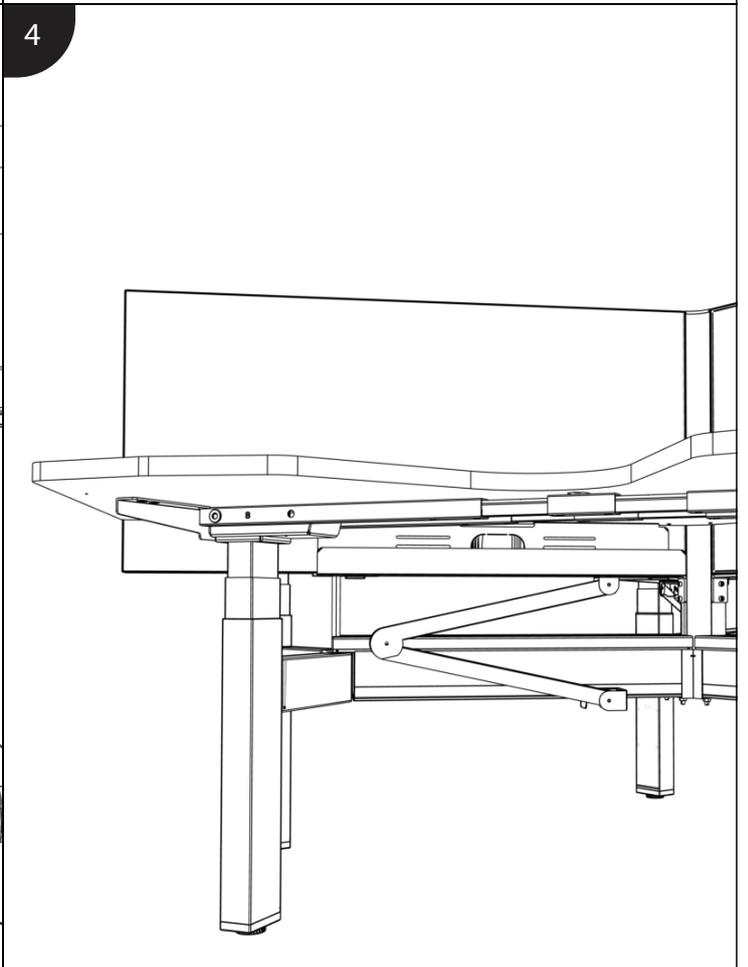


The installation of the Smart Gutter and elbow is completed.

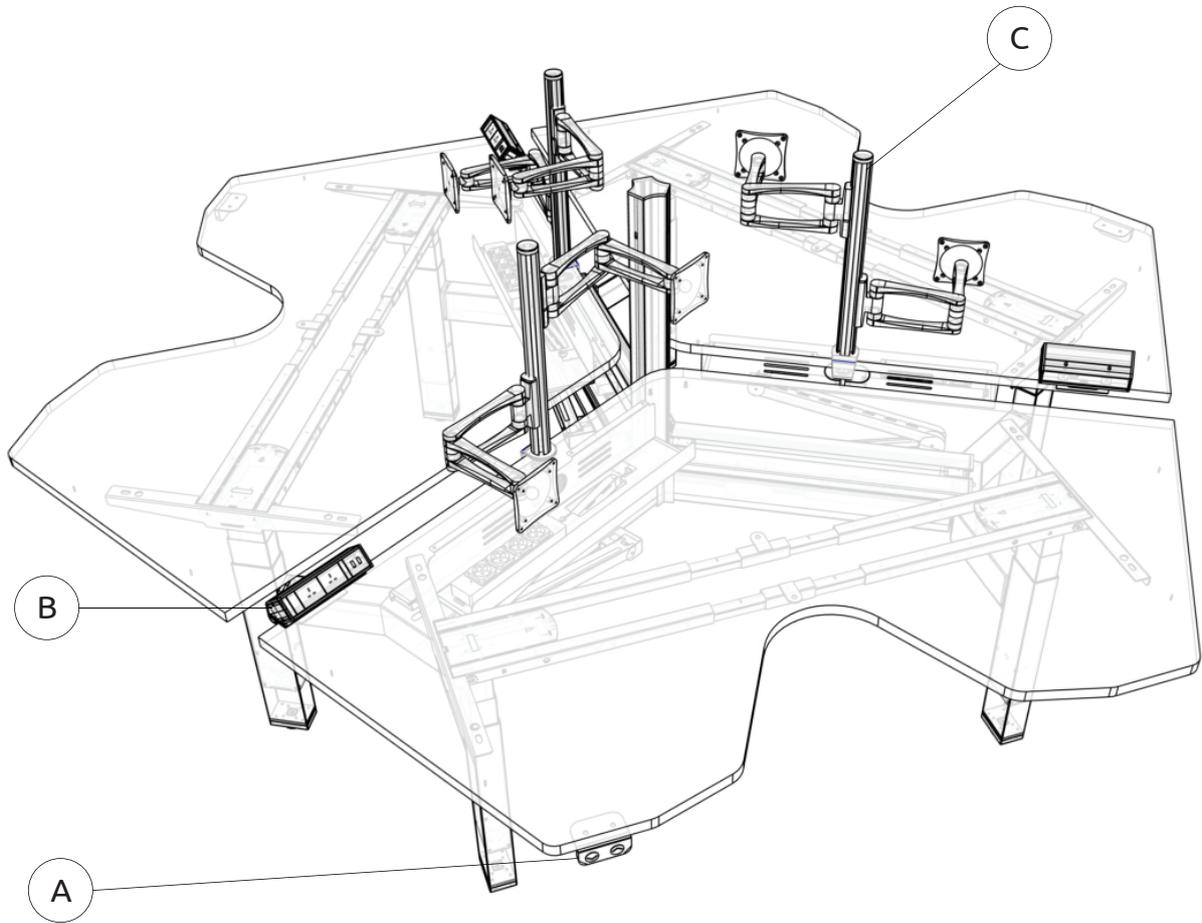


MAIN COMPONENTS

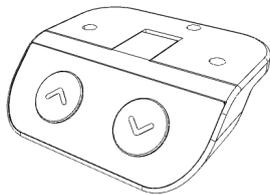

(A) Handset

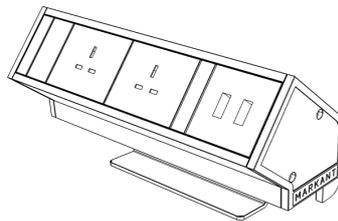

(B) Media Hub

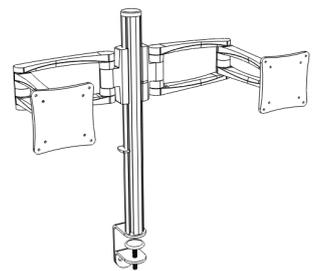

(C) Monitor Arm

TOOLS & MANPOWER




Manpower x1




Power Tool x1




Allen Key x5

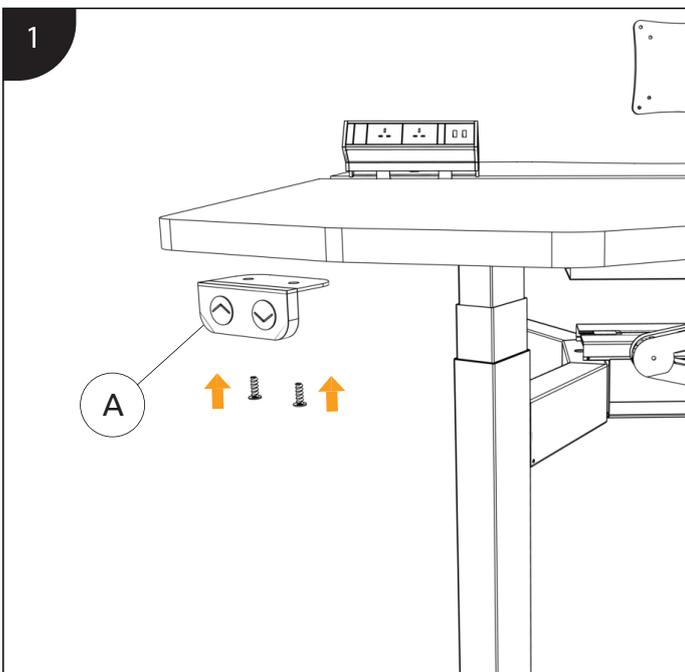


Attach (A) Handset below the table top using a screw.

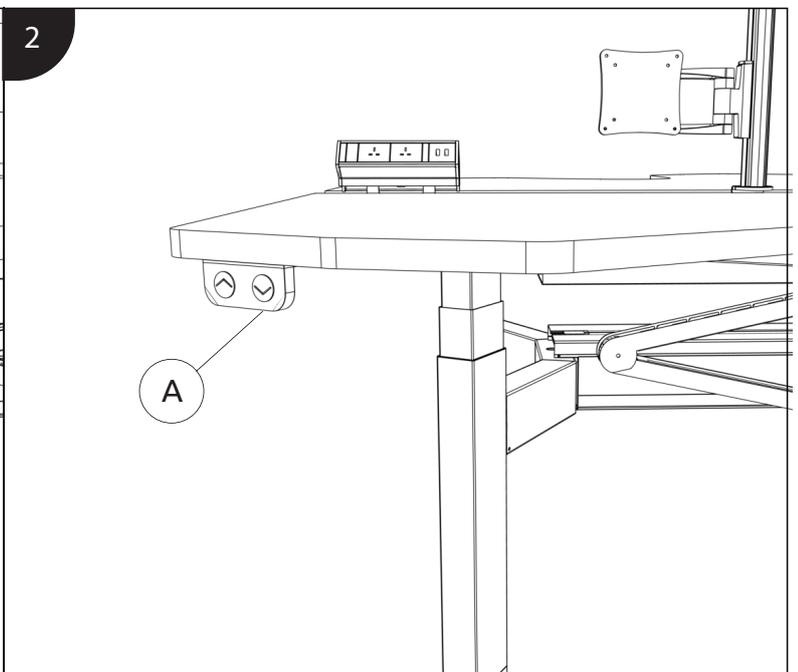


The installation for (A) Handset is completed.

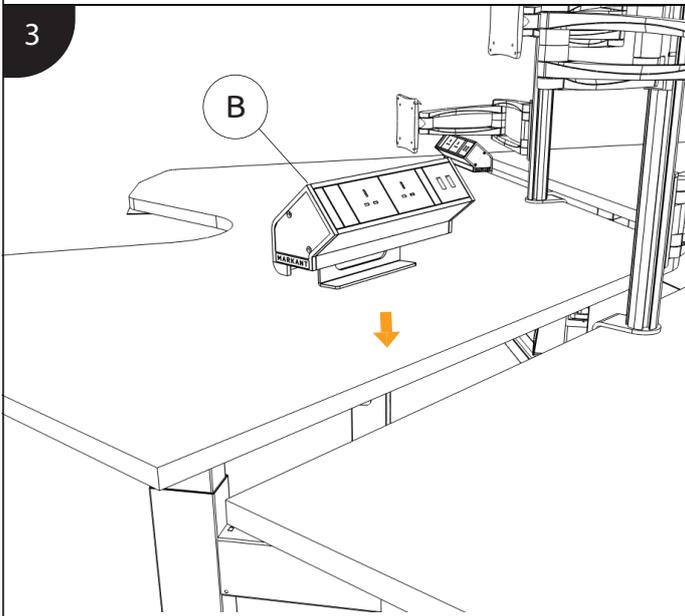


Attach (B) Media Hub on the table top.

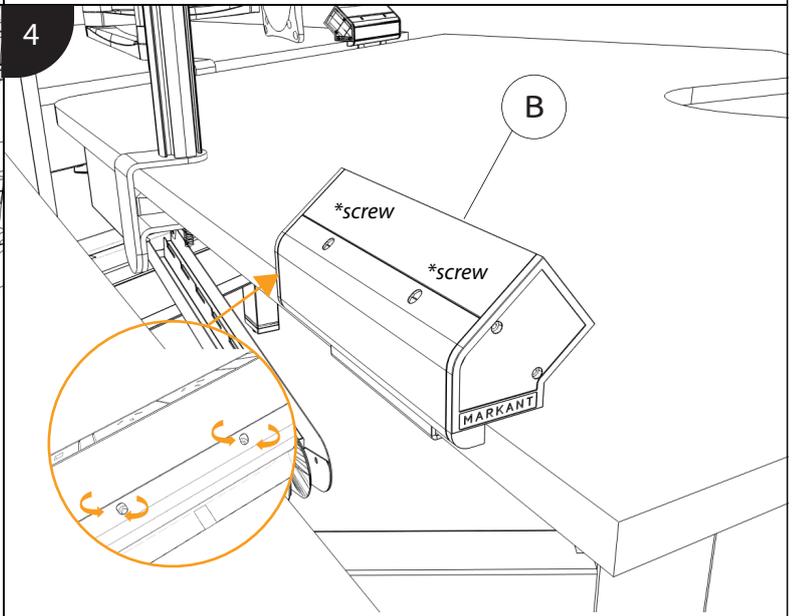


Tighten the screw on top of (B) Media Hub. The installation for Media Hub is completed.

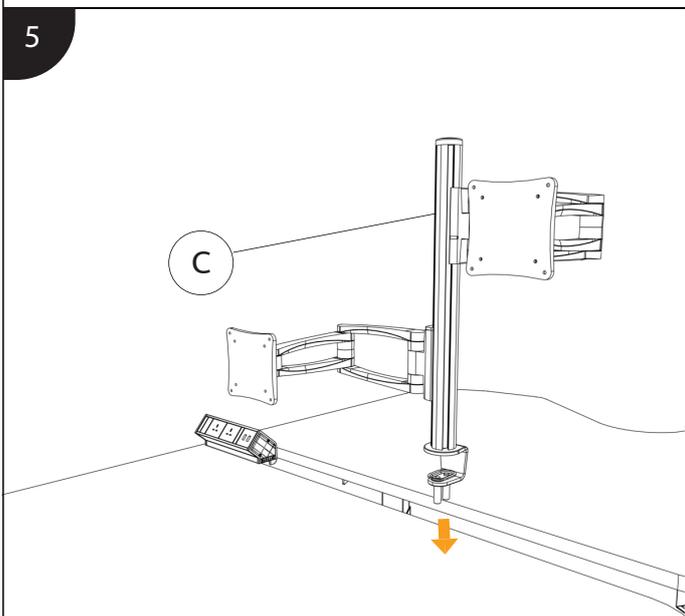


Attach (C) Monitor Arm on the table top.

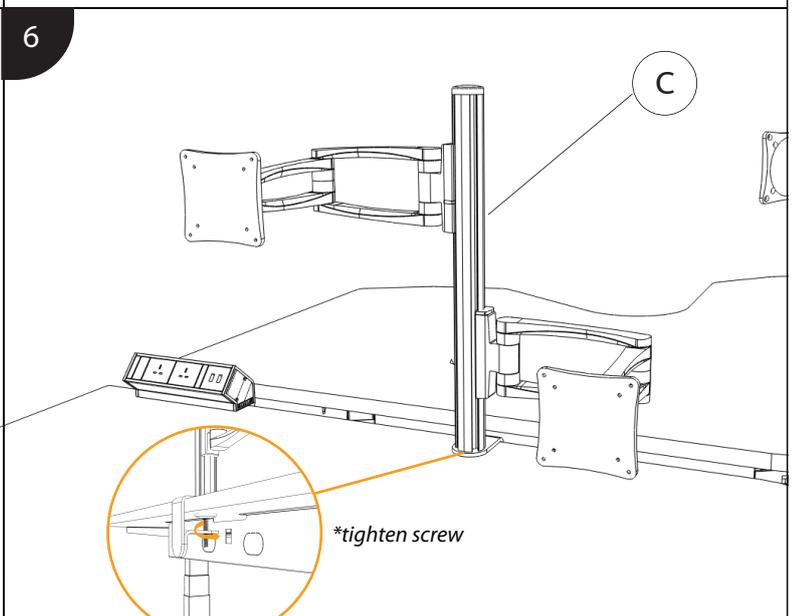


Tighten the screw at the bottom. The installation for (C) Monitor Arm is completed.

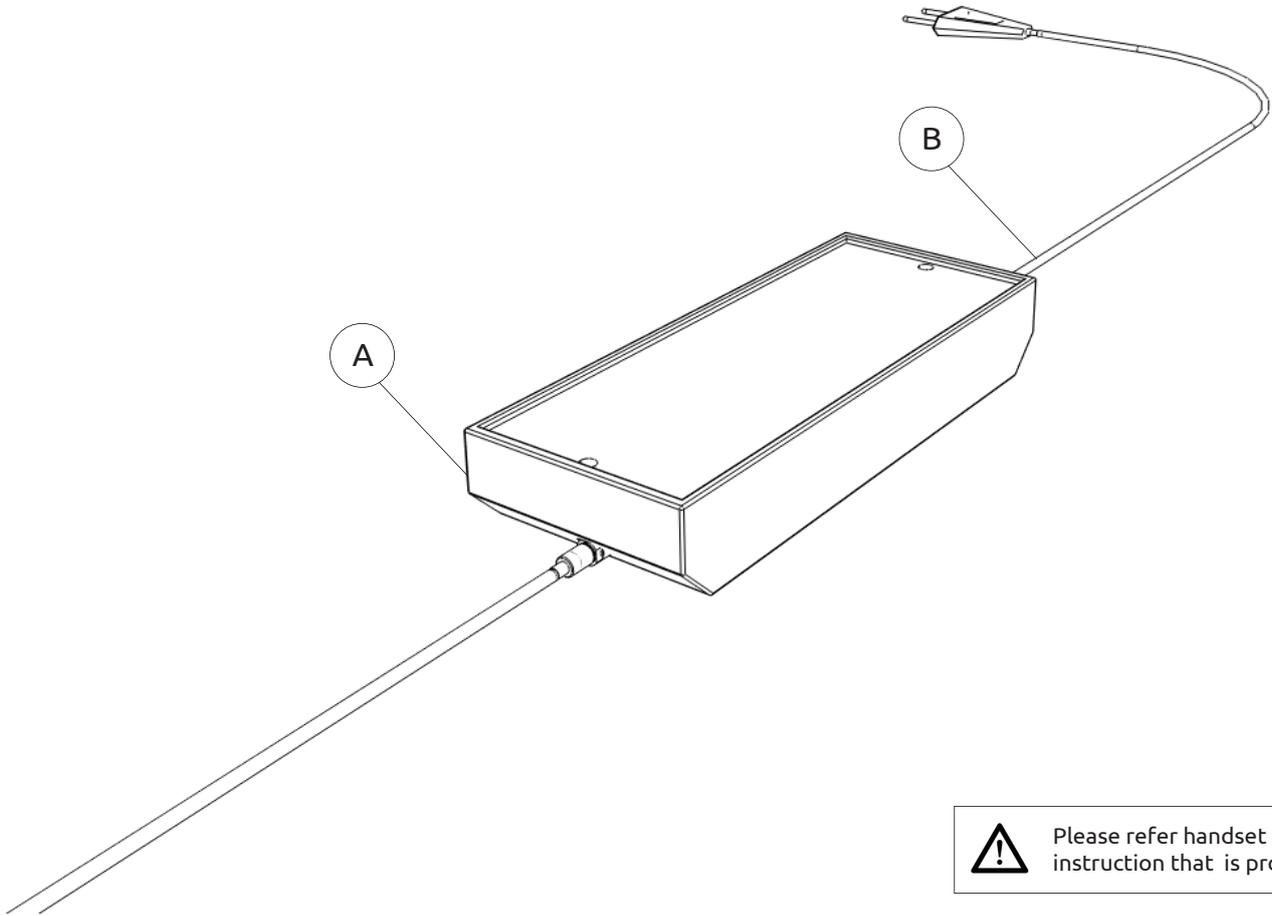


MAIN COMPONENTS

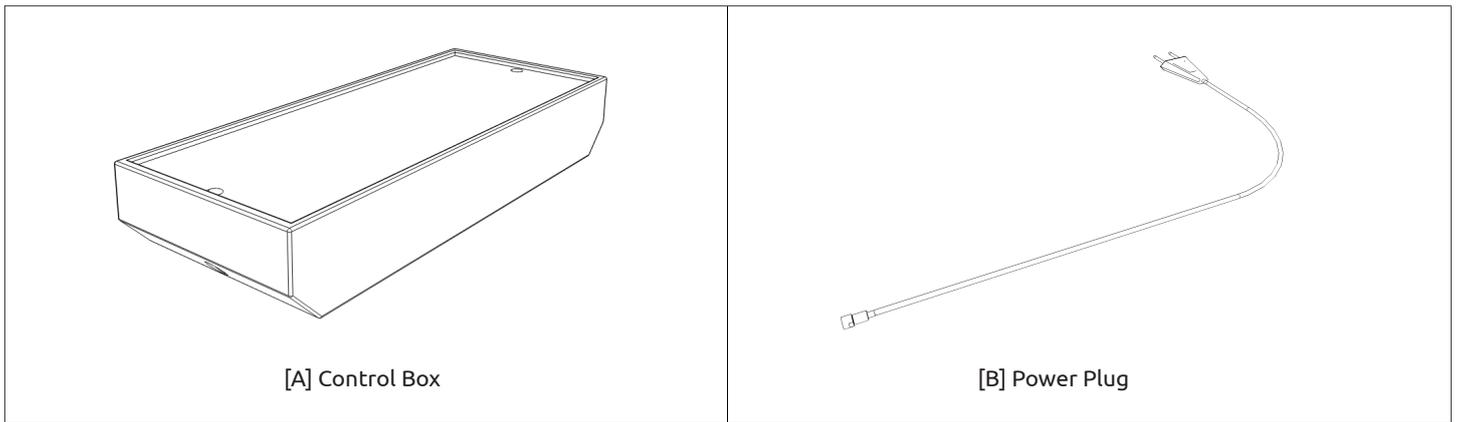

TOOLS & MANPOWER

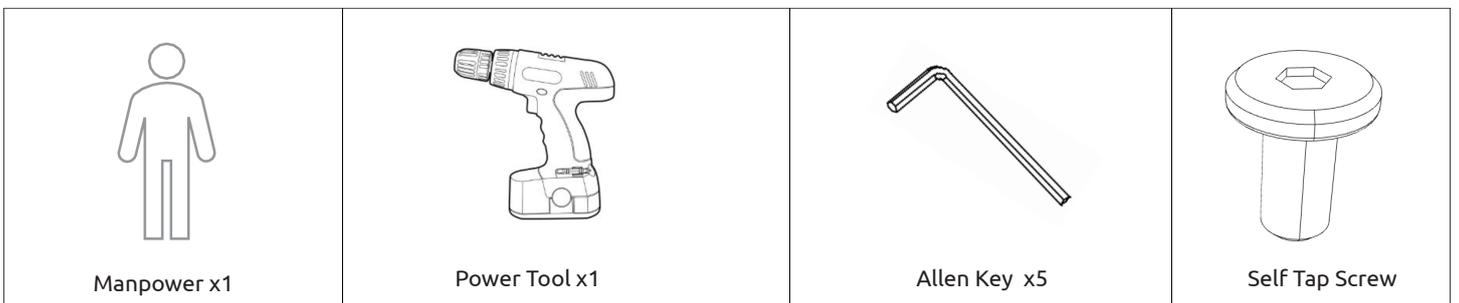

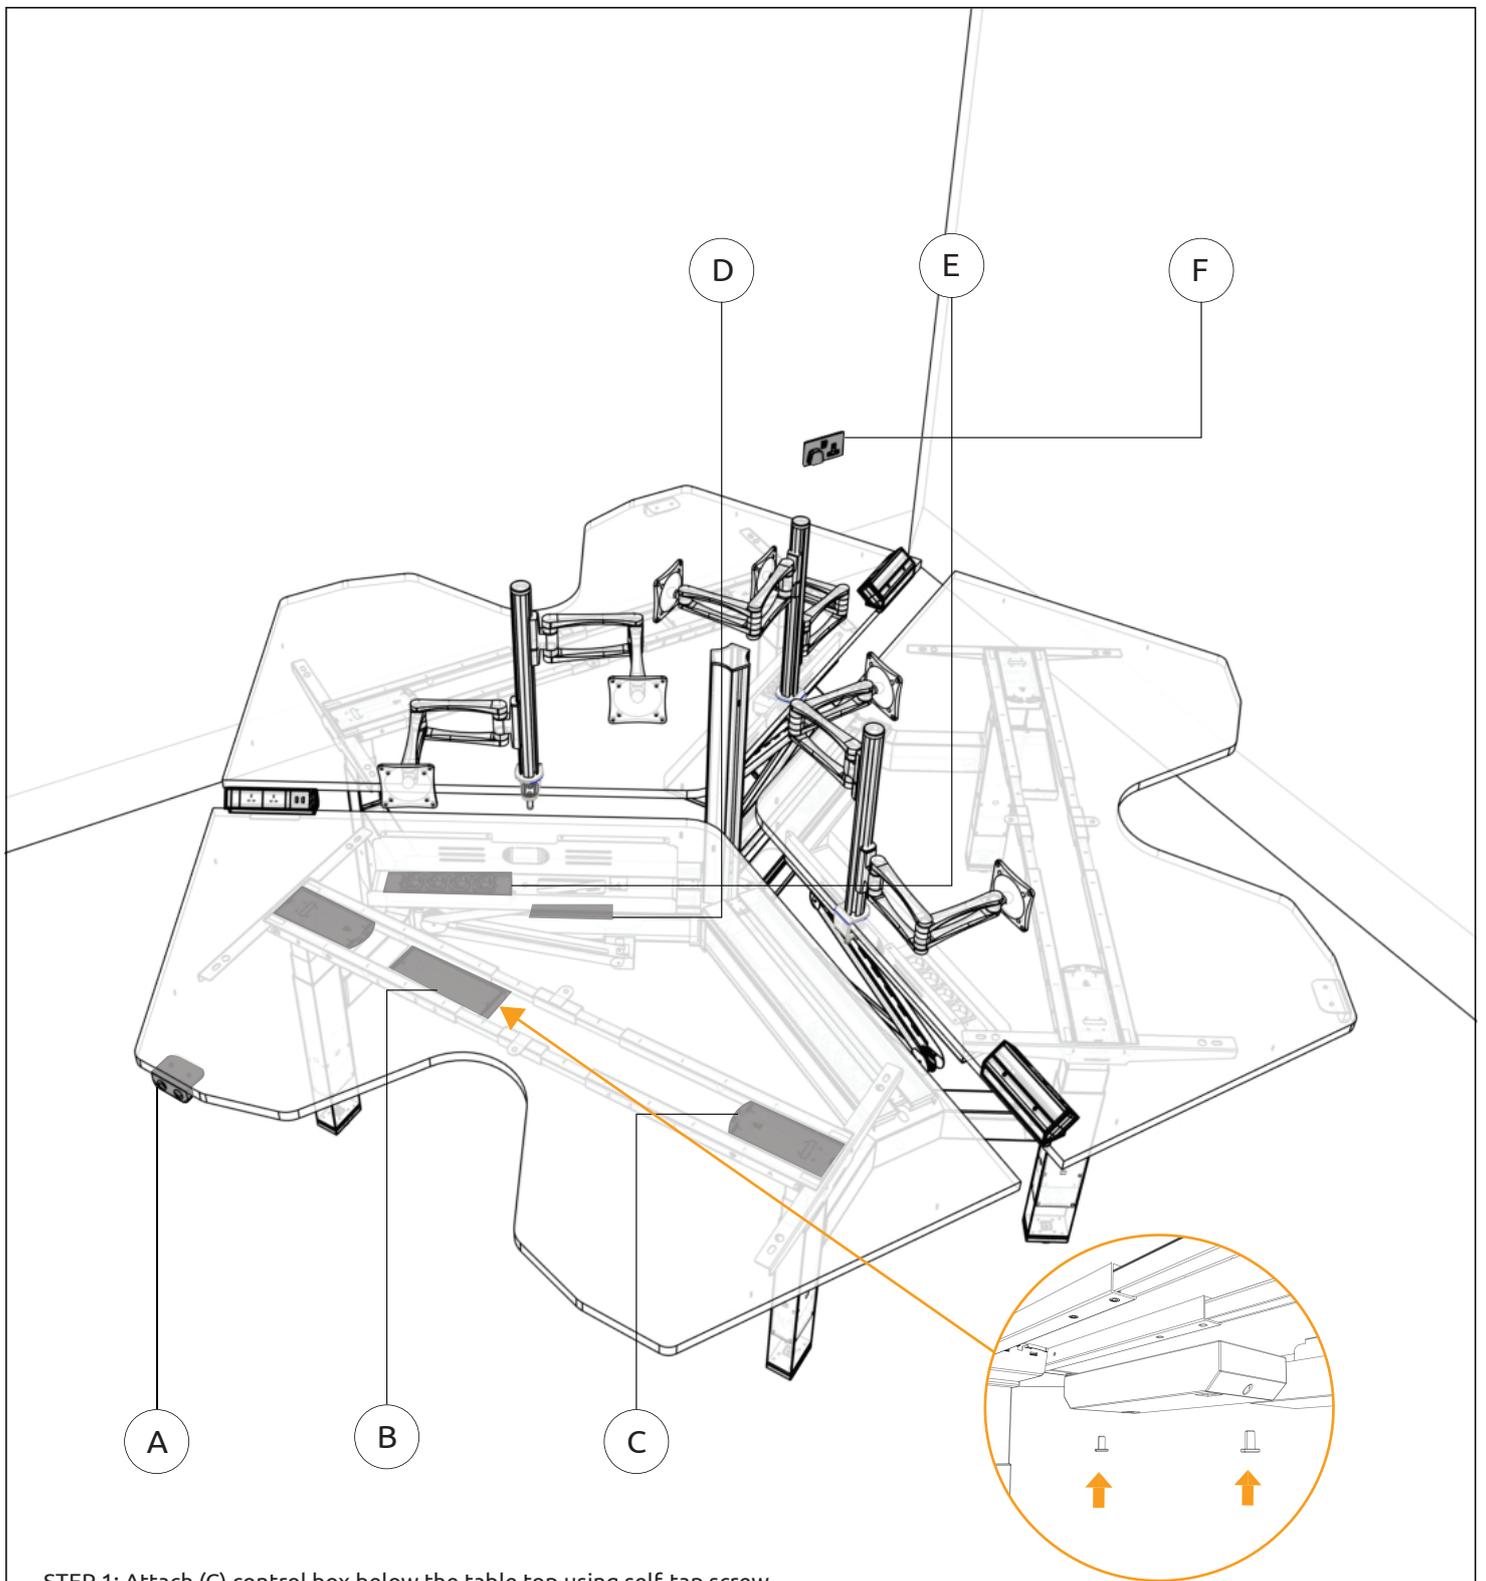

STEP 1: Attach (C) control box below the table top using self-tap screw.


STEP 2: Plug in the main plug to the power extension inside the trunk towards the power extension inside the front gutter.




(A) Handset




(B) Actuator

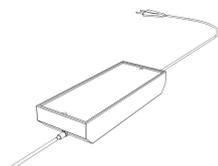


(C) Control Box

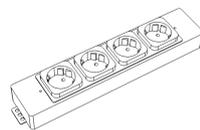

(D) Power Extension A

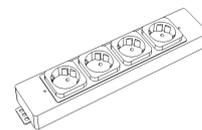


(E) Power Extension B

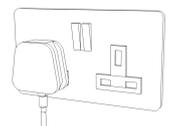

(F) Wall Socket

- 1** Cable line from (C) control box to the (A) handset.
- 2** Cable line from the (C) control box to the (B) actuator.
- 3** Cable line from the (D) power extension A inside the trunk to the (E) power extension B inside the front gutter.
- 4** Cable line from the (E) power extension B inside the front gutter to the Media Hub.
- 5** Cable line from the (E) power extension B to the monitor arm.
- 6** Cable line from the (E) power extension B to the C (control box).
- 7** Cable line from the (F) wall socket to the (D) power extension A.

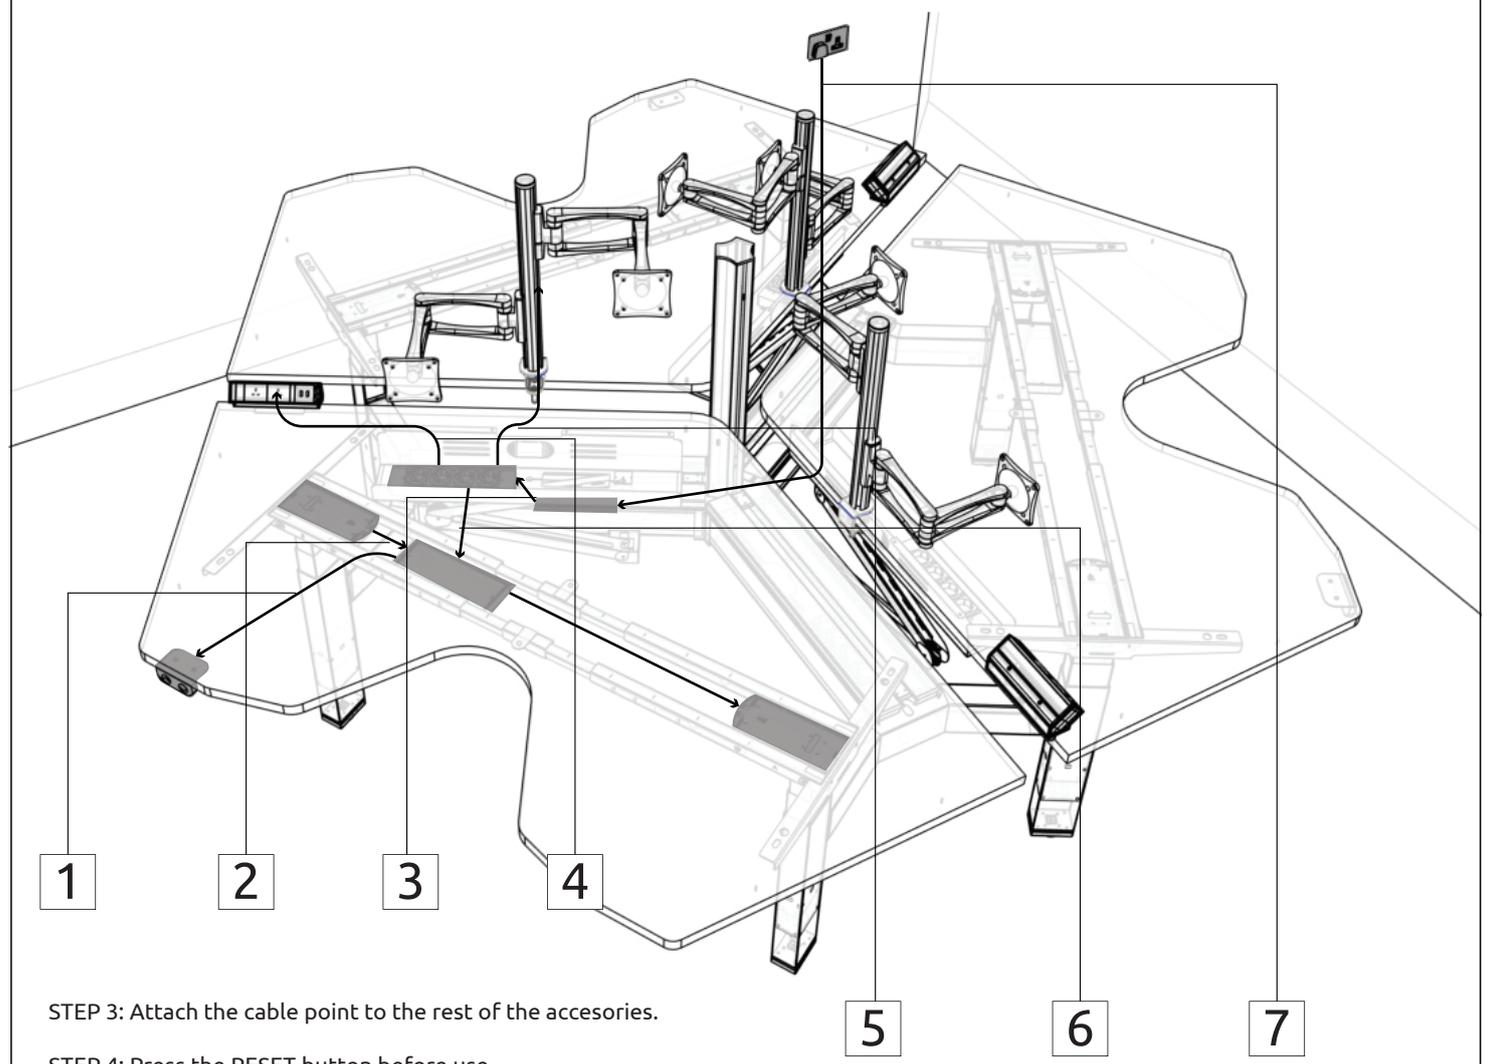

STEP 3: Attach the cable point to the rest of the accessories.

STEP 4: Press the RESET button before use.

